USATCORP.COM
Contact USATCORP.COM for more information or quantity pricing
1-888-550-8728

Sixnet
a red lion® business

RAM ™ 6000 Series Router
IndustrialPro™ Series Router
and
IP/V R-Series Router

Software User Guide

Version 1.10
Software Version 3.14 / 4.14

June 2013

RAM ™ 6000 Series Router
IndustrialPro™ Series Router
and
IP/V R-Series Router

Software User Guide

Version 1.10
Software Version 3.14 / 4.14

June 2013

Table of Contents

1 ACCESSING THE GRAPHICAL MANAGEMENT INTERFACE 4

1.1 CONNECT PC TO SIXNET ROUTER 4
1.2 SETUP PC IP ADDRESS 5
1.2.1 Open the Control Panel 5
1.2.2 Access Network and Internet Settings 7
1.2.3 Access Network Connection Settings 8
1.2.4 Access Local Area Connection 9
1.2.5 Open Properties 10
1.2.6 Access Internet Protocol Properties 11
1.3 ACCESS SIXNET WEBSERVER 15
1.3.1 Sixnet Router Login Instructions 17
1.3.2 SSH, Telnet, Serial RS-232 Connections to Sixnet Routers 18

2 CELLULAR CONNECTIONS 18

2.1 CELLULAR CARD CONFIGURATION 18
2.1.1 Cellular Carrier Selection 19
2.1.2 Set the User Name, Password, and APN 20
2.1.3 Enter Provisioning Information (if applicable) 20
2.2 VERIFY CELLULAR CONNECTIVITY 24
2.2.1 Cellular Connectivity Troubleshooting 25
2.2.2 Cellular Reception 25
2.3 VERIFYING IP CONNECTIVITY 26
2.3.1 Minimal Reception 28
2.3.2 Authentication Issues 29
2.3.3 Sixnet Technical Support 30

3 GATEWAY ADMINISTRATION UTILITY 31

3.1 GATEWAY ADMINISTRATION UTILITY (GAU) INTRODUCTION 31
3.1.1 Organization 31
3.1.2 Status 32
3.1.3 Admin 33
3.1.4 Networking 34
3.1.5 Services 35
3.1.6 Automation 35
3.1.7 Advanced 36
3.2 STATUS TAB 37
3.2.1 ARP Cache 38
3.2.2 Feature Codes 39
3.2.3 Firewall Rules 40
3.2.4 Interface Information 41
3.2.5 Routing Information 45
3.2.6 Socket Statuses 50
3.2.7 System Processes 54
3.2.8 System Services 56
3.2.9 System Information 58
3.2.10 Syslog 60
3.2.11 CSQ History 62
3.2.12 Update History 63

3.2.13 Diagnostic Tools 64
3.3 Admin Tab 76
3.3.1 Access Settings 77
3.3.2 Certificate Manager 79
3.3.3 Factory Defaults 80
3.3.4 Firmware Update 82
3.3.5 Gather Configs 84
3.3.6 Gather Stats 87
3.3.7 Manage System Configuration 90
3.3.8 Package Installation 97
3.3.9 Reboot 99
3.3.10 System Time 100
3.4 Networking Tab 103
3.4.1 Cellular Connection 103
3.4.2 DNS Settings 117
3.4.3 Network Interfaces 118
3.4.4 Firewall 126
3.4.5 PPP Dial Backup 154
3.4.6 PPP over Ethernet 157
3.4.7 Static Routes 159
3.4.8 TCP Global Settings 163
3.4.9 Tunnel (VPN) Settings 164
3.5 Services Tab 182
3.5.1 DHCP Services 182
3.5.2 Dynamic DNS 188
3.5.3 SN Proxy 190
3.5.4 SixView Manager 192
3.5.5 SSH Server 195
3.5.6 SSL Connections 197
3.5.7 System Logging 209
3.5.8 TELNET Server 210
3.5.9 Ping Alive 211
3.5.10 SNMP Agent 212
3.5.11 Serial IP 214
3.6 Automation Tab 224
3.6.1 Automation 224
3.6.2 Local Station 226
3.6.3 Serial Port 226
3.6.4 Modbus 229
3.6.5 DNP3 239
3.6.6 I/O Settings 253
3.7 Advanced Tab 258
3.7.1 IP Fallback 258
3.7.2 IP Transparency 261
3.7.3 Out-of-Band Management 270
3.7.4 Virtual Routing Redundancy Protocol (VRRP) 273
3.7.5 Expert Mode 275
3.7.6 GWLNX 279
5 SOFTWARE LICENSING TERMS AND CONDITIONS 301
FCC Compliance Statement 301

INFORMATION TO THE USER 301
6 WARRANTY 302
7 APPENDICES 303

1 Accessing the Graphical Management Interface

1.1 Connect PC to Sixnet Router

Connect a CAT-5 or CAT-6 Ethernet cable between the local PC and the Sixnet router's Ethernet Port(s)

NOTE: If the Ethernet port's Green light is lit, this indicates that the connection is running at 100Mb speed. If the Ethernet port's Green light is not lit, this indicates that the connection is running at 10Mb speed. The Yellow light

indicates the "link" status of the connection.
Yellow steady = Link established. Yellow flickering = Data packets are being transferred.

1.2 Setup PC IP Address

1.2.1 Open the Control Panel

- Click on Start and browse the "Control Panel" menu item

XP

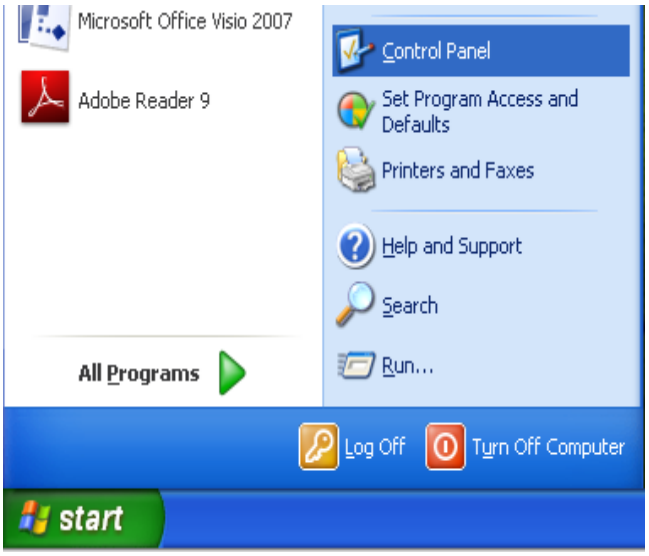

Vista/Windows 7

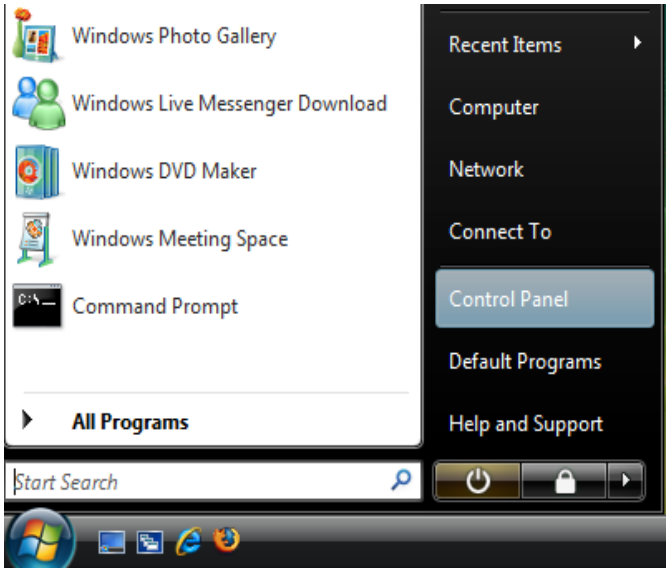

The control panels should look similar to the following:

XP

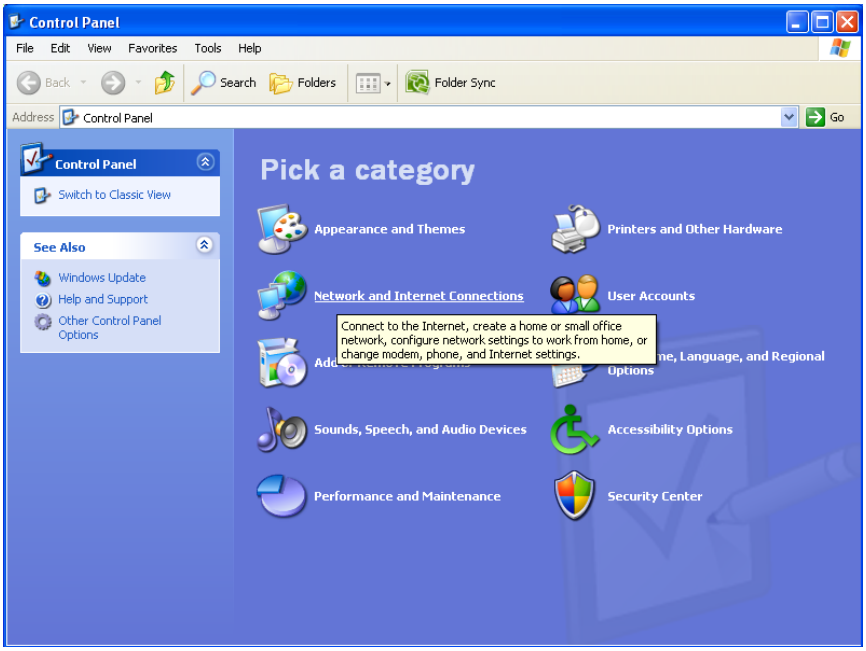
Control Panel
File Edit View Favorites Tools Help
Back Search Folders Folder Sync
Address Control Panel Go
Control Panel
Switch to Classic View
See Also
Windows Update
Help and Support
Other Control Panel Options
Pick a category
Appearance and Themes
Printers and Other Hardware
Network and Internet Connections
User Accounts
Connect to the Internet, create a home or small office network, configure network settings to work from home, or change modem, phone, and Internet settings.
Options
Sounds, Speech, and Audio Devices
Accessibility Options
Performance and Maintenance
Security Center

Vista/Windows 7

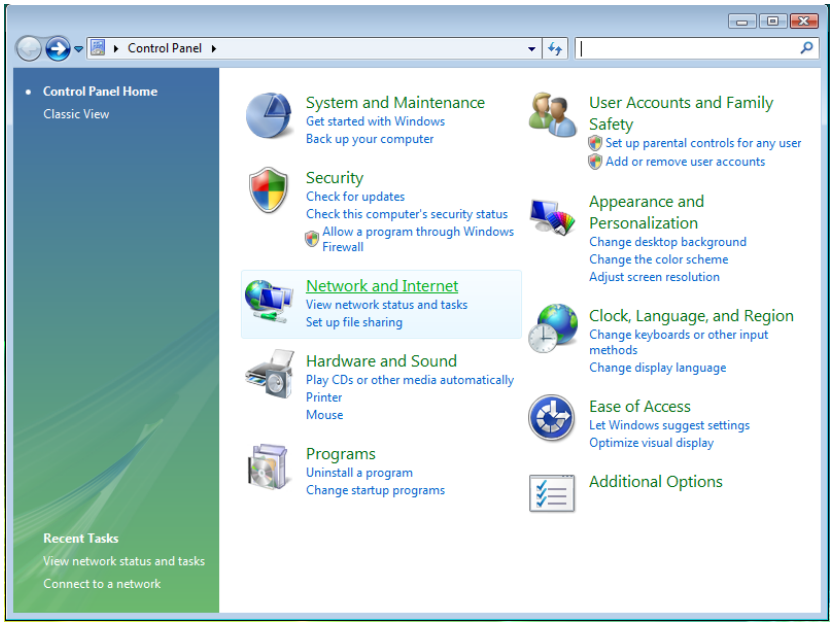

1.2.2 Access Network and Internet Settings

- Click on the link to access network and Internet settings
  - XP – "Network and Internet Connections"
  - Vista/Windows 7 – "Network and Internet"

The displays should be similar to the following:

XP

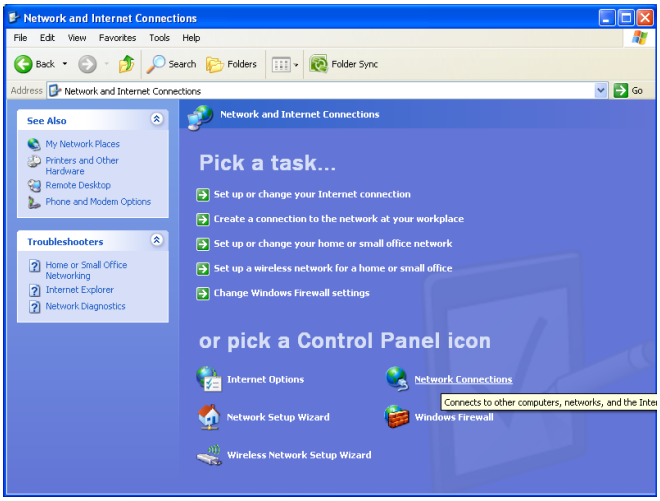
Network and Internet Connections
File Edit View Favorites Tools Help
Back Search Folders Folder Sync
Address Network and Internet Connections
Go
See Also
My Network Places
Printers and Other Hardware
Remote Desktop
Phone and Modem Options
Troubleshooters
Home or Small Office Networking
Internet Explorer
Network Diagnostics
Network and Internet Connections
Pick a task...
Set up or change your Internet connection
Create a connection to the network at your workplace
Set up or change your home or small office network
Set up a wireless network for a home or small office
Change Windows Firewall settings
or pick a Control Panel icon
Internet Options
Network Connections
Network Setup Wizard
Windows Firewall
Wireless Network Setup Wizard

Vista/Windows 7

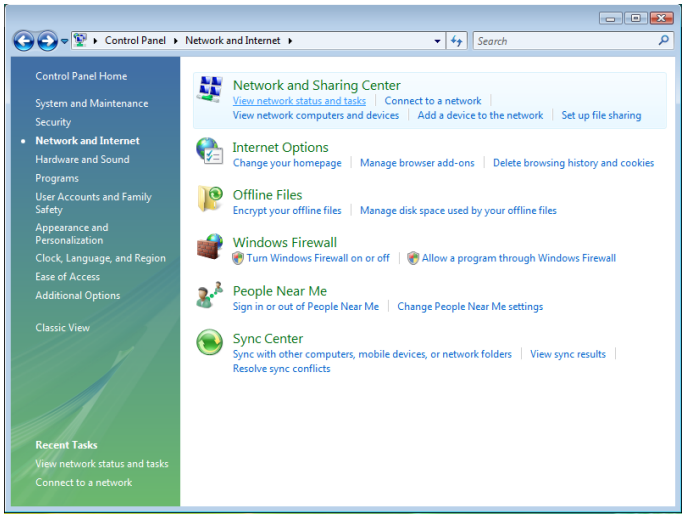
Control Panel ▸ Network and Internet ▸
Search
Control Panel Home
System and Maintenance
Security
Network and Internet
Hardware and Sound
Programs
User Accounts and Family Safety
Appearance and Personalization
Clock, Language, and Region
Ease of Access
Additional Options
Classic View
Recent Tasks
View network status and tasks
Connect to a network
Network and Sharing Center
View network status and tasks | Connect to a network
View network computers and devices | Add a device to the network | Set up file sharing
Internet Options
Change your homepage | Manage browser add-ons | Delete browsing history and cookies
Offline Files
Encrypt your offline files | Manage disk space used by your offline files
Windows Firewall
Turn Windows Firewall on or off | Allow a program through Windows Firewall
People Near Me
Sign in or out of People Near Me | Change People Near Me settings
Sync Center
Sync with other computers, mobile devices, or network folders | View sync results
Resolve sync conflicts

1.2.3 Access Network Connection Settings

- Click on the link to access network connection settings
  - XP – "Network Connections"
  - Vista/Windows 7 – "Network and Sharing Center"

The display should look similar to the following:

XP

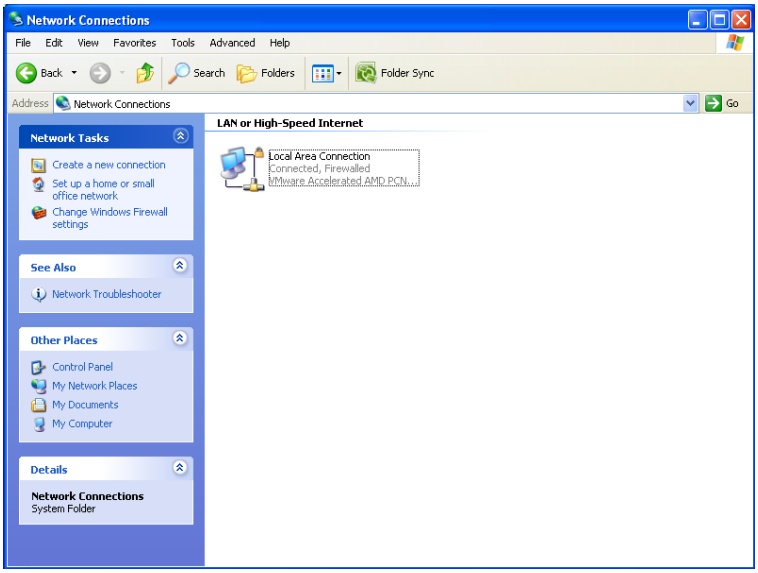

Vista/Windows 7

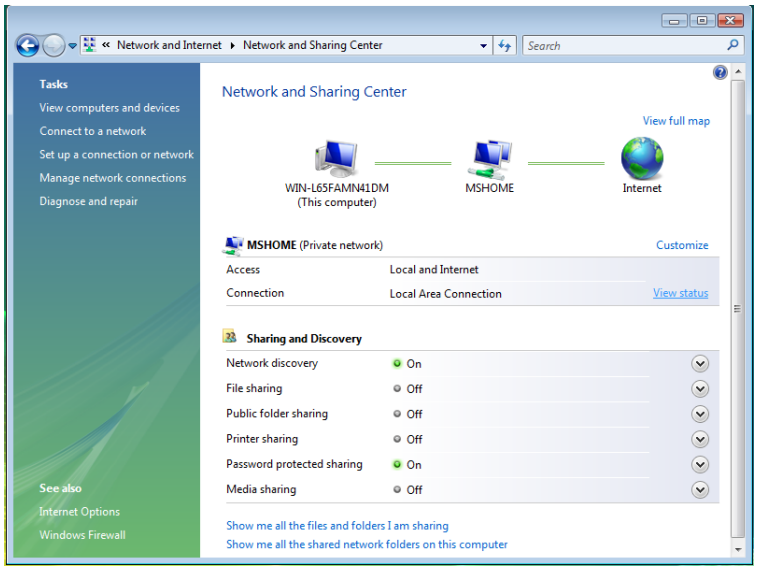

1.2.4 Access Local Area Connection

- Click on the link to access the local area connection
  - XP – "Local Area Connection" icon
  - Vista/Windows 7 – "View Status" next to Local Area Connection

The display should look similar to the following:

XP

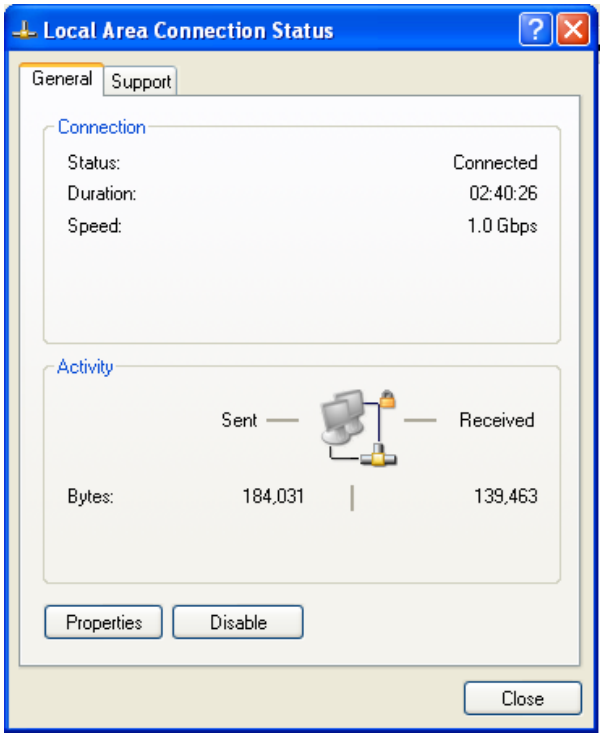

Vista/Windows 7

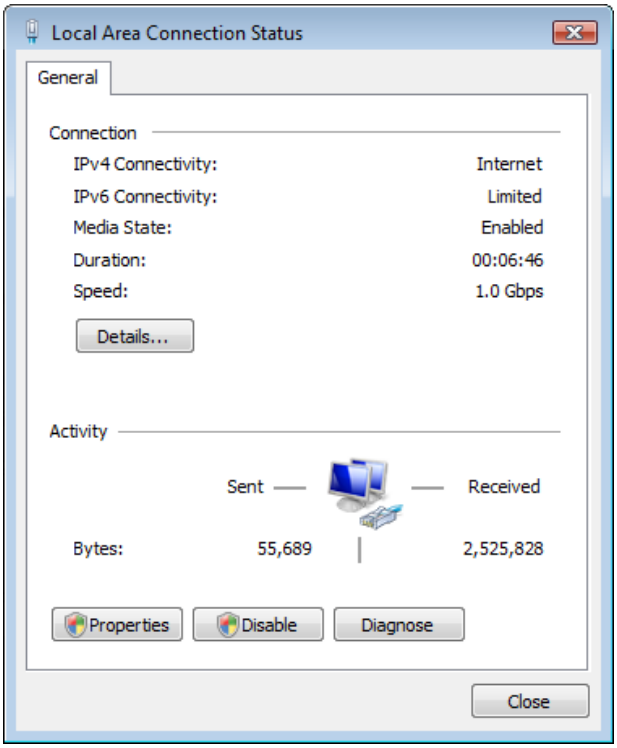

1.2.5 Open Properties

- Click on the “Properties” button (Vista/Windows 7 will display a popup window asking to confirm the operation)
- Click on the “Continue” button

The display should look similar to the following:

XP

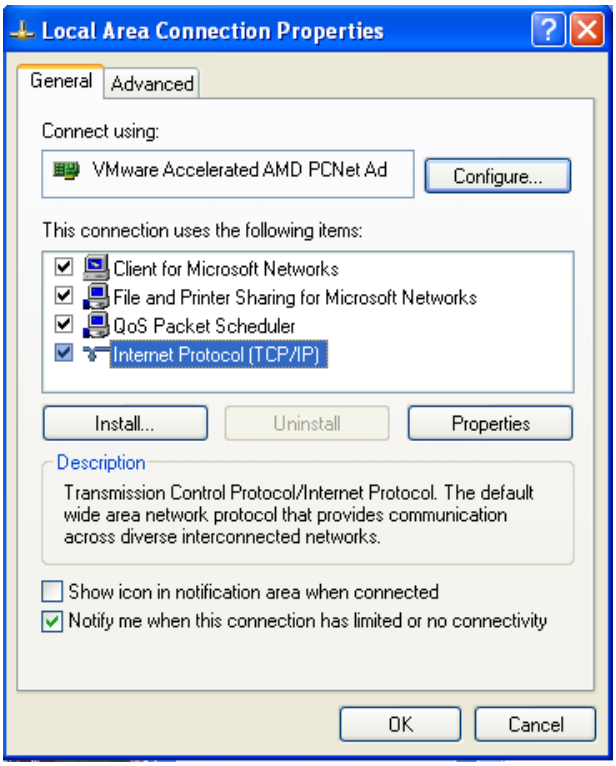

Vista/Windows 7

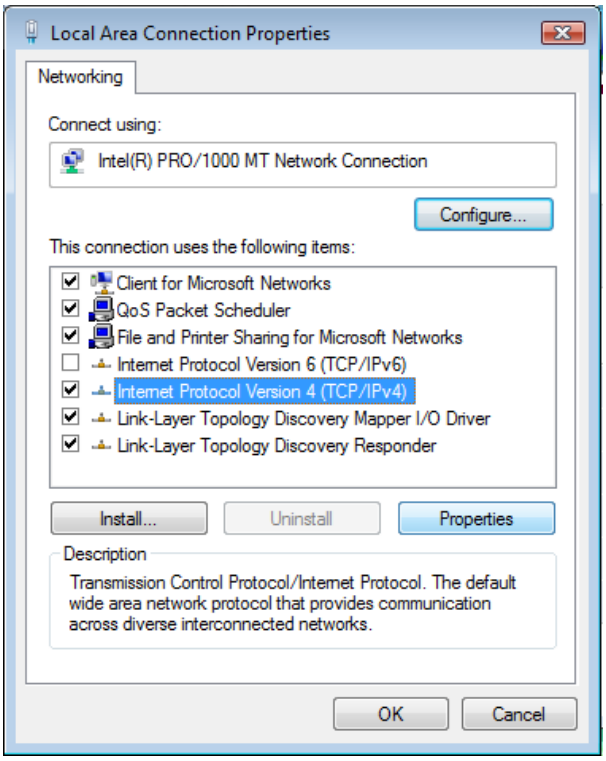

1.2.6 Access Internet Protocol Properties

- Click on the Internet Protocol item to highlight
  - XP – "Internet Protocol (TCP/IP)"
  - Vista/Windows 7 – "Internet Protocol Version 4 (TCP/IPv4)"
- Click on the "Properties" button

The display should look similar to the following:

XP

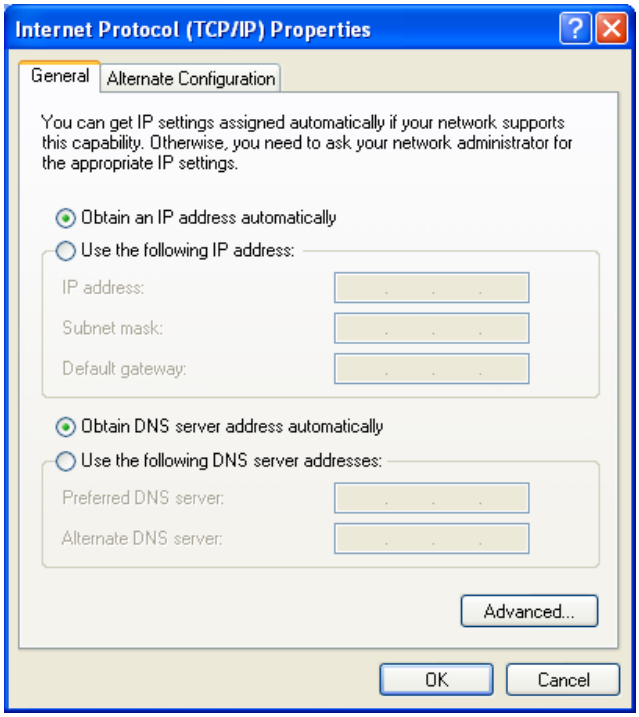
Internet Protocol (TCP/IP) Properties
General
Alternate Configuration
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address:
Subnet mask:
Default gateway:
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Advanced...
OK
Cancel

Vista/Windows 7

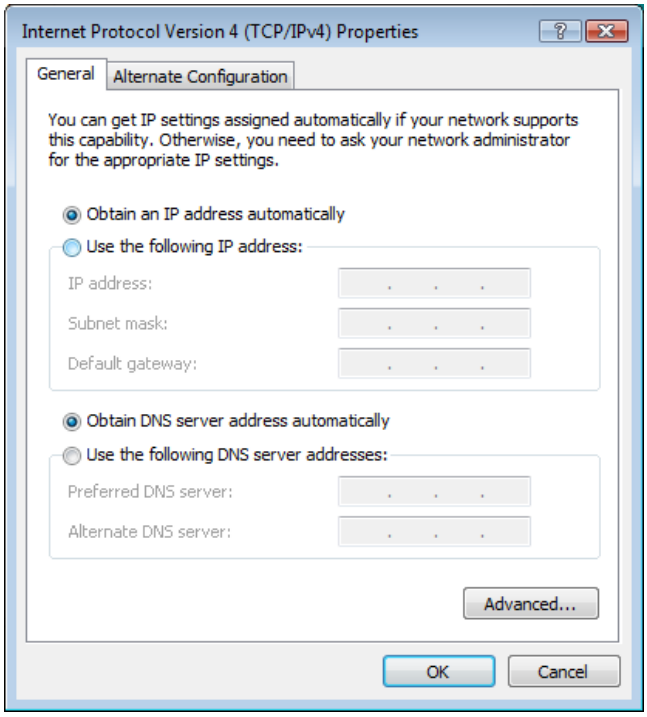
Internet Protocol Version 4 (TCP/IPv4) Properties
General
Alternate Configuration
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address:
Subnet mask:
Default gateway:
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Advanced...
OK
Cancel

METHOD 1: PC to (WAN /ETH0 on R3000/M1000/A2000 Series), (Ethernet on SN-6000)

- Select “Use the following IP address” and fill in the blank fields with the information below:
    - *IP address:* 192.168.0.2
    - *Subnet mask:* 255.255.255.0
    - *Default gateway:* 192.168.0.1
    - *Preferred DNS:* 192.168.0.1

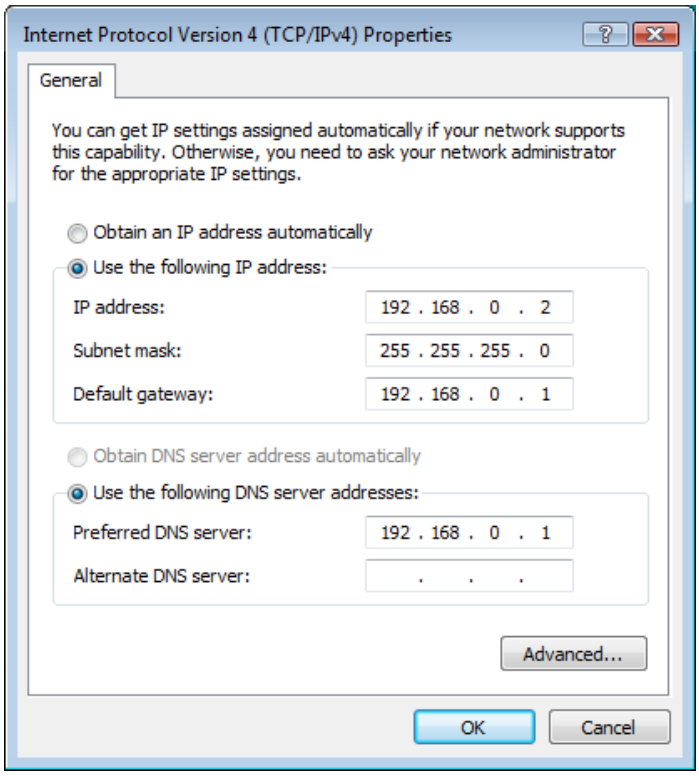
Internet Protocol Version 4 (TCP/IPv4) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address: 192 . 168 . 0 . 2
Subnet mask: 255 . 255 . 255 . 0
Default gateway: 192 . 168 . 0 . 1
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server: 192 . 168 . 0 . 1
Alternate DNS server: . . .
Advanced...
OK
Cancel

- Click “OK”
- The previous screen will appear
- Click “OK”

METHOD 2: PC to LAN (ETH1) (R3000 Series only)

- Select "Use the following IP address" and fill in the blank fields with the information below:

- *IP address:* 192.168.1.2
- *Subnet mask:* 255.255.255.0
- *Default gateway:* 192.168.1.1
- *Preferred DNS:* 192.168.1.1

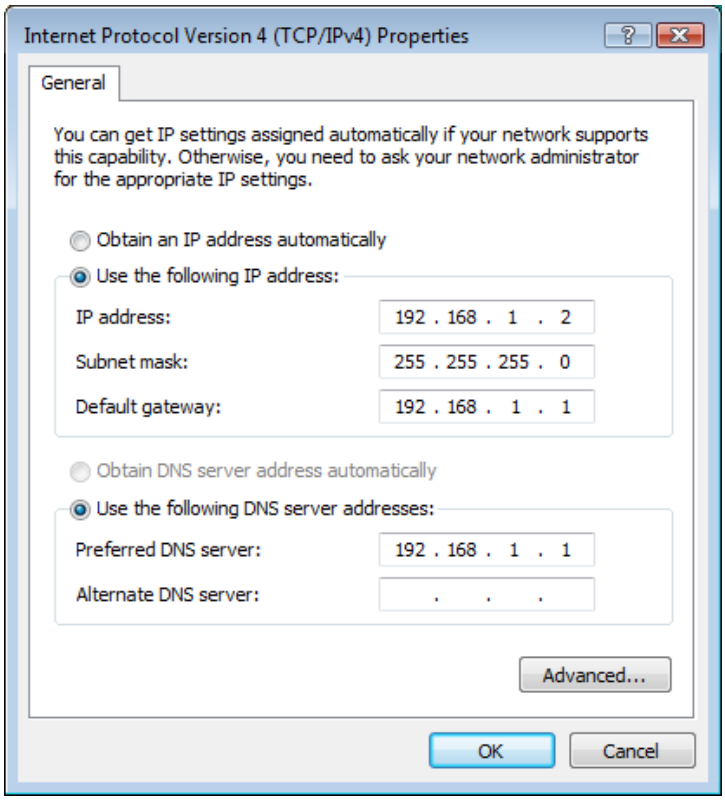
Internet Protocol Version 4 (TCP/IPv4) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address: 192 . 168 . 1 . 2
Subnet mask: 255 . 255 . 255 . 0
Default gateway: 192 . 168 . 1 . 1
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server: 192 . 168 . 1 . 1
Alternate DNS server:
Advanced...
OK
Cancel

- Click "OK"
- The previous screen will appear
- Click "OK"

Verify that you are connected to the Sixnet router.

- Open a Command Prompt window on your laptop
    - **XP** → Start → Run, type in **cmd** and **<Enter>**

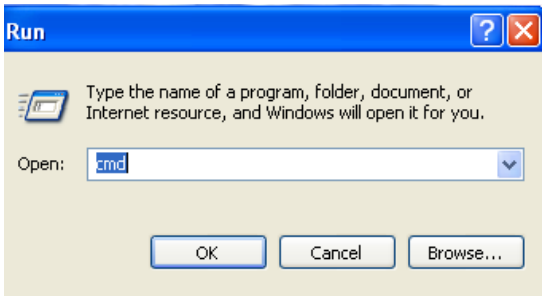

    - **Vista/Windows 7** – Start → Search window just above the Start, type in **cmd**, wait for Vista/Windows 7 to locate the program, click on the **cmd** program it finds

Verify connectivity to the router by running a "ping" to the IP Address of the Ethernet port you are connected to.

METHOD 1: PC to (WAN /ETH0 on R3000/M1000/A2000 Series), (Ethernet on SN-6000)
Type in **ping 192.168.0.1<ENTER>**

The display should look similar to the following:

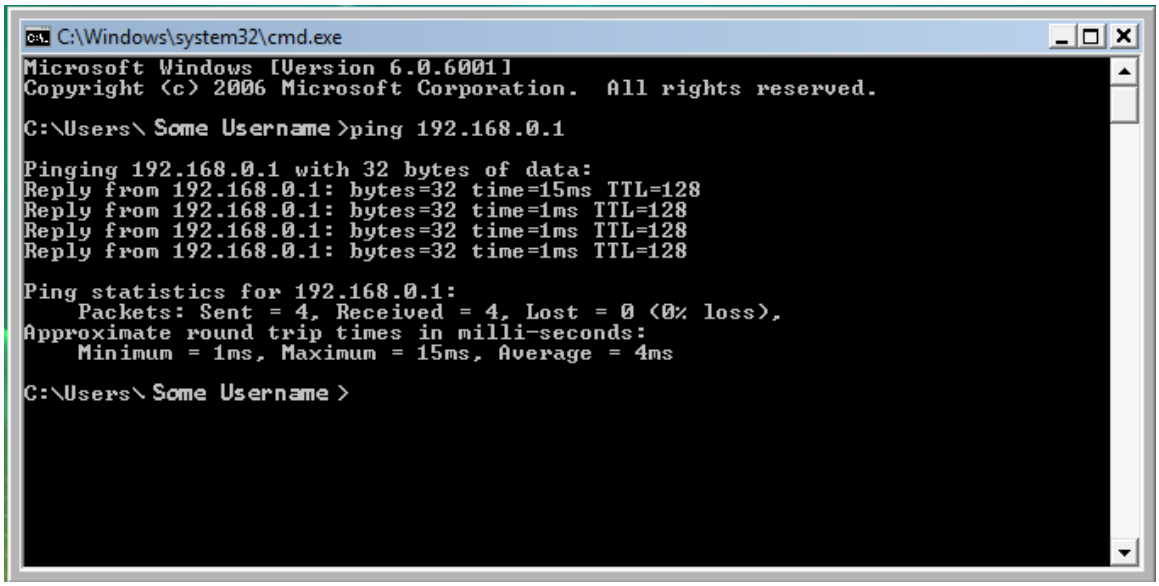
C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.0.6001]
Copyright (c) 2006 Microsoft Corporation. All rights reserved.
C:\Users\ Some Username >ping 192.168.0.1
Pinging 192.168.0.1 with 32 bytes of data:
Reply from 192.168.0.1: bytes=32 time=15ms TTL=128
Reply from 192.168.0.1: bytes=32 time=1ms TTL=128
Reply from 192.168.0.1: bytes=32 time=1ms TTL=128
Reply from 192.168.0.1: bytes=32 time=1ms TTL=128
Ping statistics for 192.168.0.1:
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
Minimum = 1ms, Maximum = 15ms, Average = 4ms
C:\Users\ Some Username >

METHOD 2: PC to ETH1 (LAN) (R3000 Series only)
Type in **ping 192.168.1.1<ENTER>**

The display should look similar to the following:

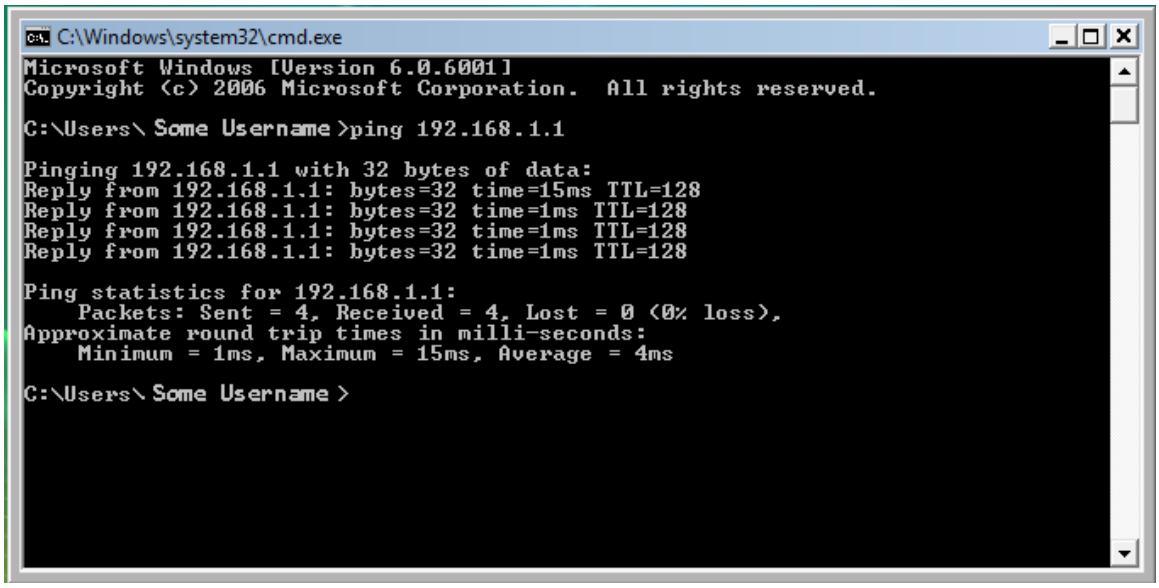
C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.0.6001]
Copyright (c) 2006 Microsoft Corporation. All rights reserved.
C:\Users\ Some Username >ping 192.168.1.1
Pinging 192.168.1.1 with 32 bytes of data:
Reply from 192.168.1.1: bytes=32 time=15ms TTL=128
Reply from 192.168.1.1: bytes=32 time=1ms TTL=128
Reply from 192.168.1.1: bytes=32 time=1ms TTL=128
Reply from 192.168.1.1: bytes=32 time=1ms TTL=128
Ping statistics for 192.168.1.1:
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
Minimum = 1ms, Maximum = 15ms, Average = 4ms
C:\Users\ Some Username >

This shows the connection is up and functioning.

1.3 Access Sixnet Webserver

- Open a web browser and enter the following in the address bar:

METHOD 1 (WAN/eth0): http://192.168.0.1:10000/
METHOD 2 (LAN/eth1): http://192.168.1.1:10000/

- You will receive a login pop-up screen.

XP

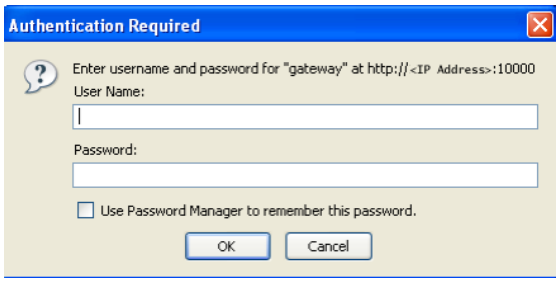

Vista/Windows 7

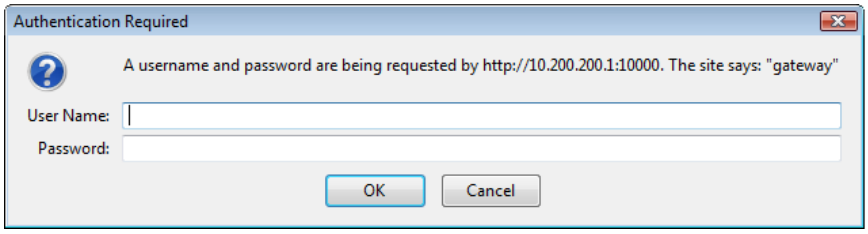

1.3.1 Sixnet Router Login Instructions

- User Name enter: **admin** *(lowercase letters)*
- For Password enter: the LAST **six digits of serial number** on product label *(enter letters as lowercase)*

Upon successfully logging in you will be presented with the following screen:

NOTE: The following information can be used for all series of routers, even if screen shots indicate other models. Some models may have reduced options.

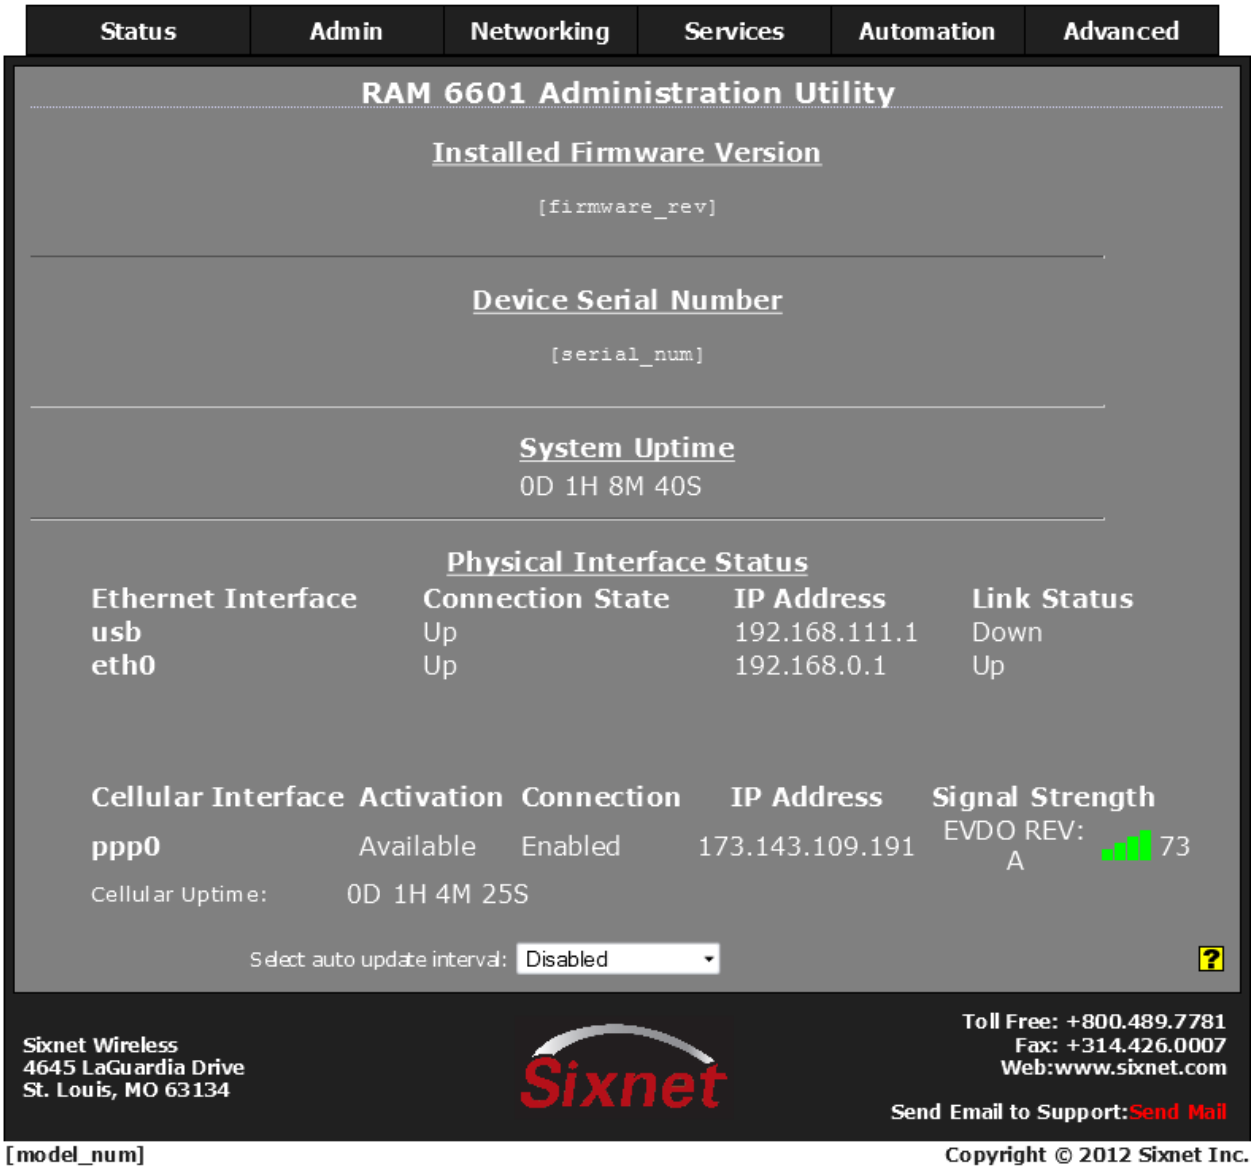

At this point, you are connected to the Sixnet router and can configure it to meet your needs.

If the ppp0 interface does not show an IP address, this could indicate that the cellular air card (R3100/R1100) or internal SIM/Module has not been properly activated. Low or invalid signal strength may also contribute to the issue. Please contact your service provider to ensure proper activation. You may need to enter provisioning information in the Networking→Cellular→Provisioning screen. Consult Section 2.1 in this document for more information.

1.3.2 SSH, Telnet, Serial RS-232 Connections to Sixnet Routers

For alternative connections to the Sixnet router, please contact Sixnet Technical Support Group for additional related documentation.

2 Cellular Connections

2.1 Cellular Card Configuration

Cellular connectivity can be obtained through the use of an internal (embedded) RF Module, or on the R-series with the USB option you may insert a USB Aircard / dongle.

Your Sixnet router is able to detect many USB cellular cards, but some must still be configured manually. If you are using a GPRS, EDGE, or HSDPA card that requires the use of a userid, password, and APN, configure your card manually, as covered in the next section.

If you are using one of the newer 1xRTT/1xEVDO/1xEVDO rev A, USB based cards, your Sixnet router has probably automatically detected, configured, and activated your cellular connection for you, so you can skip this section and proceed to the next section to verify your cellular connectivity.

External Aircards from vendors other than Sierra Wireless and Novatel, may need to be activated in a laptop first. This does not apply to SIM based Aircards. A list of supported external Aircards can be found at:

http://sixnet.com/content/aircard-86.cfm

Embedded modules for CDMA (Sprint / Verizon) should activate automatically over the air once they are powered on and connected to an antenna. This of course is after you contact your carrier and have an account enabled and connected to the embedded module by providing the ESN / MEID number from the module to your carrier. This is how the carrier will tie your account to the internal Cellular Modem. For some CDMA based 1xRTT internal modules and Sprint Data-Link connections, additional configuration must be set in the Provisioning screen, detailed later.

Navigate through the GAU menus Networking → Cellular Connection → Configuration screen shown below:

GSM based carriers, such as AT&T, Bell Mobility and Telus will require a SIM card be inserted into the unit and an APN code to be entered to confirm you are the verified user of that SIM. Be sure to only insert and remove the SIM card while the unit is powered off.

You can verify your cellular connectivity by viewing the Home Status page of the GAU screen and observe if the Cellular Interface status shows an IP Address. On the Home screen you should see: Interface, Activation, Connection, IP Address and Signal Strength. If you do not see an IP Address get populated for the PPP interface you may have an issue with your settings or your account has not been correctly activated.

2.1.1 Cellular Carrier Selection

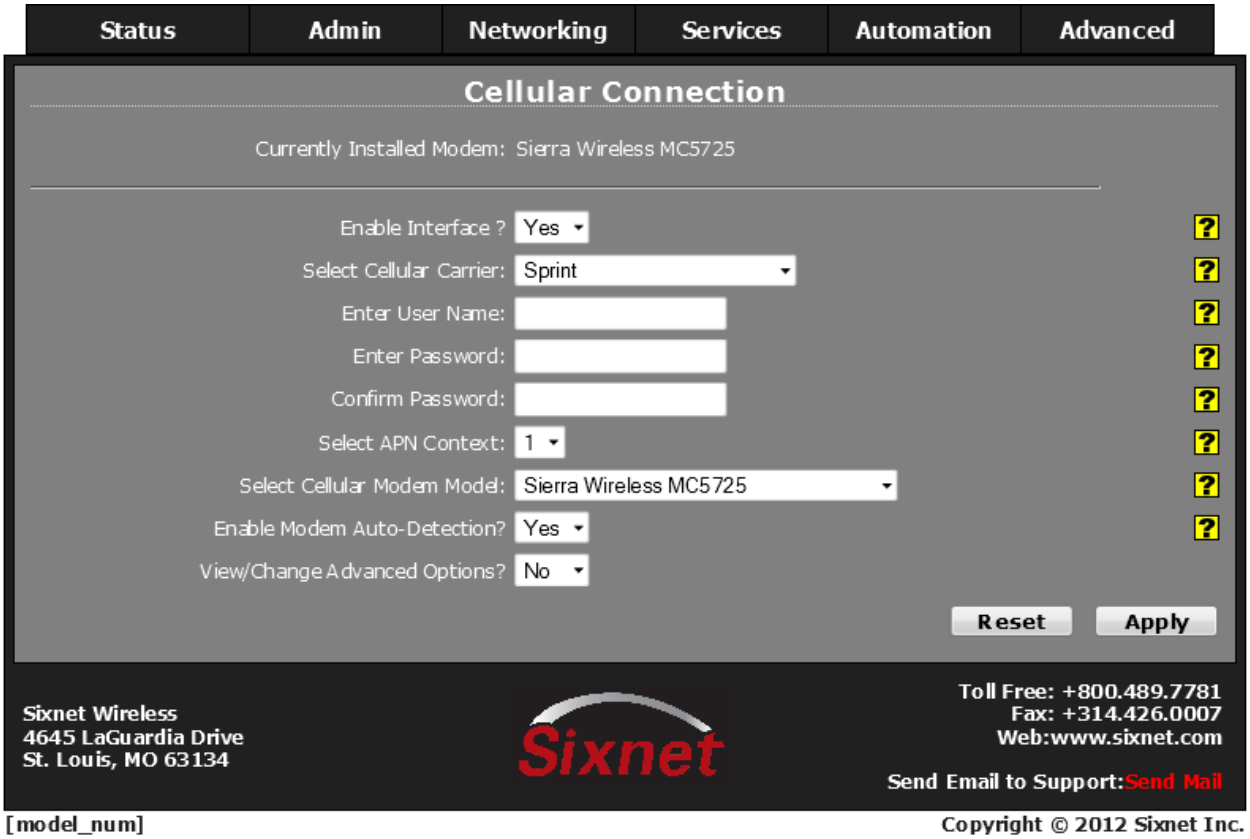

- Select "**Yes**" to enable the interface to become active after the new settings are applied and upon subsequent system start-up.
- Optionally, you may select the cellular carrier you are using from the drop-down menu. Currently this will not change operation, and may be auto-detected. Generic CDMA and Generic GSM will allow options to cover all known carriers.
- Select the name of the provider of your cellular wireless data plan from the drop-down list provided. (if needed):

2.1.2 Set the User Name, Password, and APN

- If you are using a GPRS, Edge, or HSDPA based card, enter the User Name, Password, and APN that was provided by your cellular carrier. This information should have been packaged with your SIM chip. If you do not have this information please contact your carrier's account representative or the carrier's support department before proceeding.

- Click the "Apply" button to save and activate the configuration.

NOTE: The User Name, Password, and APN can be case sensitive. Be certain that you use the exact information as provided by your carrier.

2.1.3 Enter Provisioning Information (if applicable)

- For Sprint/CDMA installations using the R3200/A2200/M1200 series, or for Sprint Data link support, additional information may be required. Navigate to Networking → Cellular → Provisioning.

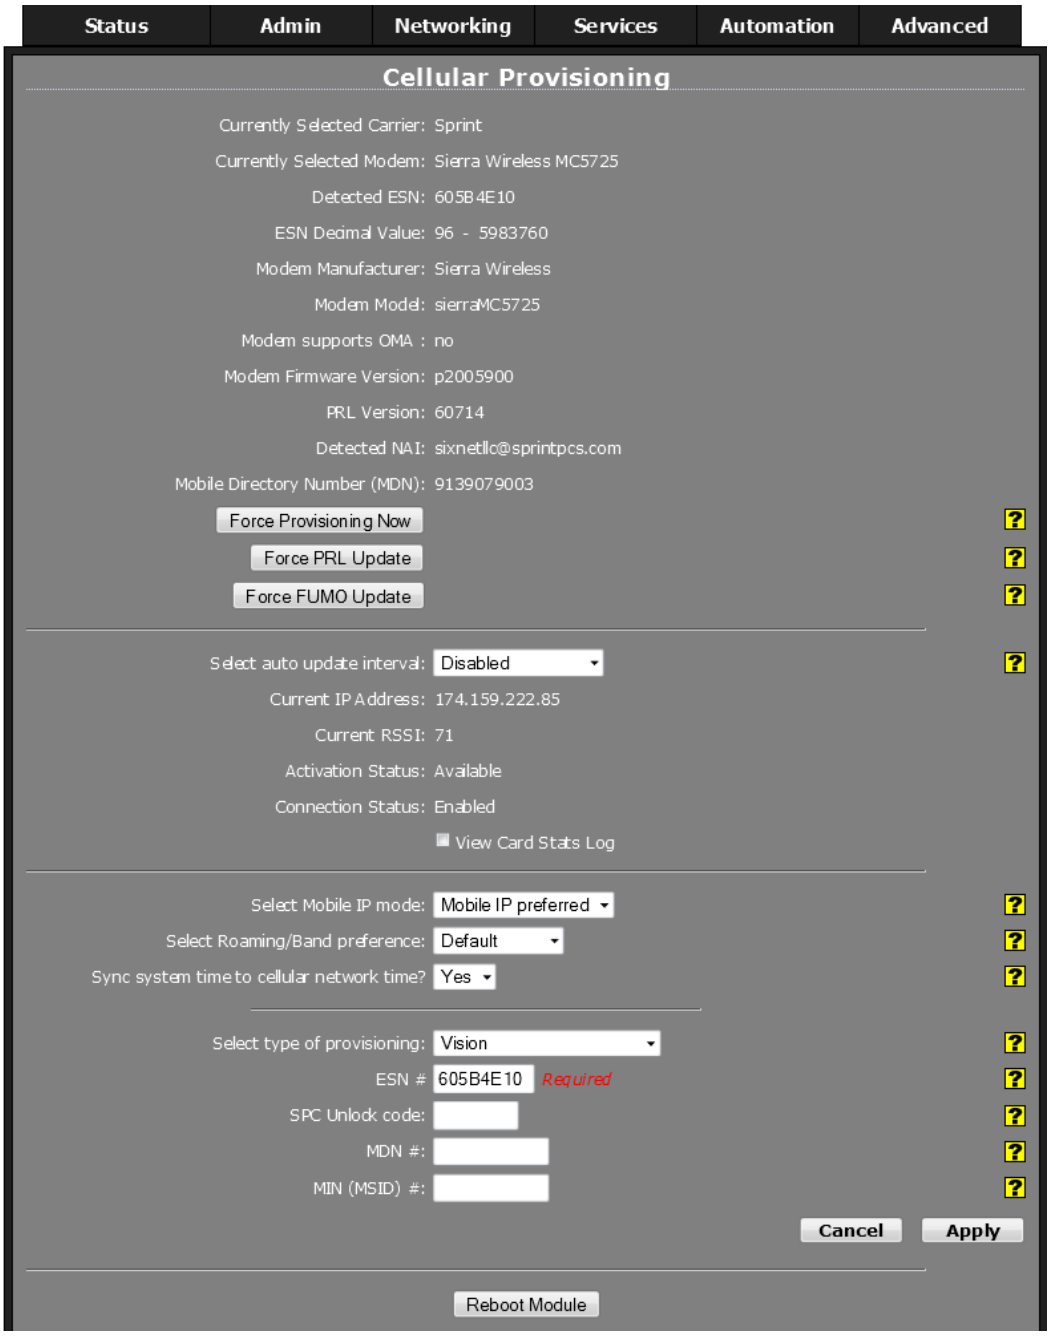

- Enter your ESN (also show at the top) in HEX format.
- Choose your provisioning type (Select Vision IP Only for standard activation).
- Enter your SPC Unlock code, MDN, and MSID. Click Apply.
- For non-OMA capable devices, you should also click the "Force Provisioning Now" button.
- For installations using the R3200/A2200/M1200 series, a reboot may be required which will happen automatically if necessary.
- (R-Series) Observe the RSSI status lights on the front of the router. Within a minute, you will see the lights blinking in an upward fashion. This indicates that activation is taking place.

- (R-Series) Once activation is successful, the lights will return to a signal strength indication. Lights will flicker slightly every 2 seconds while attempting a tower connection.
- Once the signal lights remain steady, a connection to the cellular network has been achieved at the signal strength indicated.
- (SN-Series) When the WAN light is on steady, a ppp connection to the tower has been achieved.
- For more information, consult the "Provisioning Section" detailed under the "Networking → Cellular → Provisioning screen" section in Part III.

For Sprint OMA (automatic activation provisioning) capable devices, the screen should appear:

Simply select OMA in the dropdown option and click apply. This will already be the default operation of OMA capable devices. When a connection is refused by the tower, the unit will automatically attempt automatic provisioning at regular intervals. You may click "Force Provisioning" to cause an immediate OMA attempt.

Your PRL will also be automatically updated to the latest version every 3 months. To initiate an immediate PRL Update, you may click the Force PRL Update button (R-3300/SN-6600), or follow these instructions on R-3000/R-1000/A-2000 series units:

- Using a paper clip, press the multi-function button on the rear of the unit near the CONSOLE port.
- Hold for 5 seconds, until the front RSSI lights all flash.
- Once the LEDs go out, press the reset button 5 times until you see this pattern.
- Wait for the pattern to flash the "binary 5" pattern in confirmation.
- The PRL Update will take place over the air providing you have an adequate connection established.

2.2 Verify Cellular Connectivity

Browse to the Status screen that appears:

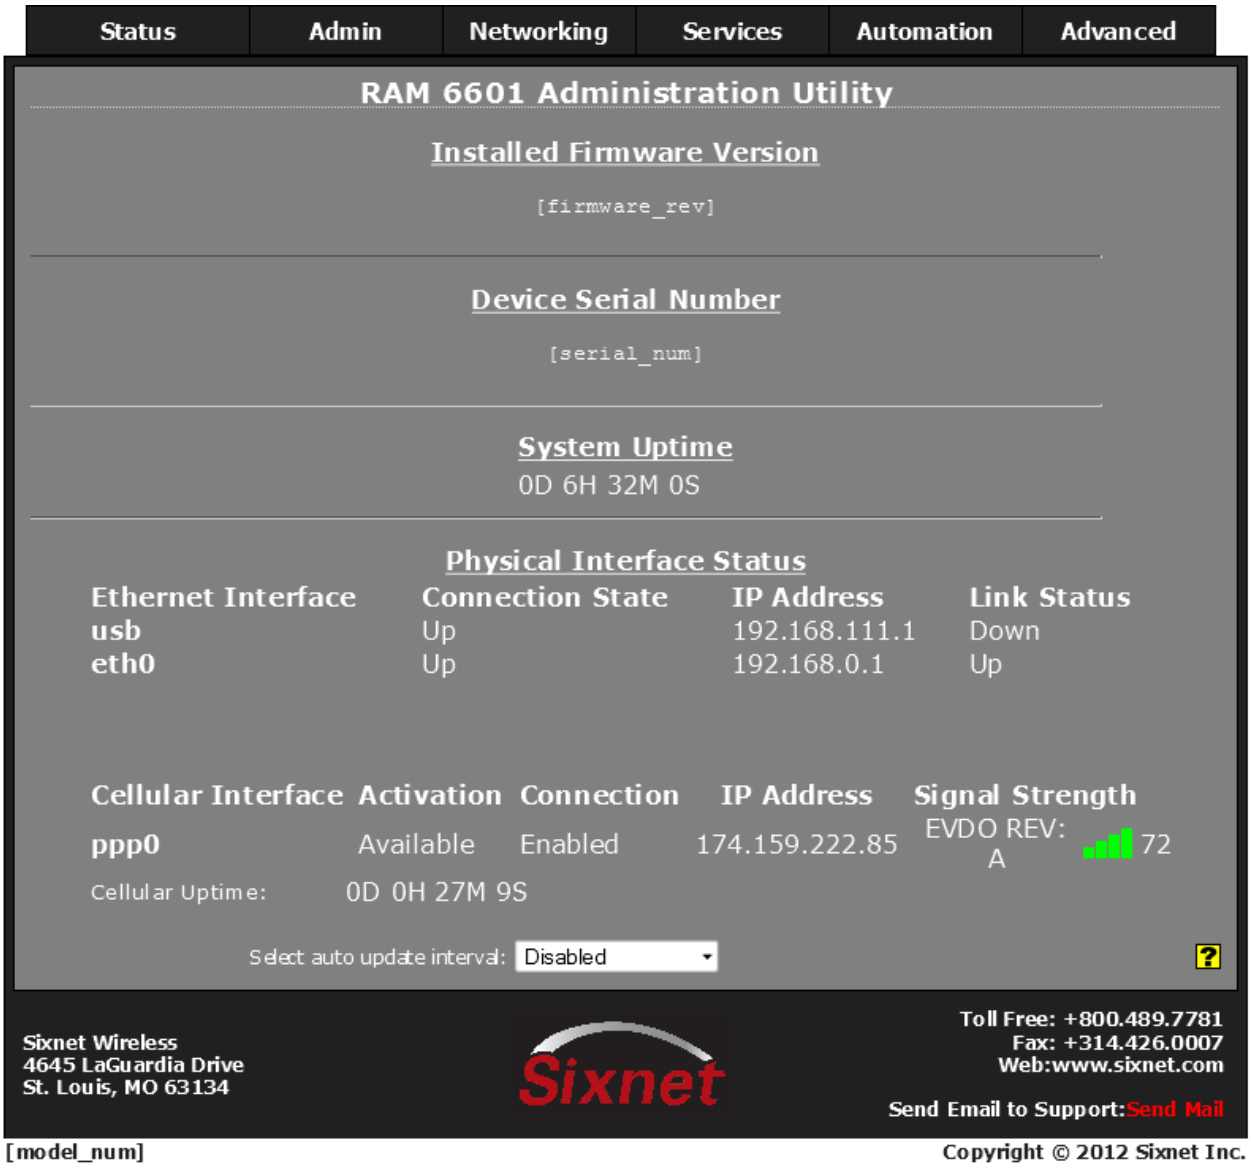

As shown, the router is receiving good signal from the cellular network, it is connected, and has been issued an IP address.

At this point, if you previously verified that your air card worked properly in your PC/laptop (R3100), or verified that the SIM is activated (R3300/SN6800), and have been accessing the GAU to configure your Sixnet gateway via its browser, you should be able to access the Internet.

- Open a browser on the PC/Laptop, and attempt to browse the Internet.

NOTE: Depending on the provisioning of your card, particularly in corporate applications in which the Sixnet router is providing cellular backup connectivity to wired circuits, your card may be restricted from Internet access. If this is the case, you may want to instead test to insure that you are able to access your corporate network. If you have any question as to your configuration, please check with your network administrator.

If you were able to successfully access the Internet, or your corporate network, then congratulations, your Sixnet router is up and running and you have successfully completed the Quick Start. You may skip the troubleshooting section.

2.2.1 Cellular Connectivity Troubleshooting

NOTE: If you were unable to access the Internet, or your corporate network, the section that follows will help you to determine the cause of your difficulties.

If you are reading this section, you have followed all previous instructions and your Sixnet router is not communicating. This section will provide additional information to isolate the cause of difficulties.

2.2.2 Cellular Reception

Before we get into specifics regarding how to identify and address specific problems that can be encountered, it is important that we spend a moment talking about cellular signal reception, and appropriate expectations.

All of the major cellular carriers expend significant sums insuring that we have excellent signal coverage within their coverage areas. However, they have no control over the environments in which we attempt to place or use our cellular devices.

The principles behind cellular data reception are similar to cellular phone reception. Therefore, our environment has the potential to significantly impact our ability to receive a good quality cellular signal.

You should be aware that it is possible to stand in the parking lot of a building and have perfect reception, but walk just 10 feet inside a concrete and steel building and have absolutely no reception at all.

The important thing to understand is that in many, many instances it is not the cellular network that causes reception problems, but the environment in which we place our cellular devices.

Important Note about Cellular Antennas

For this reason, Sixnet strongly recommends the use of external antennas when implementing cellular data. It is often the key to a successful implementation. Consult your Sixnet representative if you have questions about the appropriate use of external antennas.

2.3 Verifying IP Connectivity

First, check to make sure that your card is connecting to the cellular network and obtaining an IP address. Navigate to the GAU screen shown below:

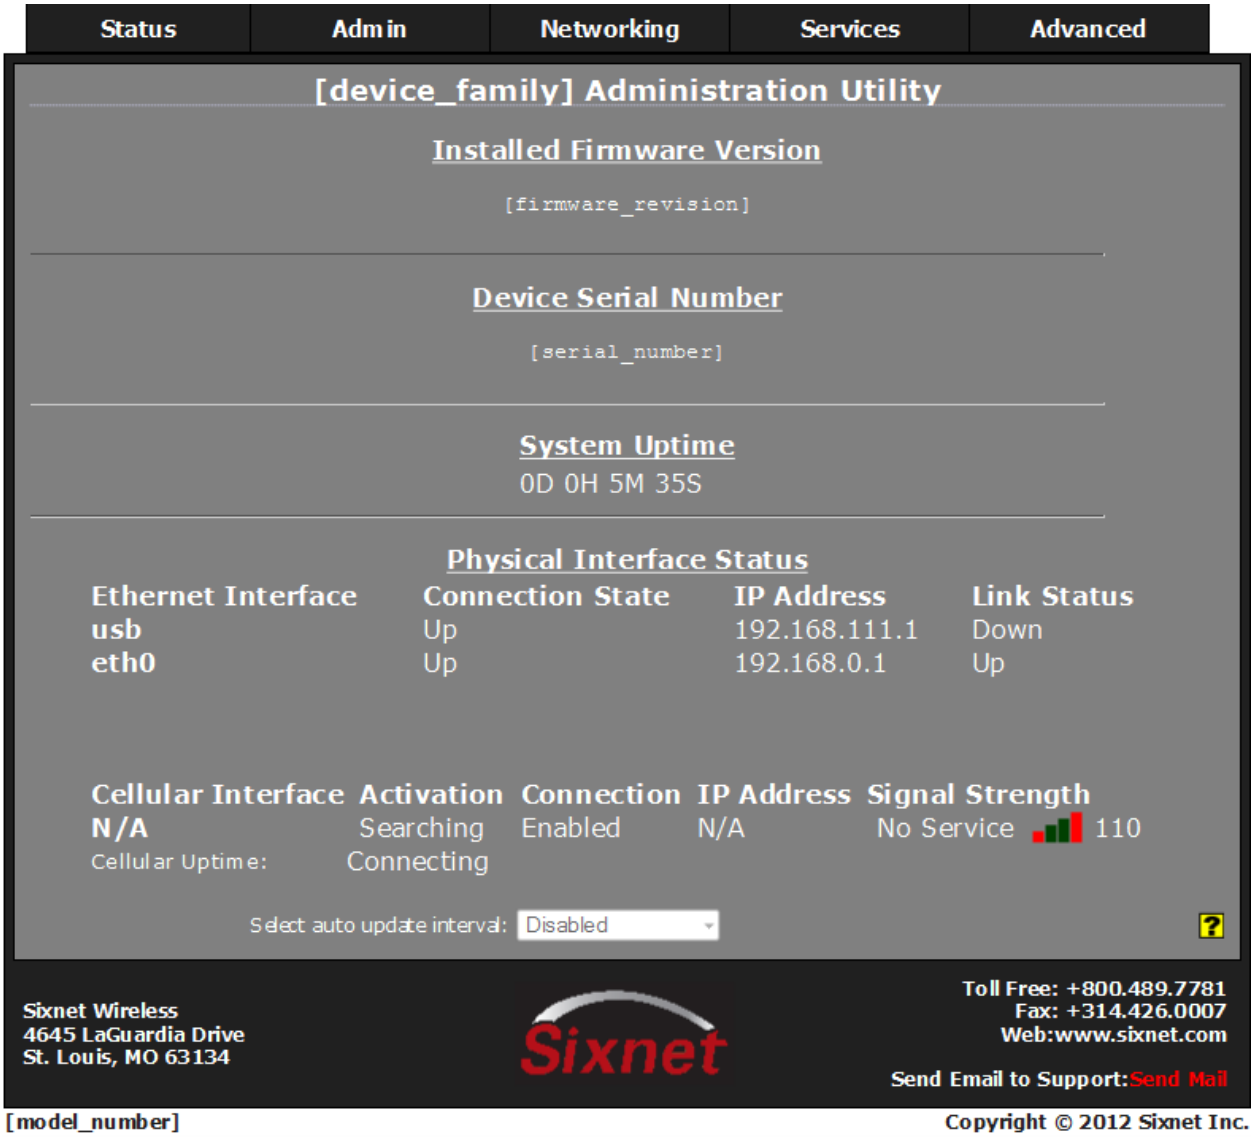

If your screen looks similar to the one shown above, you are having signal reception difficulties. As you will notice, the card is neither connected to the cellular network, nor has it been able to obtain an IP address from the network.

You can further verify this condition by examining the LED signal meter:

(R3000/M1000/A2000 units) Observe the signal meter in the middle of the front panel of the device as shown in the picture below:

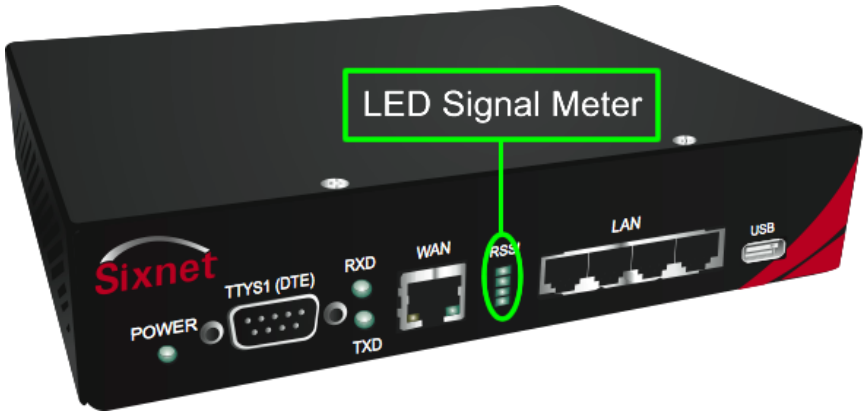

If the top and bottom LEDs are flashing, the device is not receiving sufficient signal from the cellular towers in order to be able to connect to the network. Typically, 2-3 LEDs of reception are a minimum requirement for a sustainable connection. If it is displaying bars of signal that flash every 2 seconds, then signal is available to the tower, but a cellular connection has not been established.

(SN6000 units) Observe the Signal LED as shown:

Signal	OFF	No signal available or signal strength is below -100 dBm
	ON	Excellent signal strength = greater than -69 dBm
	FLASH	Fast: Every 300ms = -79 to -70 dBm
		Medium: Every 600ms = -89 to -80 dBm
		Slow: Every 1200ms = -99 to -90 dBm

2.3.1 Minimal Reception

On occasion, you can find yourself in a situation where you have just enough signal to be able to communicate with the cellular tower and obtain an IP address, but not enough reception to be able to sustain a viable connection.

If your cellular card is using dynamically assigned IP addresses, you can determine if you are in a situation like this by watching the “Cellular Interface” field in the screen below:

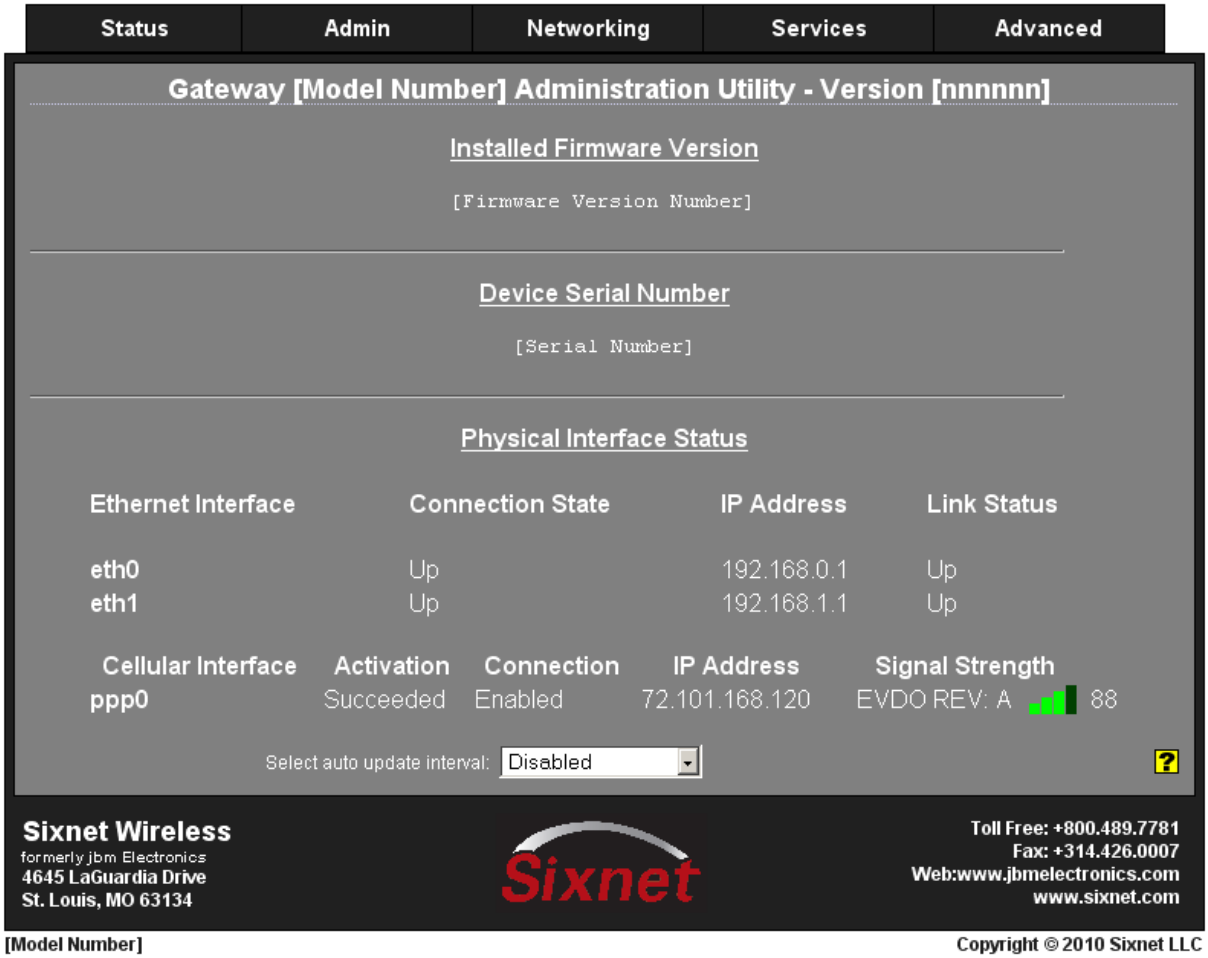

If you refresh this screen every few minutes and notice that the “IP Address” is changing frequently, it is possible that your router is connecting to the network and obtaining and IP address, and then the connection to the cellular network is being dropped. When the connection is re-established the device is then issued a different IP address.

2.3.2 Authentication Issues

If you are using a GPRS/EDGE/HSDPA card, and have at least three LEDs of signal on the front panel signal meter, your radio connection to the network may be just fine. The problem may lie in logging onto the cellular network.

Return to the screen shown below:

Re-verify your userid, password, and APN information. Be sure to pay close attention: all three of these items can be case-sensitive and must be entered exactly in order to properly log into the cellular network.

Don’t forget to click “Apply” if you make any changes.

2.3.3 Sixnet Technical Support

If you have followed all of the instructions up to this point, have satisfied yourself that you are not having an authentication problem, are convinced that you have sufficient reception, and your router is still not communicating, then please call Sixnet Technical Support at 1-877-432-9908. Live support is available from 8:00 a.m. - 4:30 p.m. CST. If you call after hours, please provide the agent will your contact information and a detailed description of your problem and we will respond to you the following day (or Monday if you phone after 4:30 pm. Friday). We will be happy to assist you in getting your router operational.

When submitting a support question, it is most helpful to have a GatherStats from the unit in question. Please obtain one from the Admin → GatherStats screen. Choose the Download Option, and save the resulting file to your PC. You may attach it to an email to support@sixnet.com describing your issue.

3 Gateway Administration Utility

3.1 Gateway Administration Utility (GAU) Introduction

3.1.1 Organization

The Sixnet Gateway Administration Utility (GAU) is comprised of five major sections:

- Status
- Admin
- Networking
- Services
- Automation
- Advanced

By clicking the tabs along the top of the interface each of the major sections may be accessed, as shown below:

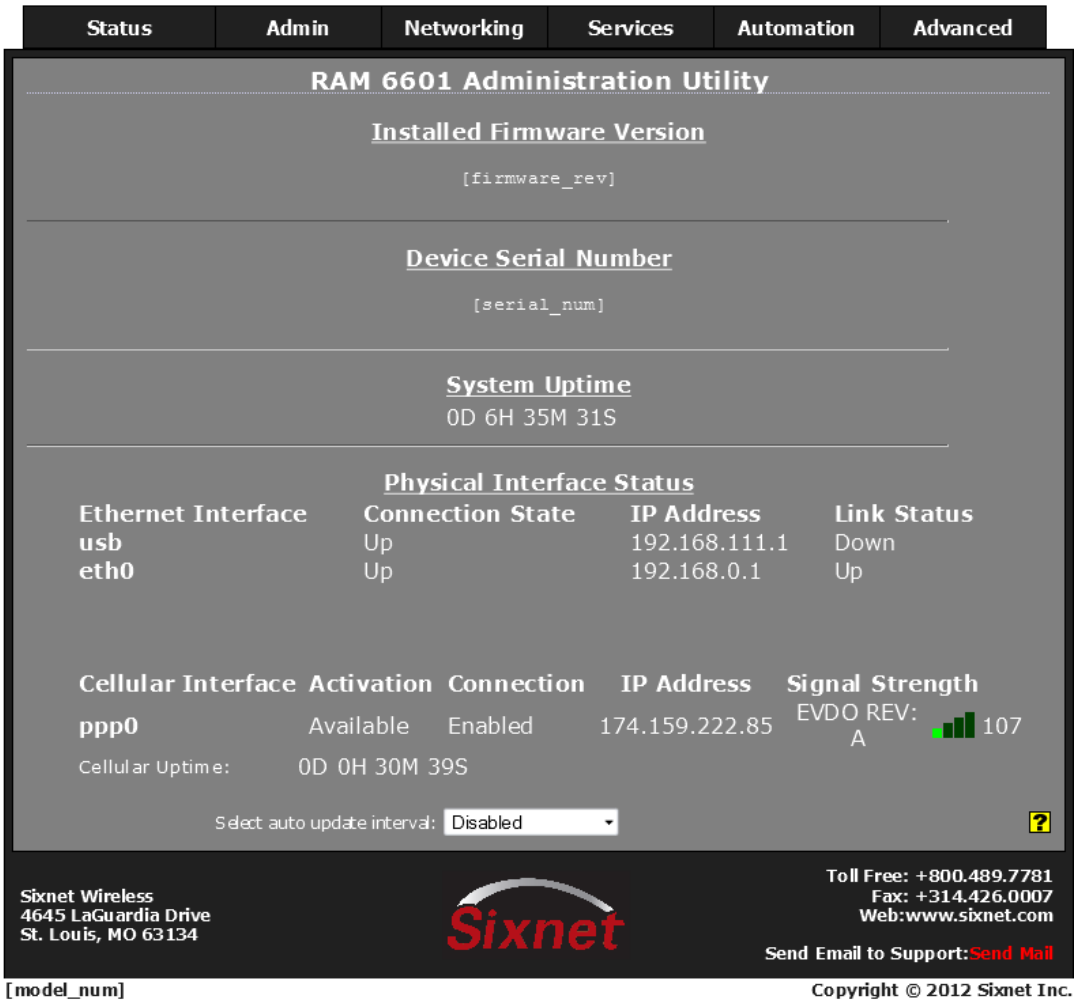

3.1.2 Status

The Status Tab is where you will find information on the actual system.

The Status Tab is organized into twelve (12) sections:

- Arp Cache: Shows connected network systems
- Feature Codes: Gives a list of the features running on this system
- Firewall Rules: Displays IPTABLES readout of system
- Interface Information: System Interface information
    - Summary: Brief summary of the interface status
    - Details: Detailed information on the interfaces
    - Multicast: Displays the interface multicast information
- Routing Information: Routing information
    - Policy Routing Table: Displays policies used for routing
    - Standard Routing Table: Displays routing table information
- Socket Statuses: Active Internet Connections
    - TCP Only: Internet connections with established connections
    - All: Internet connections to include TCP, UDP, and Unix connections
- System Processes: Displays list of all running processes
- System Services: Displays list of services and current status: on or off
- System Information: Displays information on Filesystem utilization and Memory Usage
- Syslog: Displays current syslog information with options to change and search the syslog information
- Update History: Displays list of updates to the system
- Diagnostic Tools: Connectivity testing tools
    - Ping: Allows you to “ping” an external domain or IP Address
    - Socket Test: Allows you to “telnet” to desire destination IP and Port address and display the result of socket connection.
    - Speed Test: Allows you to “test” the bandwidth and latency of an activated unit’s cellular connection.
    - Ping: Allows you to “ping” an external domain or IP Address

3.1.3 Admin

The Admin Tab is where you can configure how the Sixnet router is accessed, update the firmware, reset the system to default, set the system time, and reboot the Sixnet router remotely.

The Admin Tab is organized into ten (10) sections:

- Access Settings: Changes access from HTTP to HTTPS and changes the password used to login
- Certificate Manager: Manage the SSL certificates used by the system
- Factory Defaults: Restore system to factory defaults

WARNING: This action will delete all custom configurations placed on the system. Extreme care should be exercised to prevent inadvertent use of this process.

- Firmware Update: Used to upgrade the Sixnet firmware of the system
- Gather Configs: Used to obtain the configuration files to export
- Gather Stats: Used to obtain a "snapshot" of the running processes of the system
- Manage System Configuration: Used to Export or Import the GAU Master Configuration File
- Package Installation: Used to install system patches and updates
- Reboot: Used to reboot the system remotely

NOTE: This action will disconnect your login session while the system restarts. You will need to login to the Sixnet router after 3 – 5 minutes to allow for reboot.

- System Time: Used to change the Time Zone, date, and configure use of a NTP client.

3.1.4 Networking

The Networking Tab is where you can configure anything associated with networking the Sixnet router to the Internet and local interfaces.

The Networking Tab is organized into nine (9) sections:

- Cellular Connection:
  - Configuration: Used to configure the air card / SIM on the unit
  - Provisioning: Used to setup the service type on some, not all, air cards
- DNS Settings: Used to configure DNS request to an external server
- Ethernet Interfaces:
  - eth0: Used to configure IP Address/Network for Ethernet 0 interface
  - eth1: Used to configure IP Address/Network for Ethernet 1 interface
  - usb: Used to configure IP Address/Network for Usb interface, If available on the unit
- Firewall: organized into eight (8) sub-sections:
  - General Settings: Used to configure common access services to the Sixnet router and configure how the interfaces are interpreted
  - DMZ Host Rules: Used to configure rules to route through a DMZ
  - Filter Rules: Used to strictly define routes between interfaces
  - Host Redirect Rules: Used to redirect specific ports to alternate ports through the Sixnet router
  - Masquerade Rules: Used to define networks to be considered as internal entities
  - NAT Rules: Used to define rules for Network Address Translation between interfaces on the Sixnet router
  - Service Access Rules: Used to define specific port/port range allowed into the Sixnet router through the firewall
  - Subnet Blacklist Rules: Used to define specific networks that are strictly denied access to the Sixnet router
  - Subnet Whitelist Rules: Used to define specific networks that are allowed access to the Sixnet router
- PPP Dial Backup: Used to configure the capability of dialing out to an ISP for connectivity on units containing the 56K modem
- PPP over Ethernet: Used to configure the router to use the connection of an ADSL modem setup
- Static Routes: Used to configure static routes for the Sixnet router
- TCP Keep Alives: Used to configure the timeout for ping Keep Alive
- Tunnel (VPN) Settings:
  - GRE Tunnels: Used to configure a Generic Routing Encapsulation Tunnel with a head-end server
  - IP to IP Tunnels: Used to configure IP to IP Tunnels
  - IPSEC:
    - Configuration: Used to configure the Phase I and Phase II of an IPSEC Tunnel
    - Status: Used to display the current status of an established IPSEC Tunnel

3.1.5 Services

The Services Tab is where you can configure the various service offerings of the Sixnet router. These services include DHCP Server, Dynamic DNS, SSH, SSL, and TELNET.

The Services Tab is organized into ten (10) sections:

- DHCP Server: Used to configure one of the internal Ethernet interfaces to be a DHCP server and hand out IP Addresses to systems connected to the Sixnet router
- Dynamic DNS: Used to configure a dynamic DNS if a DDNS service, such as dyndns.org, is utilized
- SixView Manager: Used to configure how the Sixnet router communicates with a Gateway Management Utility server
- SSH Server: Used to enable/disable SSH access to the Sixnet router
- SSL Connections:
    - SSL Client: Used to configure the Sixnet router to act as an SSL client
    - SSL Server: Used to configure the Sixnet router to act as an SSL server
- System Logging: Used to configure remote system logging to a remote system
- TELNET Server: Used to enable/disable TELNET server
- Ping Alive: Used as a diagnostic tool for verifying connectivity between two hosts on a network
- SNMP Agent: Used to allow users to query the unit for information via SNMP
- Serial IP: Used to configure the translation between the RS-232 serial data to and from TCP/IP traffic

3.1.6 Automation

The Automation tab is where users can manage the I/O interface properties for ModBus and DNP3 features.

*Note: These features are only available on RAM series. An SN- model can be upgraded to a RAM- by contacting Sixnet sales and requesting an unlock code. There is an additional charge to enable these advanced feature sets.

The Automation tab is organized in five (5) sections:

- Local Station: Used to configure the Local Station information of the unit within your Modbus/DNP3 environment. This is a unit level setting and applies to both Modbus and DNP3 configurations.
- Serial Port: Used to configure the RS-232 hardware port on the router for physical connection to another serial device. This is a unit level setting and applies to both Modbus and DNP3 configurations.
- Modbus: Used to define the Modbus characteristics and specific configs for integrating into your existing Modbus environment.
    - Remote Station: Used to configure the other remote devices in your Modbus environment that will be communicating with the RAM router.
    - I/O Transfer: Used to configure the Modbus registers that will store and transfer data between devices.
    - Forwarding: used to configure registers that will be forwarded on to another server/Scada application.
    - Display Config File: Displays the raw modbus.xml configuration file.

- DNP3: Used to define the DNP3 characteristics and specific configs for integrating into your existing DNP3 environment.
    - General: Used to define the version of the DNP3 protocol you will be using and general settings.
    - Physical Link Layer: Used to configure the protocol (TCP/UDP) and client/server mode.
    - Data Link and Application Layer: Used to identify this unit in your DNP3 schema.
    - Object Mapping: Used to define all of the DNP3 objects and where they will reside (register allocation)
    - Default Variation: Used to declare the data types of your objects (registers)
    - Display Config File: Used to view the raw .ini configuration file. *This file is the same format as used by Sixnet's I/O ToolKit that many of our Automation customers are already accustomed to.
- I/O Settings: Used to query the I/O database and test activity and intended operation as well as integrate the unit's Digital and Analog inputs and output into your I/ODB.
    - Test I/O: Used to view the raw I/ODB registers contents to test intended operation.
    - I/O Ctrl: Used to configure the onboard I/O and assign it to a specific register for I/ODB integration.

3.1.7 Advanced

The Advanced Tab is where you can configure the advanced features of the Sixnet router, which includes IP Fallback, IP Transparency, Out-of-Band Management, VRRP, Expert Mode and GWLNX (Protocol Conversion). You have the capability of accessing some of the system files within the Expert Mode section.

The Advanced Tab is organized into seven (6) sections:

- IP Fallback: Used to configure the Sixnet router for failover between interfaces, for example, Primary route on DSL/Cable, and secondary on Cellular
- IP Transparency: Used to configure the IP Transparency the will pass the IP Address of the air card to the device connected to the Sixnet router on one of the Ethernet interfaces
- Out-of-Band Mgt: Used to configure the capability of remotely administrating a third-party device connected via a serial cable on the Sixnet router
- VRRP: Used to configure the Sixnet router to share an IP Address and act as a failover for a third-party router using Virtual Routing Redundancy Protocol
- Expert Mode: Used to alter specific system files on the Sixnet router

WARNING: Do not use this method of configuration unless directed to do so by a support engineer from Sixnet. If you do not fully understand how to make the changes and what effect those changes will have on the Sixnet router, please contact a Sixnet technician.

- Gwlnx: Used to configure the Protocol Conversion capability of the Sixnet router. Protocol Conversion is a process used to convert legacy protocols to communicate over TCP/IP.

3.2 Status Tab

The Status Tab allows you to review the state of the router functions, such as network connections, interfaces, system processes, services running, and system information. It also allows review of the syslog, update history, and under diagnostic tools, permits testing the connectivity through the use of 'ping' and 'traceroute'.

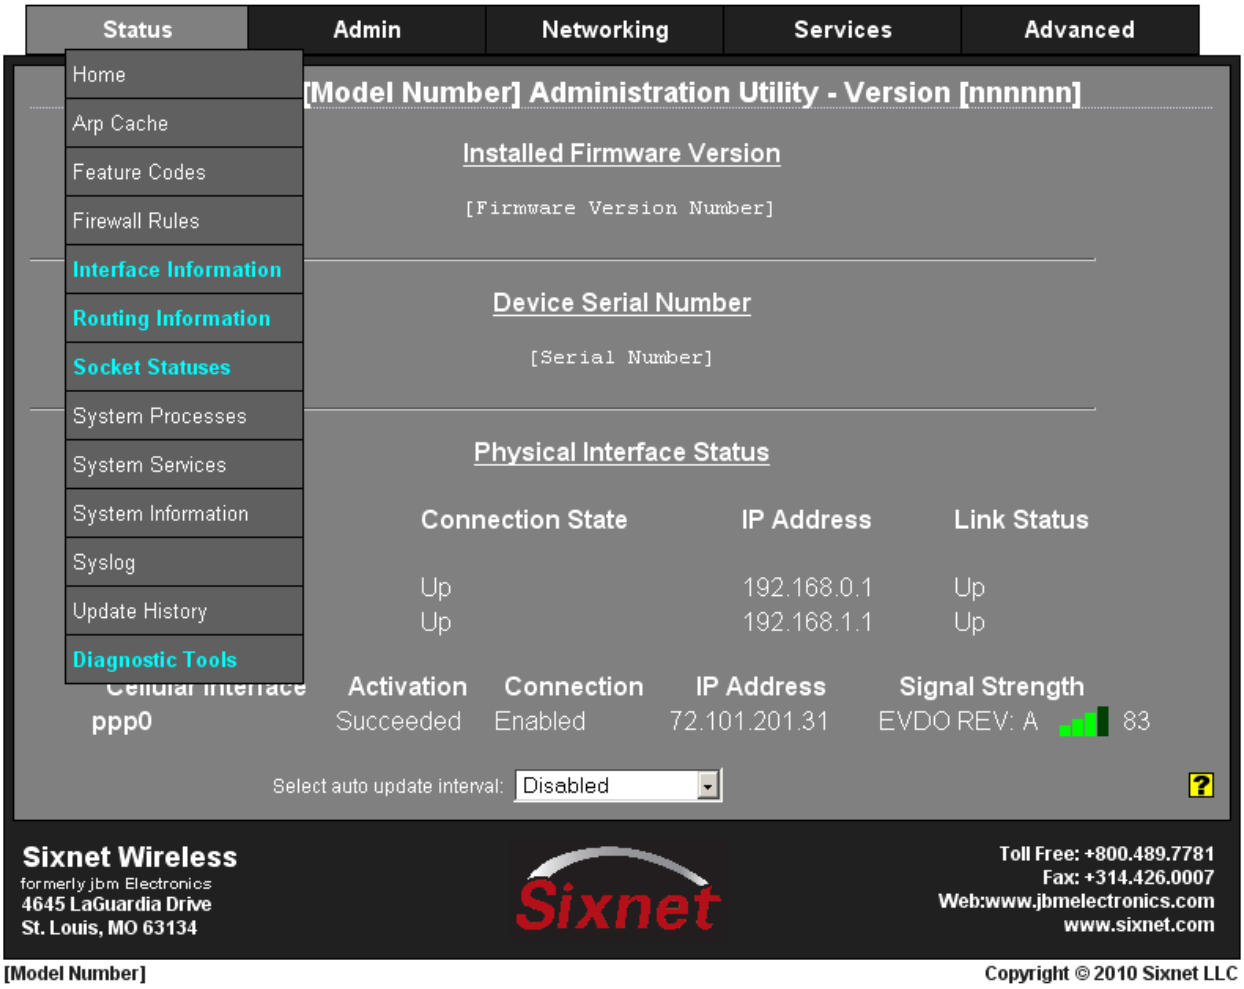

Home: The Home option will always return the user to the "Home Screen" pictured above that shows a system info summary.

3.2.1 ARP Cache

The "ARP cache" is a table which stores mappings between Data Link Layer (OSI Layer 2) addresses and Network Layer (OSI Layer 3) addresses. This important information shows what connections are established to the router.

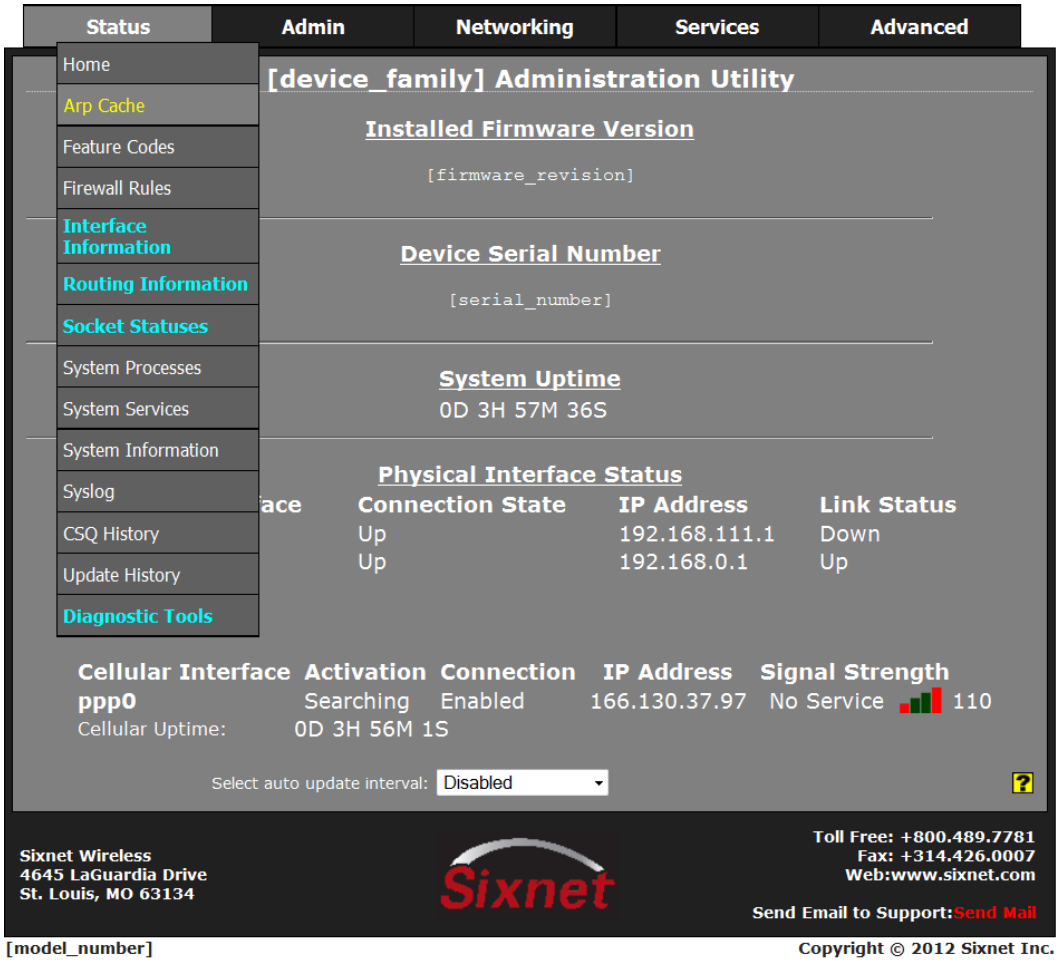

- Click on the "Arp Cache" menu item and the following window will appear:

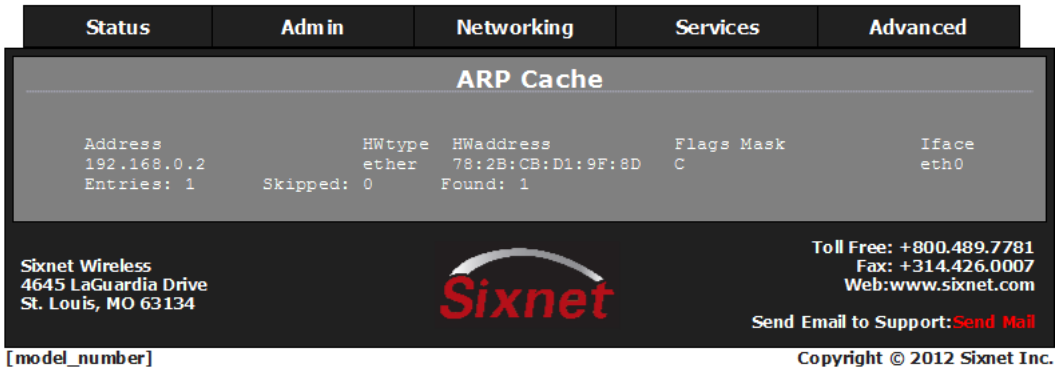

3.2.2 Feature Codes

The “Feature Codes” menu item will display the basic hardware configuration of the Sixnet router.

3.2.3 Firewall Rules

The "Firewall Rules" menu item displays a complete listing of the rules used within the firewall for the Sixnet router. If you are familiar with Linux and IPTABLES, then this will of great use to you.

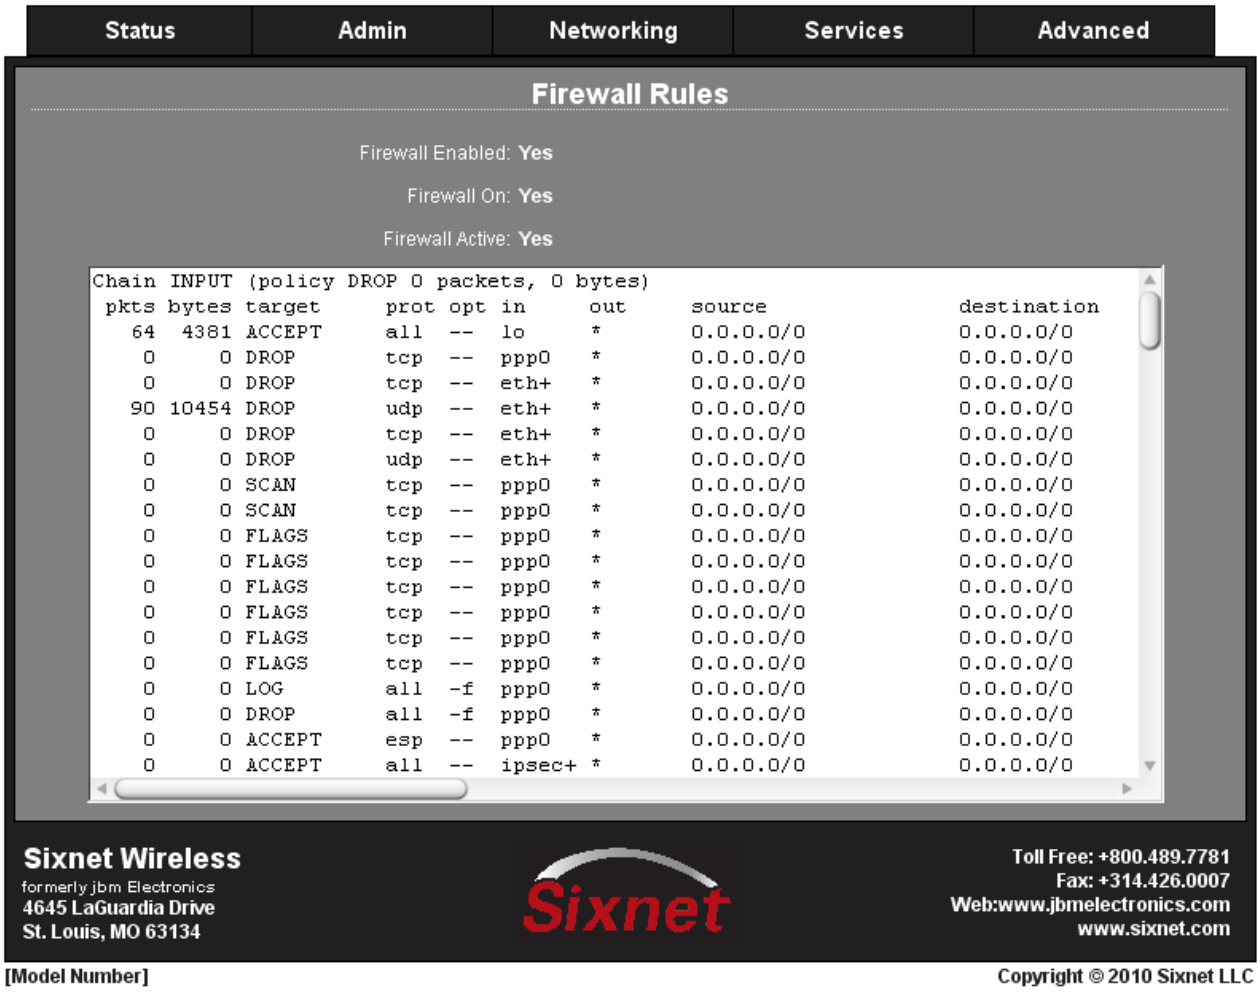
Status
Admin
Networking
Services
Advanced
Firewall Rules
Firewall Enabled: Yes
Firewall On: Yes
Firewall Active: Yes
Chain INPUT (policy DROP 0 packets, 0 bytes)
pkts bytes target prot opt in out source destination
64 4381 ACCEPT all -- lo * 0.0.0.0/0 0.0.0.0/0
0 0 DROP tcp -- ppp0 * 0.0.0.0/0 0.0.0.0/0
0 0 DROP tcp -- eth+ * 0.0.0.0/0 0.0.0.0/0
90 10454 DROP udp -- eth+ * 0.0.0.0/0 0.0.0.0/0
0 0 DROP tcp -- eth+ * 0.0.0.0/0 0.0.0.0/0
0 0 DROP udp -- eth+ * 0.0.0.0/0 0.0.0.0/0
0 0 SCAN tcp -- ppp0 * 0.0.0.0/0 0.0.0.0/0
0 0 SCAN tcp -- ppp0 * 0.0.0.0/0 0.0.0.0/0
0 0 FLAGS tcp -- ppp0 * 0.0.0.0/0 0.0.0.0/0
0 0 FLAGS tcp -- ppp0 * 0.0.0.0/0 0.0.0.0/0
0 0 FLAGS tcp -- ppp0 * 0.0.0.0/0 0.0.0.0/0
0 0 FLAGS tcp -- ppp0 * 0.0.0.0/0 0.0.0.0/0
0 0 FLAGS tcp -- ppp0 * 0.0.0.0/0 0.0.0.0/0
0 0 FLAGS tcp -- ppp0 * 0.0.0.0/0 0.0.0.0/0
0 0 LOG all -f ppp0 * 0.0.0.0/0 0.0.0.0/0
0 0 DROP all -f ppp0 * 0.0.0.0/0 0.0.0.0/0
0 0 ACCEPT esp -- ppp0 * 0.0.0.0/0 0.0.0.0/0
0 0 ACCEPT all -- ipsec+ * 0.0.0.0/0 0.0.0.0/0
Sixnet Wireless
formerly jbm Electronics
4645 LaGuardia Drive
St. Louis, MO 63134
Sixnet
Toll Free: +800.489.7781
Fax: +314.426.0007
Web:www.jbmelectronics.com
www.sixnet.com
[Model Number]
Copyright © 2010 Sixnet LLC

You can scroll through the list of rules to review the entire IPTABLES listing. This is valuable information allows you to track down what is being allowed and what is being denied access to and through the Sixnet router.

3.2.4 Interface Information

The “Interface Information” menu item is sub sectioned into three sections; Summary, Details, and Multicast.

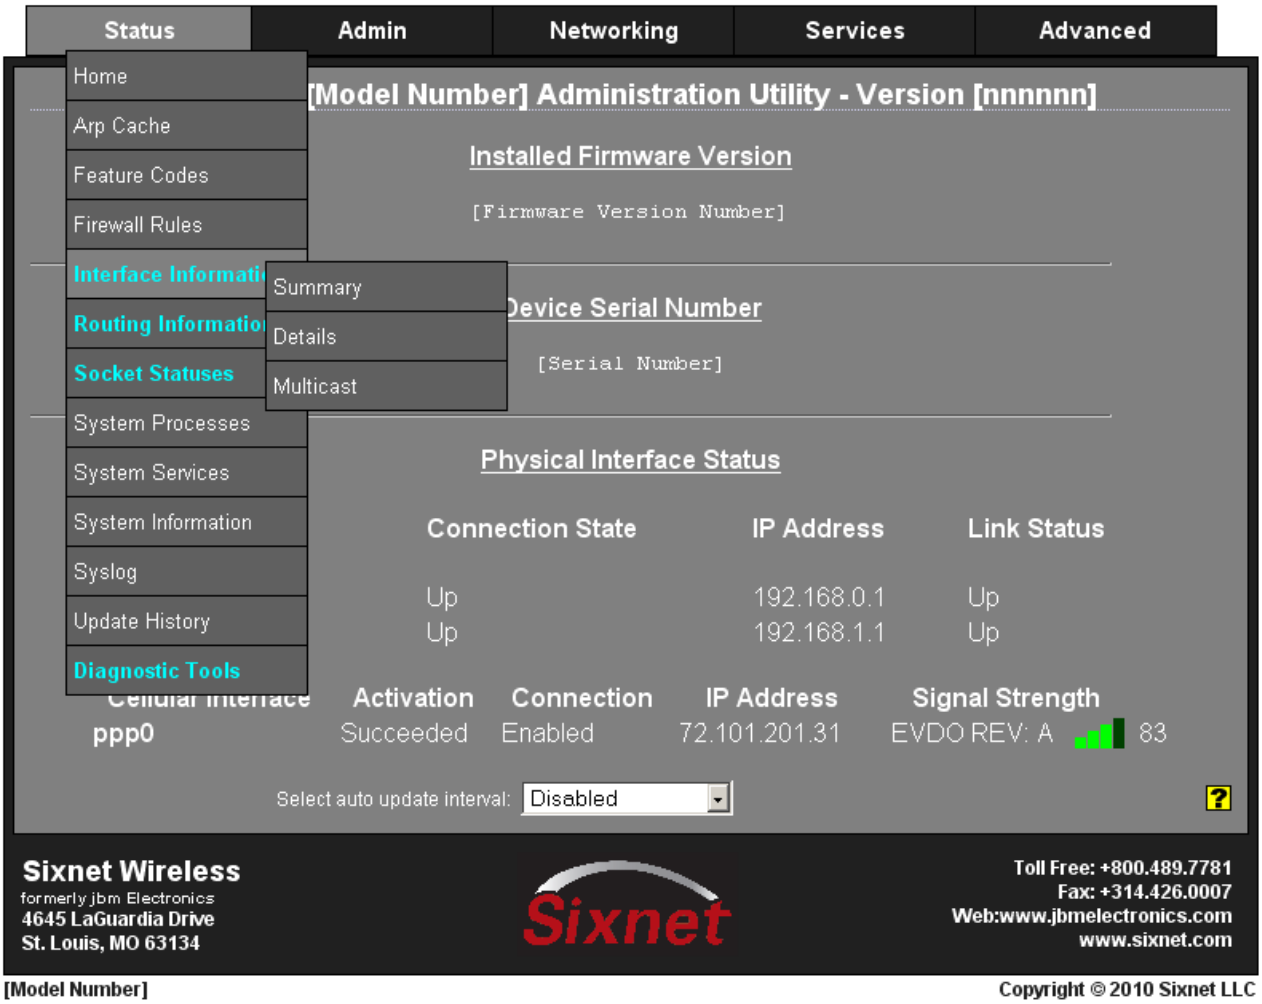

The “Summary” item will display a brief description of the interfaces of the Sixnet router.

The “Details” menu item will display a more system specific description of the interfaces on the Sixnet router.

The “Multicast” menu item displays the current multicast settings for the interfaces.

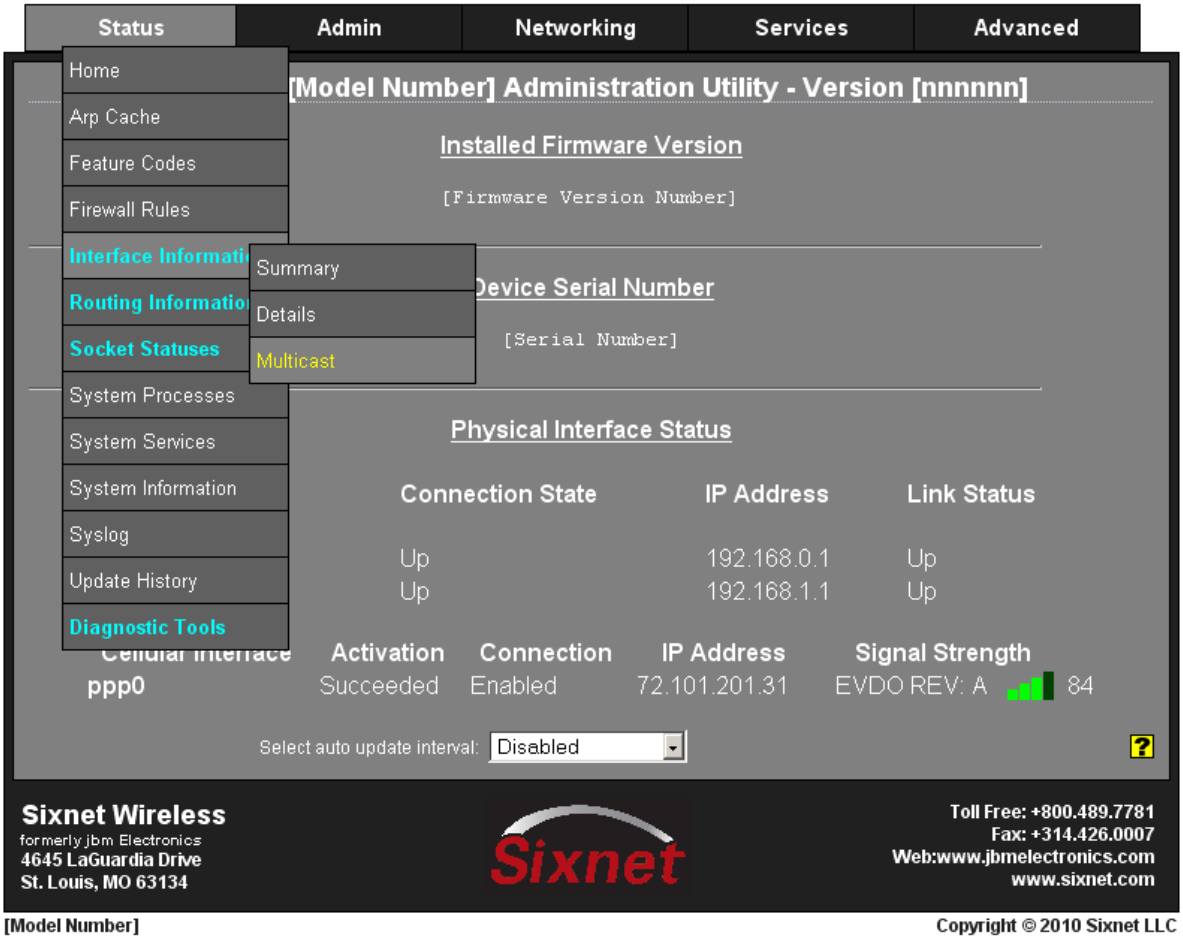

- Click on the “Multicast” menu item and the following window will appear:

3.2.5 Routing Information

The "Routing Information" is sub-sectioned into Policy Routing Table, and Standard Routing Table sections.

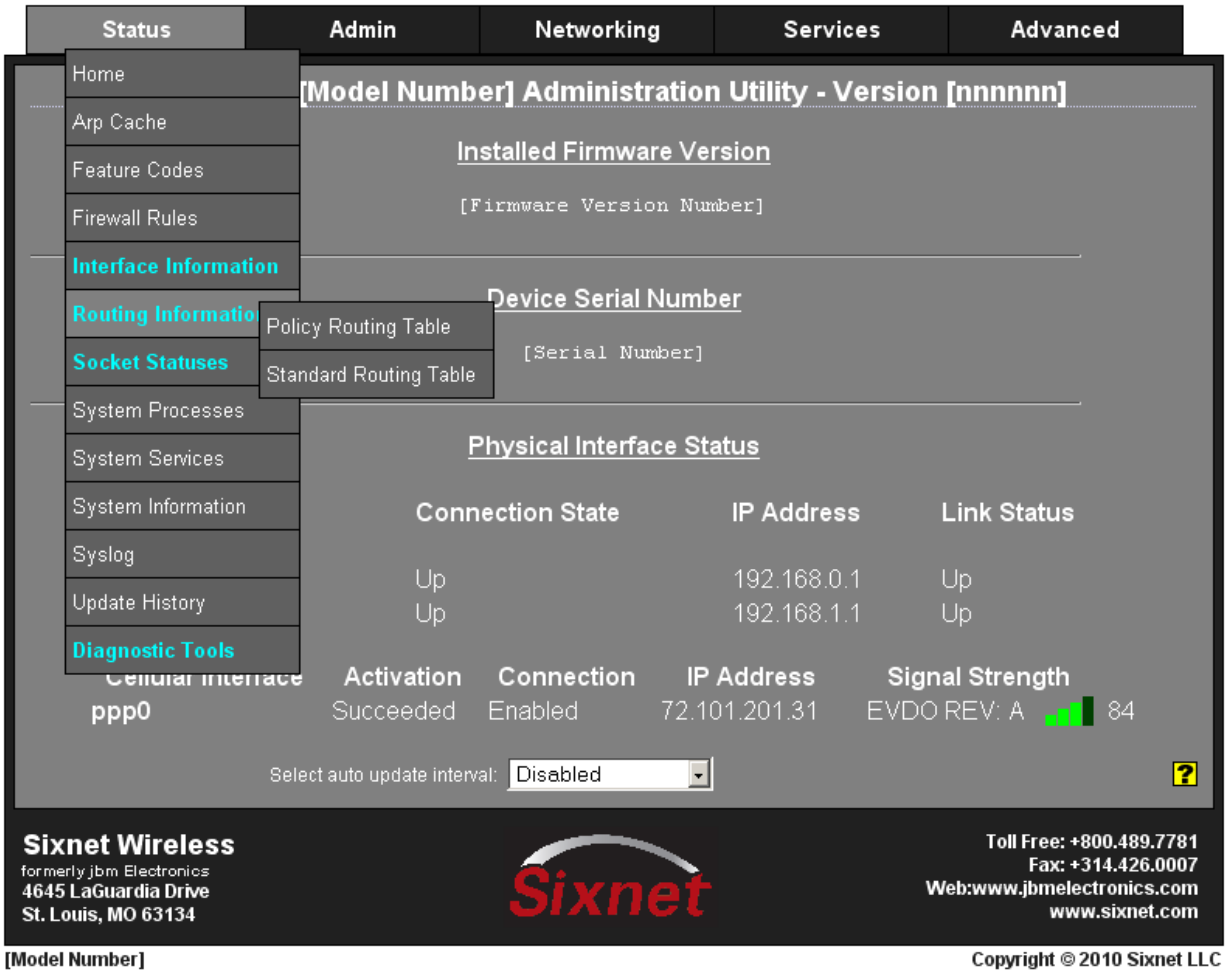

The "Policy Routing Table" menu item displays information on the policy rules, the route tables for each individual interface, and the general routes for the Sixnet router.

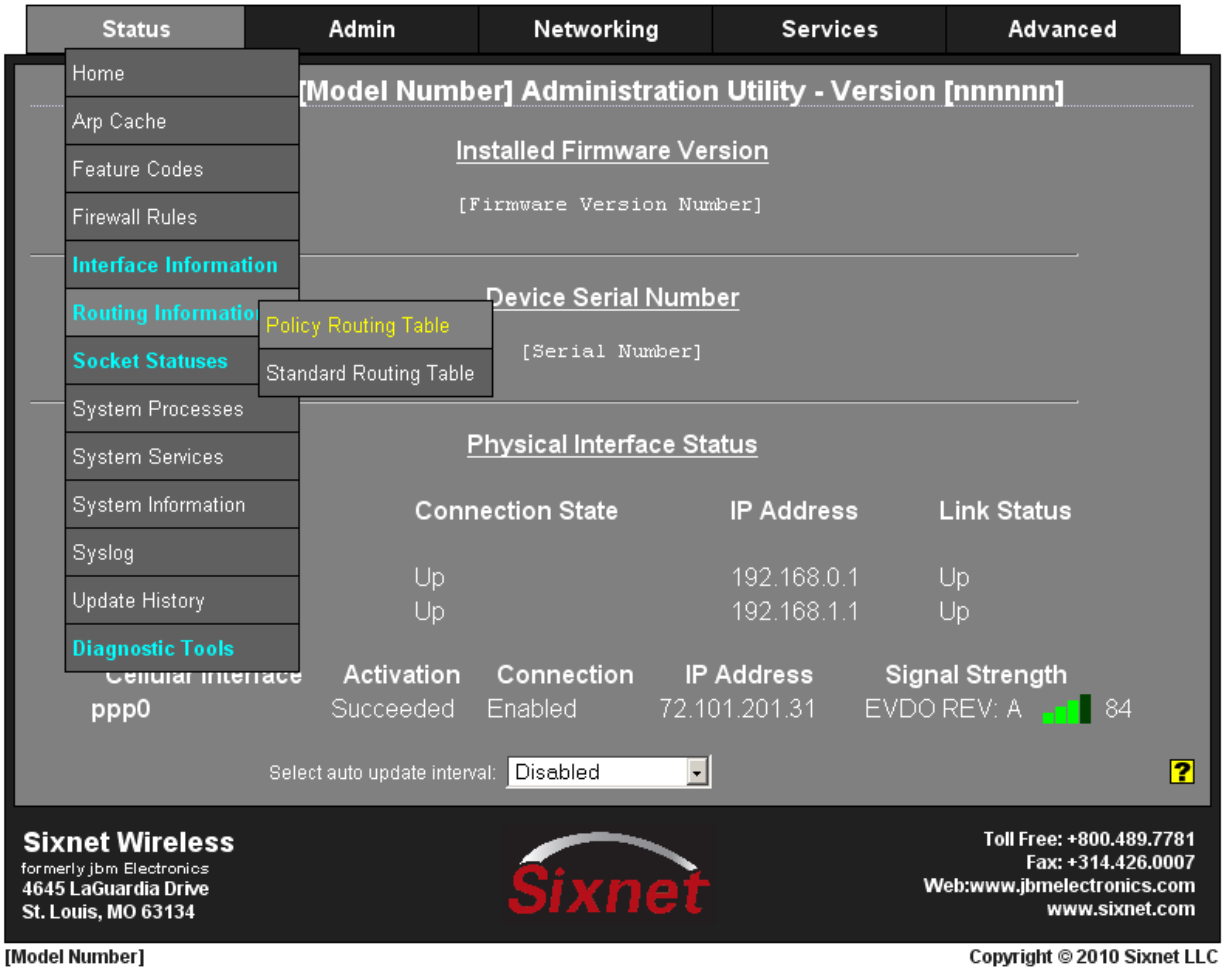

- Click on the “Policy Routing Table” menu item and the following window will appear:

Status
Admin
Networking
Services
Advanced
Policy Routing Table
** ip rule show
0: from all lookup local
10: from all lookup main
11: from 127.0.0.1 lookup lo
12: from 192.168.0.1 lookup eth0
13: from 192.168.1.1 lookup eth1
32766: from all lookup main
32767: from all lookup default
** ip route show table lo
127.0.0.0/8 dev lo scope link src 127.0.0.1
** ip route show table eth0
192.168.0.0/24 dev eth0 scope link src 192.168.0.1
** ip route show table eth1
192.168.1.0/24 dev eth1 scope link src 192.168.1.1
** ip route show
192.168.1.0/24 dev eth1 proto kernel scope link src 192.168.1.1
192.168.0.0/24 dev eth0 proto kernel scope link src 192.168.0.1
127.0.0.0/8 dev lo scope link src 127.0.0.1
Sixnet Wireless
formerly jbm Electronics
4645 LaGuardia Drive
St. Louis, MO 63134
Sixnet
Toll Free: +800.489.7781
Fax: +314.426.0007
Web:www.jbmelectronics.com
www.sixnet.com
[Model Number]
Copyright © 2010 Sixnet LLC

The “Standard Routing Table” will display the current routes for the Sixnet router and the static routes that have been configured for the router.

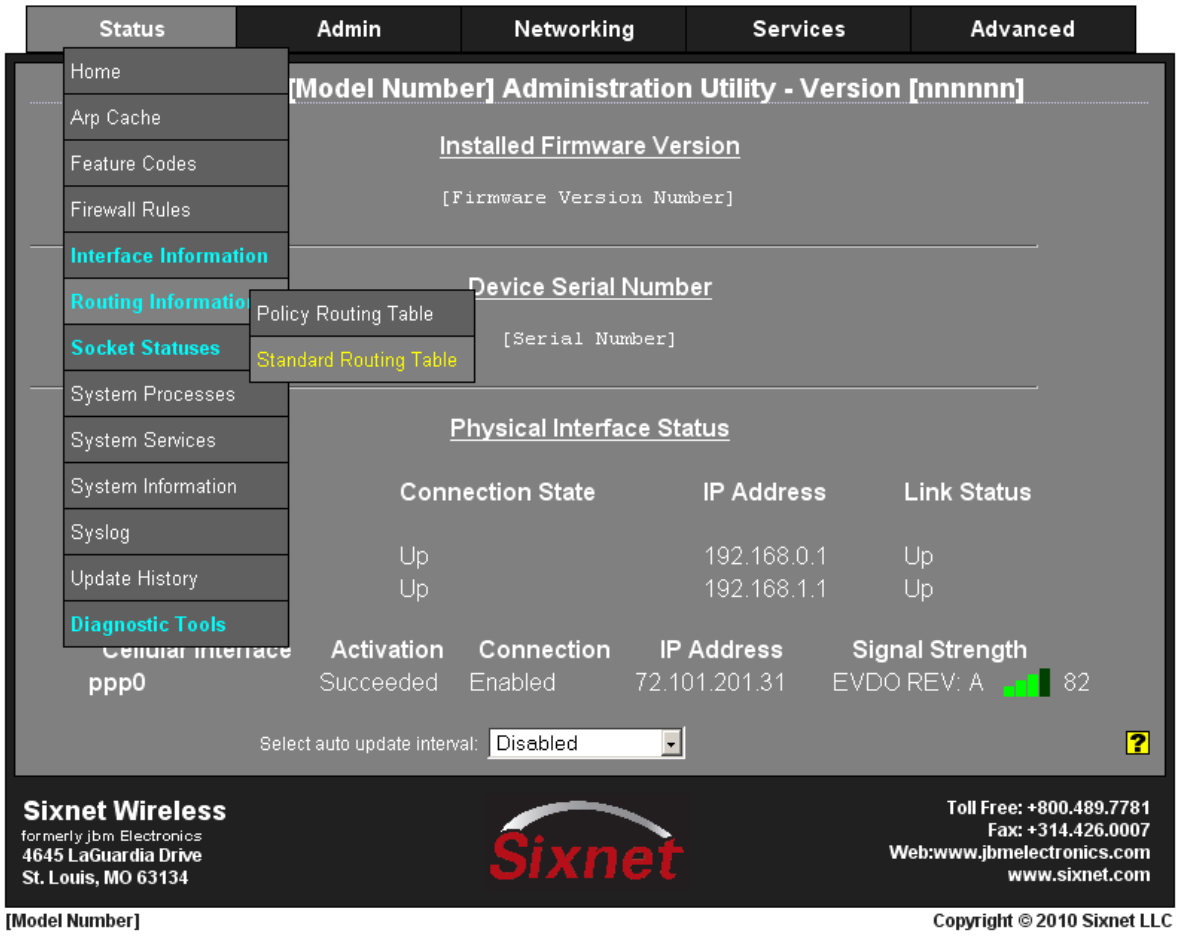

- Click on the “Standard Routing Table” menu item and the following window will appear:

3.2.6 Socket Statuses

Sockets are end-points to communication over the Internet. Much like PBX phone systems, where the IP address is the phone number and the port is the extension. Every paired (connected) socket has a source IP/port and a destination IP/port.

The "Socket Statuses" are sub-sectioned into TCP Only, Conn Track and All.

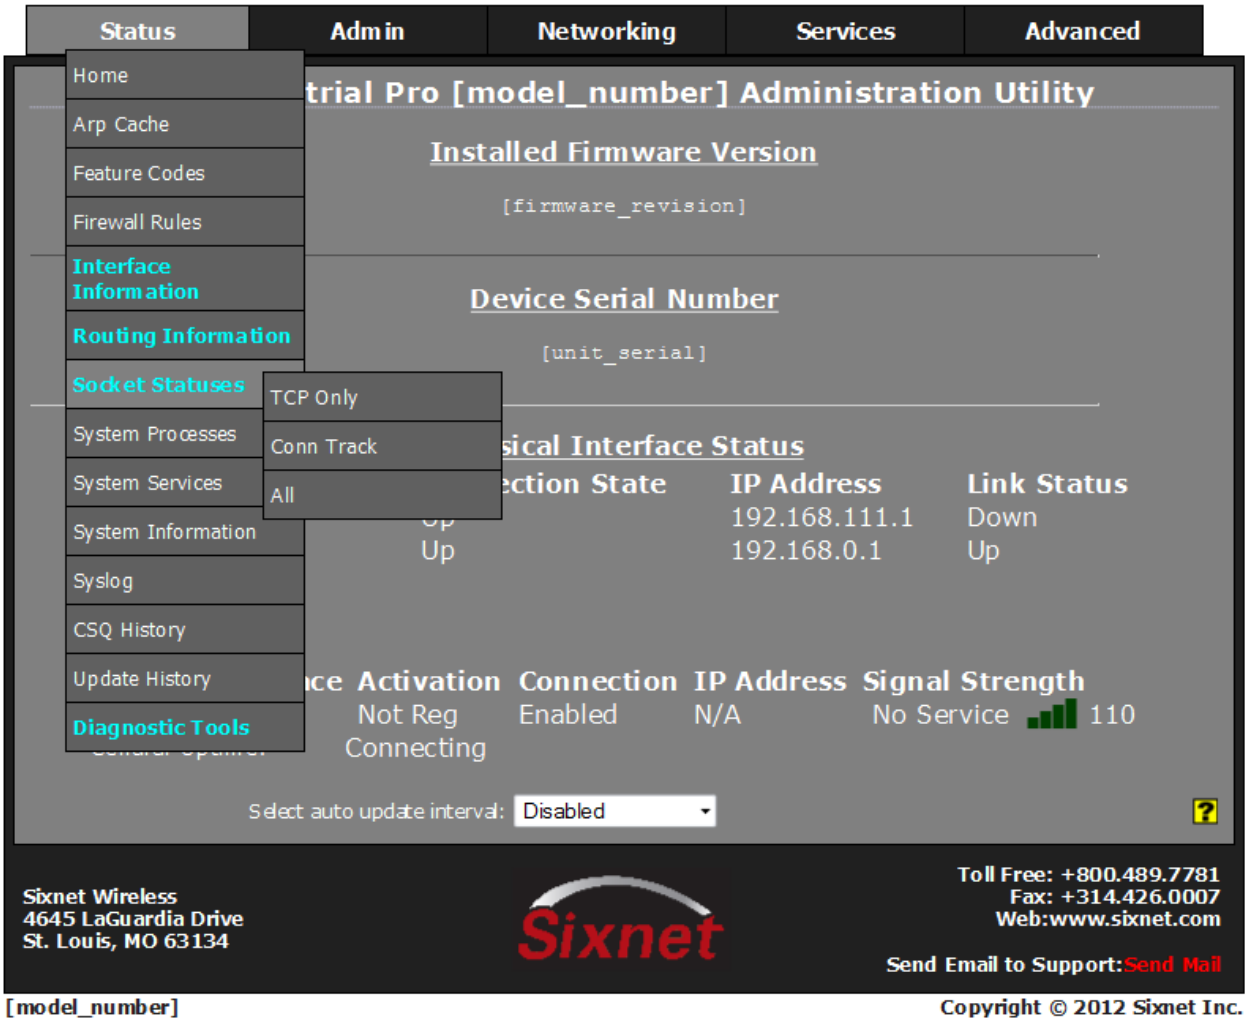

The “TCP Only” menu item will display the sockets that are connection-oriented (also known as “stream sockets.”)

Click on the “TCP Only” menu item and the following window will appear:

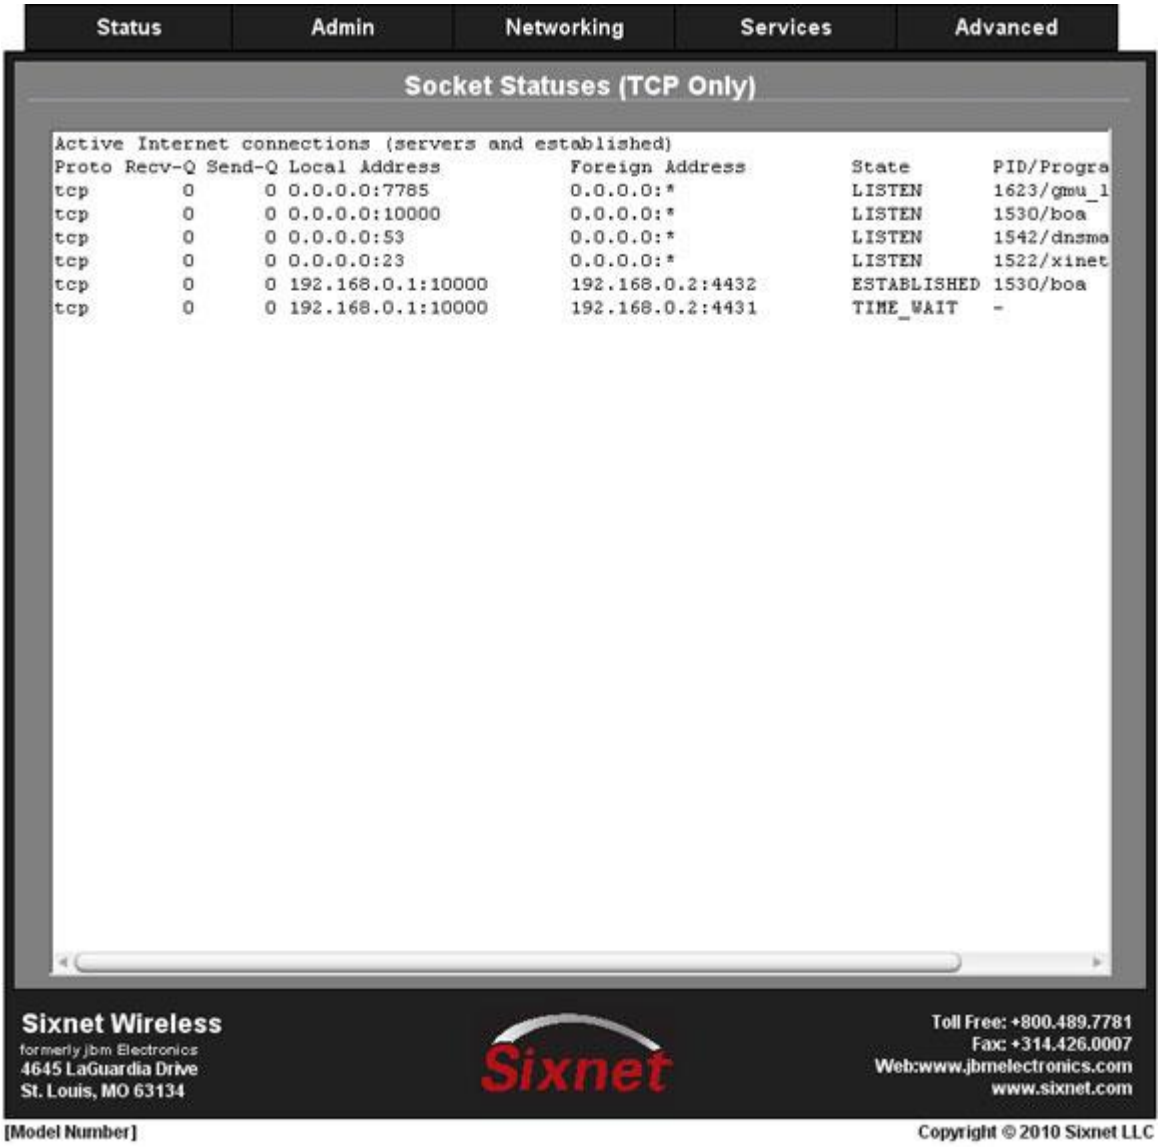

Conn Track is a connection tracker that displays more thorough information about the current socket connections. Connection tracking allows the kernel to keep track of all logical network connections or sessions, and thereby relate all of the packets which may make up that connection. NAT relies on this information to translate all related packets in the same way, and iptables can use this information to act as a stateful firewall.

Click on the "Conn Track " menu item and the following window will appear:

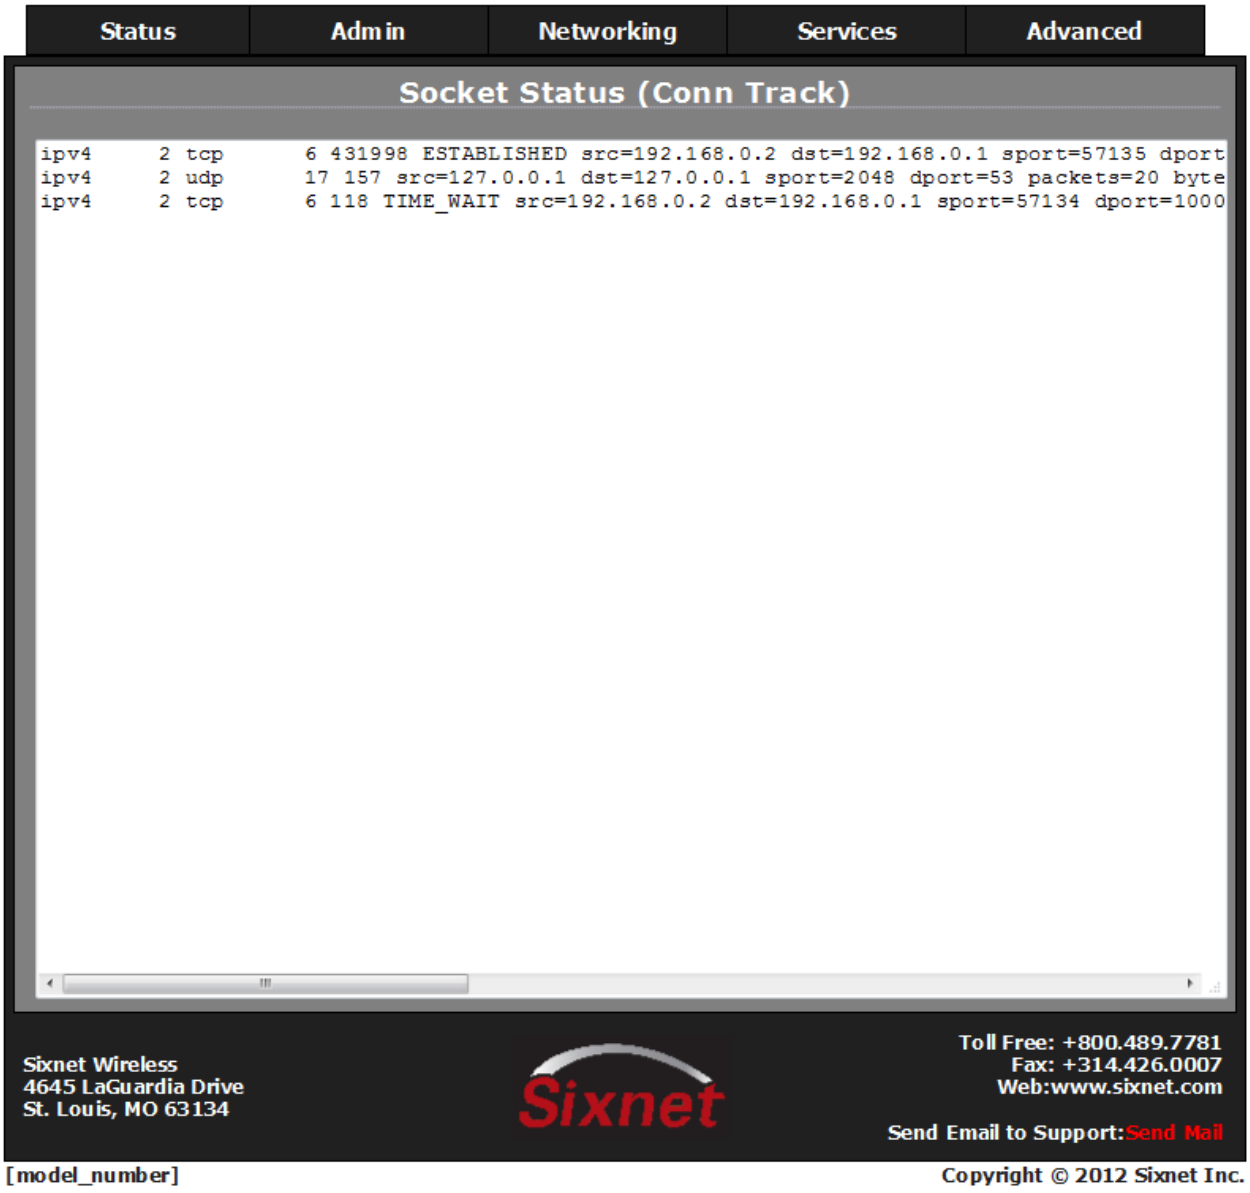

The “All” menu item will display the sockets that are considered connection-oriented and connectionless (also known as “datagram sockets”).

Click on the “All” menu item and the following window will appear:

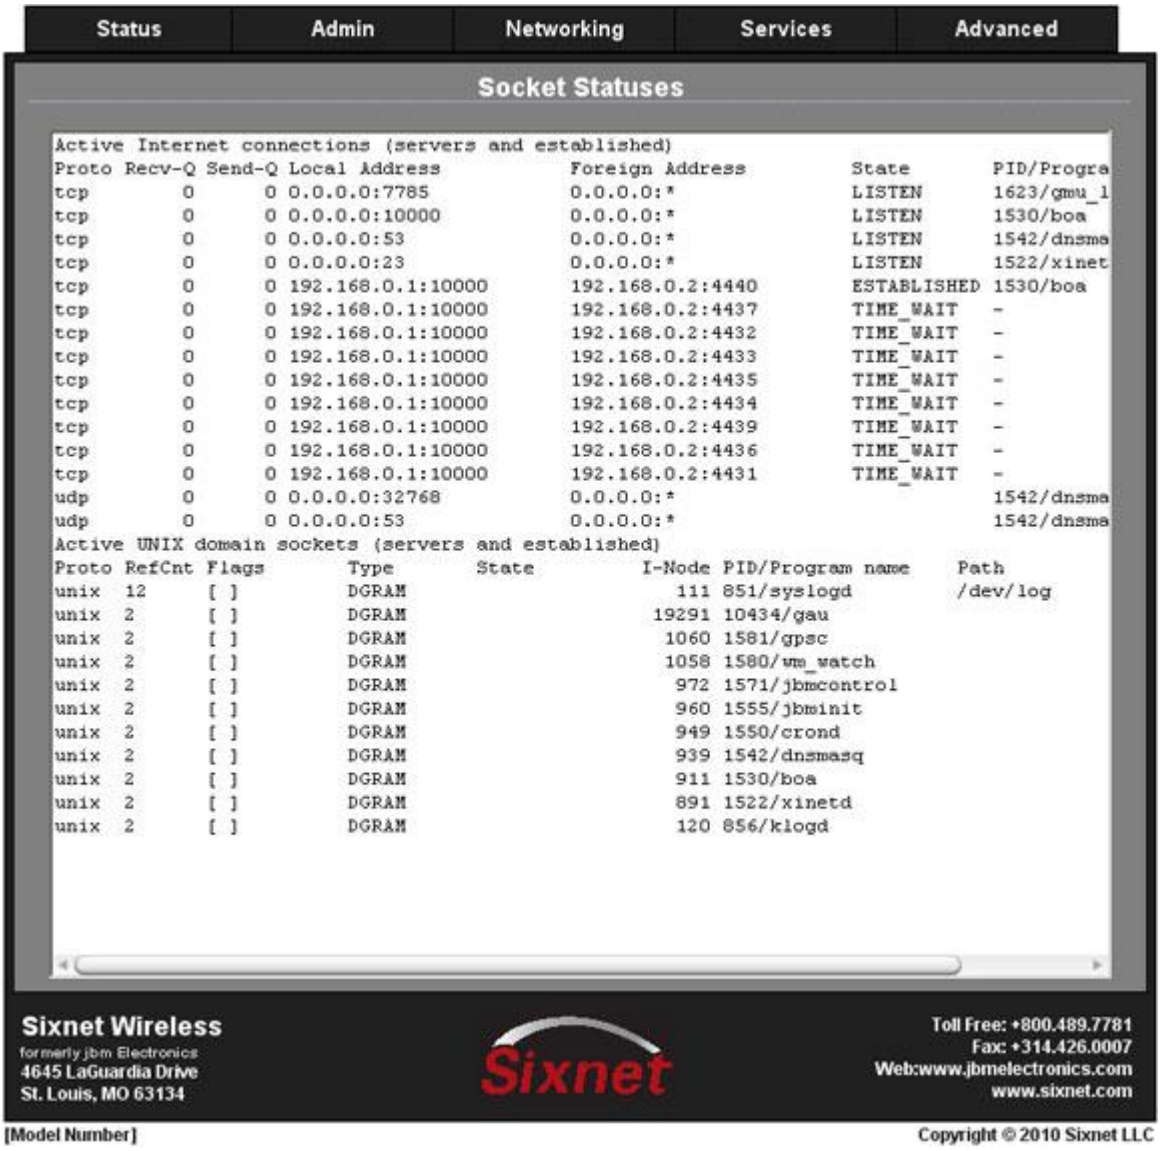
Status
Admin
Networking
Services
Advanced
Socket Statuses
Active Internet connections (servers and established)
Proto Recv-Q Send-Q Local Address Foreign Address State PID/Progra
tcp 0 0 0.0.0.0:7785 0.0.0.0:* LISTEN 1623/gmu_1
tcp 0 0 0.0.0.0:10000 0.0.0.0:* LISTEN 1530/boa
tcp 0 0 0.0.0.0:53 0.0.0.0:* LISTEN 1542/dnsma
tcp 0 0 0.0.0.0:23 0.0.0.0:* LISTEN 1522/xinet
tcp 0 0 192.168.0.1:10000 192.168.0.2:4440 ESTABLISHED 1530/boa
tcp 0 0 192.168.0.1:10000 192.168.0.2:4437 TIME_WAIT -
tcp 0 0 192.168.0.1:10000 192.168.0.2:4432 TIME_WAIT -
tcp 0 0 192.168.0.1:10000 192.168.0.2:4433 TIME_WAIT -
tcp 0 0 192.168.0.1:10000 192.168.0.2:4435 TIME_WAIT -
tcp 0 0 192.168.0.1:10000 192.168.0.2:4434 TIME_WAIT -
tcp 0 0 192.168.0.1:10000 192.168.0.2:4439 TIME_WAIT -
tcp 0 0 192.168.0.1:10000 192.168.0.2:4436 TIME_WAIT -
tcp 0 0 192.168.0.1:10000 192.168.0.2:4431 TIME_WAIT -
udp 0 0 0.0.0.0:32768 0.0.0.0:* 1542/dnsma
udp 0 0 0.0.0.0:53 0.0.0.0:* 1542/dnsma
Active UNIX domain sockets (servers and established)
Proto RefCnt Flags Type State I-Node PID/Program name Path
unix 12 [ ] DGRAM 111 851/syslogd /dev/log
unix 2 [ ] DGRAM 19291 10434/gau
unix 2 [ ] DGRAM 1060 1581/gpsc
unix 2 [ ] DGRAM 1058 1580/wm_watch
unix 2 [ ] DGRAM 972 1571/jbmcontrol
unix 2 [ ] DGRAM 960 1555/jbminit
unix 2 [ ] DGRAM 949 1550/crond
unix 2 [ ] DGRAM 939 1542/dnsmasq
unix 2 [ ] DGRAM 911 1530/boa
unix 2 [ ] DGRAM 891 1522/xinetd
unix 2 [ ] DGRAM 120 856/klogd
Sixnet Wireless
formerly jbm Electronics
4645 LaGuardia Drive
St. Louis, MO 63134
Sixnet
Toll Free: +800.489.7781
Fax: +314.426.0007
Web:www.jbmelectronics.com
www.sixnet.com
[Model Number]
Copyright © 2010 Sixnet LLC

3.2.7 System Processes

The "System Processes" menu item will display the current running processes on the Sixnet router:

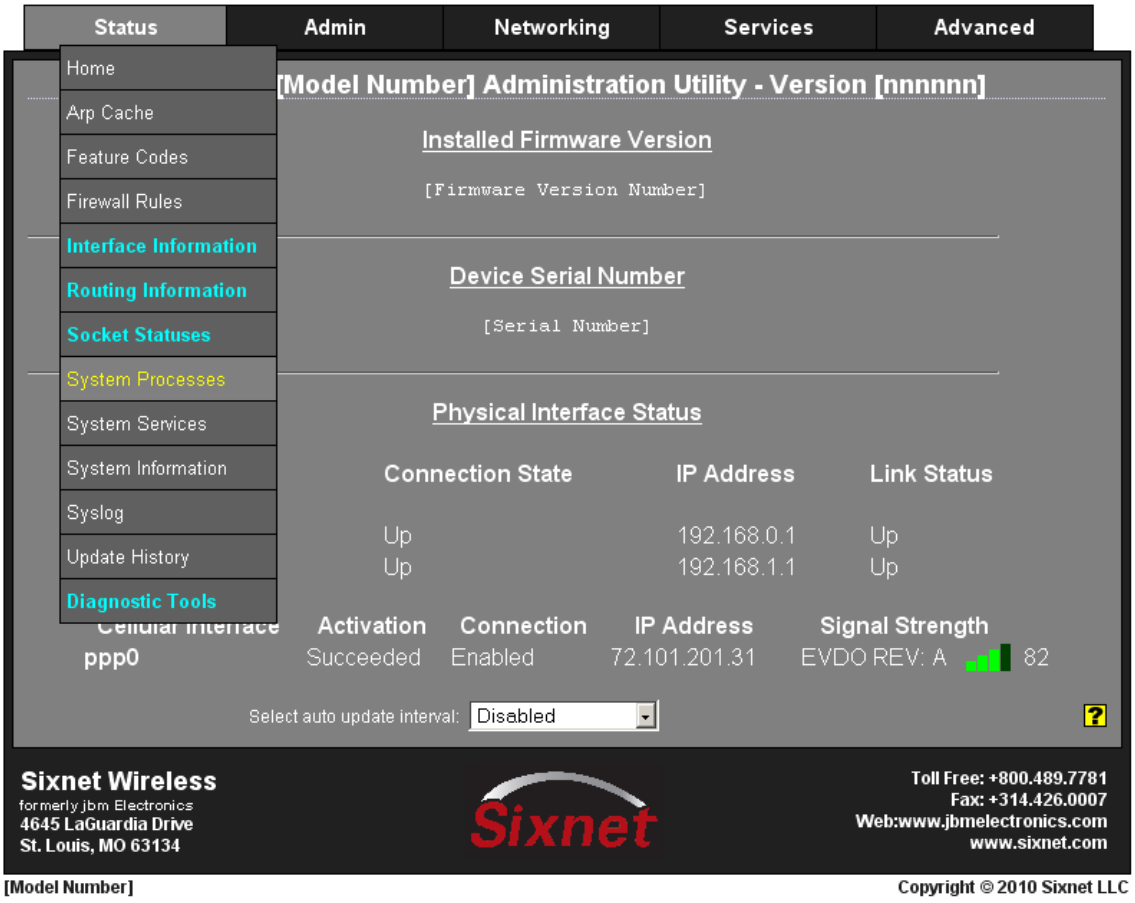

- Click on the “System Processes” menu item and the following window will appear:

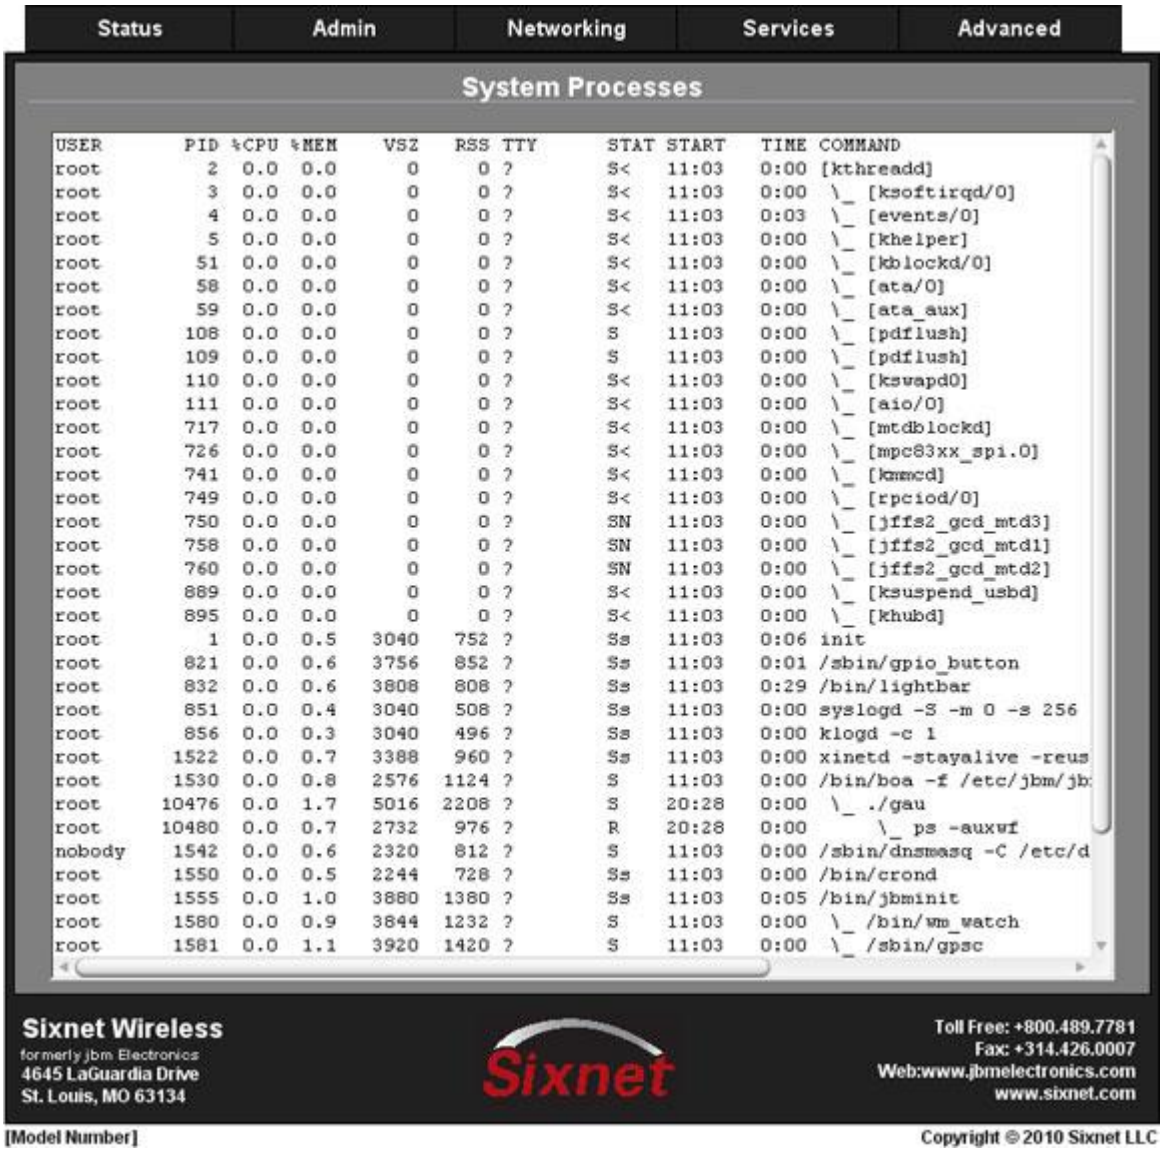
Status
Admin
Networking
Services
Advanced
System Processes
USER PID %CPU %MEM VSZ RSS TTY STAT START TIME COMMAND
root 2 0.0 0.0 0 0 ? S< 11:03 0:00 [kthreadd]
root 3 0.0 0.0 0 0 ? S< 11:03 0:00 _ [ksoftirqd/0]
root 4 0.0 0.0 0 0 ? S< 11:03 0:03 _ [events/0]
root 5 0.0 0.0 0 0 ? S< 11:03 0:00 _ [khelper]
root 51 0.0 0.0 0 0 ? S< 11:03 0:00 _ [kblockd/0]
root 58 0.0 0.0 0 0 ? S< 11:03 0:00 _ [ata/0]
root 59 0.0 0.0 0 0 ? S< 11:03 0:00 _ [ata_aux]
root 108 0.0 0.0 0 0 ? S 11:03 0:00 _ [pdflush]
root 109 0.0 0.0 0 0 ? S 11:03 0:00 _ [pdflush]
root 110 0.0 0.0 0 0 ? S< 11:03 0:00 _ [kswapd0]
root 111 0.0 0.0 0 0 ? S< 11:03 0:00 _ [aio/0]
root 717 0.0 0.0 0 0 ? S< 11:03 0:00 _ [mtdblockd]
root 726 0.0 0.0 0 0 ? S< 11:03 0:00 _ [mpc83xx_spi.0]
root 741 0.0 0.0 0 0 ? S< 11:03 0:00 _ [kmmcd]
root 749 0.0 0.0 0 0 ? S< 11:03 0:00 _ [rpciod/0]
root 750 0.0 0.0 0 0 ? SN 11:03 0:00 _ [jffs2_gcd_mtd3]
root 758 0.0 0.0 0 0 ? SN 11:03 0:00 _ [jffs2_gcd_mtd1]
root 760 0.0 0.0 0 0 ? SN 11:03 0:00 _ [jffs2_gcd_mtd2]
root 889 0.0 0.0 0 0 ? S< 11:03 0:00 _ [ksuspend_usbd]
root 895 0.0 0.0 0 0 ? S< 11:03 0:00 _ [khubd]
root 1 0.0 0.5 3040 752 ? Ss 11:03 0:06 init
root 821 0.0 0.6 3756 852 ? Ss 11:03 0:01 /sbin/gpio_button
root 832 0.0 0.6 3808 808 ? Ss 11:03 0:29 /bin/lightbar
root 851 0.0 0.4 3040 508 ? Ss 11:03 0:00 syslogd -S -m 0 -s 256
root 856 0.0 0.3 3040 496 ? Ss 11:03 0:00 klogd -c 1
root 1522 0.0 0.7 3388 960 ? Ss 11:03 0:00 xinetd -stayalive -reus
root 1530 0.0 0.8 2576 1124 ? S 11:03 0:00 /bin/boa -f /etc/jbm/jb
root 10476 0.0 1.7 5016 2208 ? S 20:28 0:00 _ ./gau
root 10480 0.0 0.7 2732 976 ? R 20:28 0:00 _ ps -auxwf
nobody 1542 0.0 0.6 2320 812 ? S 11:03 0:00 /sbin/dnsmasq -C /etc/d
root 1550 0.0 0.5 2244 728 ? Ss 11:03 0:00 /bin/crond
root 1555 0.0 1.0 3880 1380 ? Ss 11:03 0:05 /bin/jbminit
root 1580 0.0 0.9 3844 1232 ? S 11:03 0:00 _ /bin/wm_watch
root 1581 0.0 1.1 3920 1420 ? S 11:03 0:00 _ /sbin/gpsc
Sixnet Wireless
formerly jbm Electronics
4645 LaGuardia Drive
St. Louis, MO 63134
Sixnet
Toll Free: +800.489.7781
Fax: +314.426.0007
Web:www.jbmelectronics.com
www.sixnet.com
[Model Number]
Copyright © 2010 Sixnet LLC

3.2.8 System Services

The “System Services” menu item will display the status of the services available on the Sixnet router.

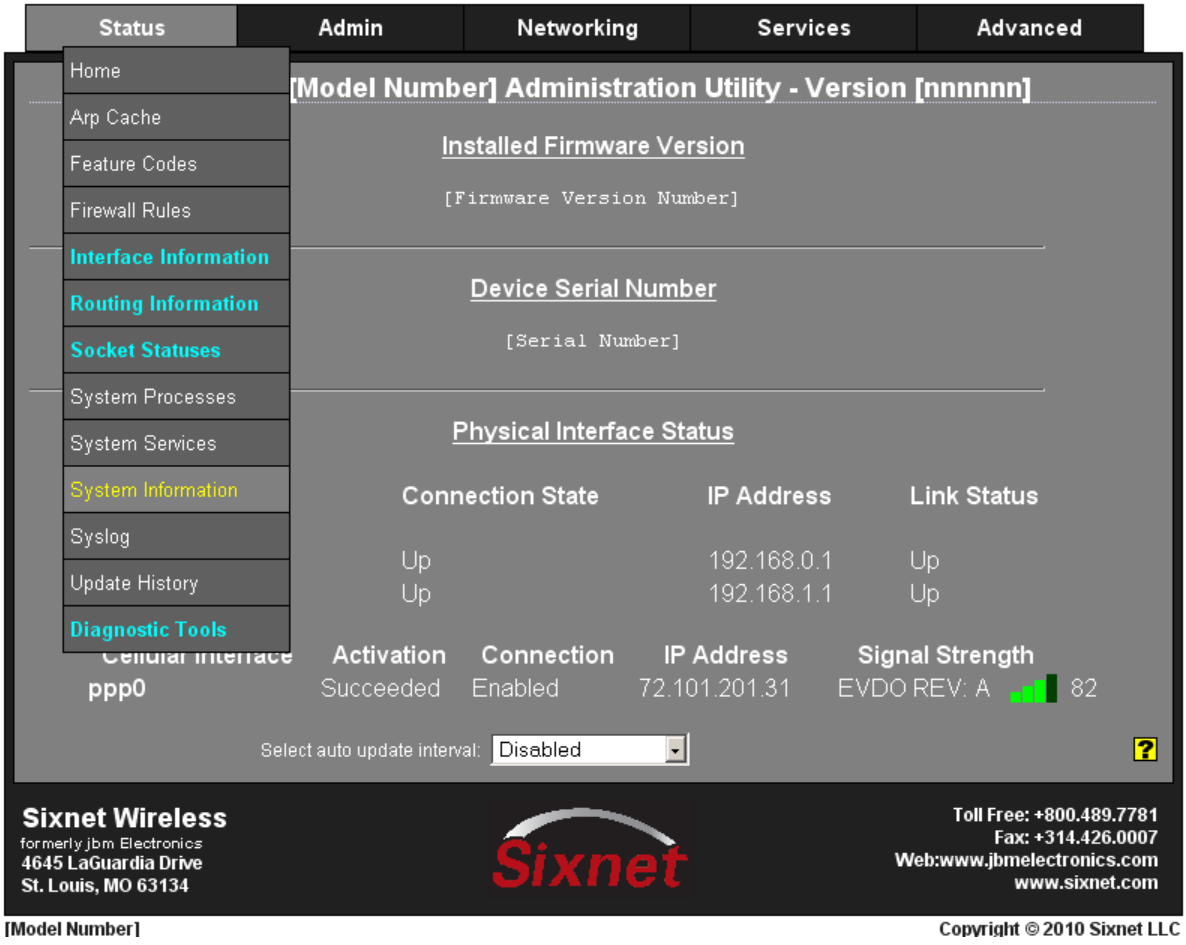

The columns represent the 'runlevel' of the service; your main concern is the column 3: shown in the table. Any service with "on" in column 3 will automatically restart if the unit is restarted in any way, for example by a reboot or an interruption in power.

- Click on the "System Services" menu item and the following window will appear:

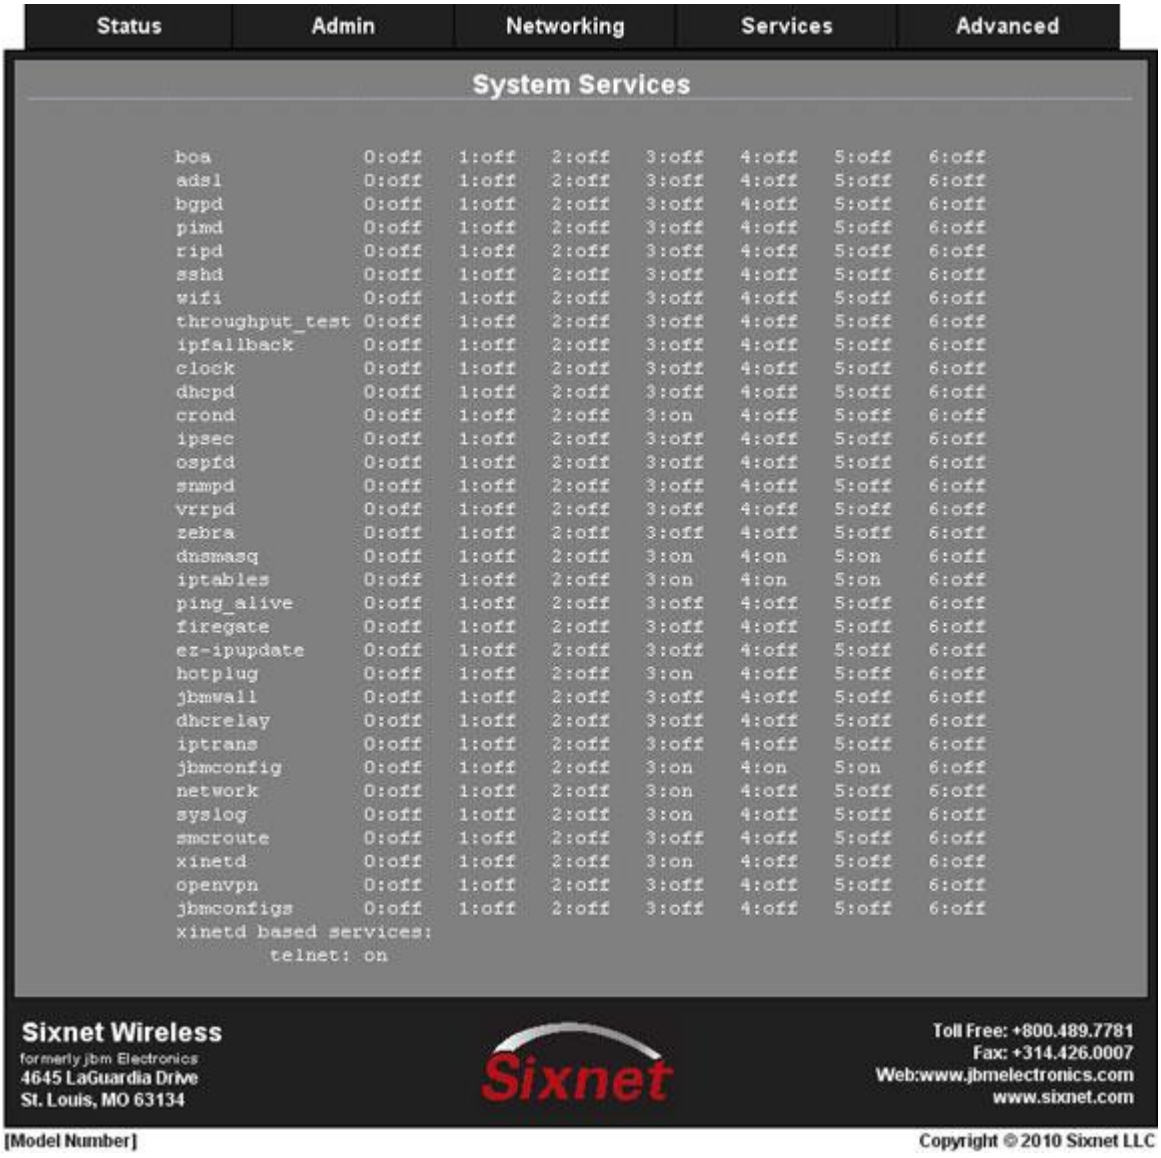
Status
Admin
Networking
Services
Advanced
System Services
boa 0:off 1:off 2:off 3:off 4:off 5:off 6:off
adsl 0:off 1:off 2:off 3:off 4:off 5:off 6:off
bgpd 0:off 1:off 2:off 3:off 4:off 5:off 6:off
pimd 0:off 1:off 2:off 3:off 4:off 5:off 6:off
ripd 0:off 1:off 2:off 3:off 4:off 5:off 6:off
sshd 0:off 1:off 2:off 3:off 4:off 5:off 6:off
wifi 0:off 1:off 2:off 3:off 4:off 5:off 6:off
throughput_test 0:off 1:off 2:off 3:off 4:off 5:off 6:off
ipfallback 0:off 1:off 2:off 3:off 4:off 5:off 6:off
clock 0:off 1:off 2:off 3:off 4:off 5:off 6:off
dhcpd 0:off 1:off 2:off 3:off 4:off 5:off 6:off
crond 0:off 1:off 2:off 3:on 4:off 5:off 6:off
ipsec 0:off 1:off 2:off 3:off 4:off 5:off 6:off
ospfd 0:off 1:off 2:off 3:off 4:off 5:off 6:off
snmpd 0:off 1:off 2:off 3:off 4:off 5:off 6:off
vrrpd 0:off 1:off 2:off 3:off 4:off 5:off 6:off
zebra 0:off 1:off 2:off 3:off 4:off 5:off 6:off
dnsmasq 0:off 1:off 2:off 3:on 4:on 5:on 6:off
iptables 0:off 1:off 2:off 3:on 4:on 5:on 6:off
ping_alive 0:off 1:off 2:off 3:off 4:off 5:off 6:off
firegate 0:off 1:off 2:off 3:off 4:off 5:off 6:off
ez-ipupdate 0:off 1:off 2:off 3:off 4:off 5:off 6:off
hotplug 0:off 1:off 2:off 3:on 4:off 5:off 6:off
jbmwall 0:off 1:off 2:off 3:off 4:off 5:off 6:off
dhcrelay 0:off 1:off 2:off 3:off 4:off 5:off 6:off
iptrans 0:off 1:off 2:off 3:off 4:off 5:off 6:off
jbmconfig 0:off 1:off 2:off 3:on 4:on 5:on 6:off
network 0:off 1:off 2:off 3:on 4:off 5:off 6:off
syslog 0:off 1:off 2:off 3:on 4:off 5:off 6:off
smcroute 0:off 1:off 2:off 3:off 4:off 5:off 6:off
xinetd 0:off 1:off 2:off 3:on 4:off 5:off 6:off
openvpn 0:off 1:off 2:off 3:off 4:off 5:off 6:off
jbmconfigs 0:off 1:off 2:off 3:off 4:off 5:off 6:off
xinetd based services:
telnet: on
Sixnet Wireless
formerly jbm Electronics
4645 LaGuardia Drive
St. Louis, MO 63134
Sixnet
Toll Free: +800.489.7781
Fax: +314.426.0007
Web:www.jbmelectronics.com
www.sixnet.com
[Model Number]
Copyright © 2010 Sixnet LLC

3.2.9 System Information

The “System Information” menu item will display the current usage of the file system in both the directory size and the memory utilization.

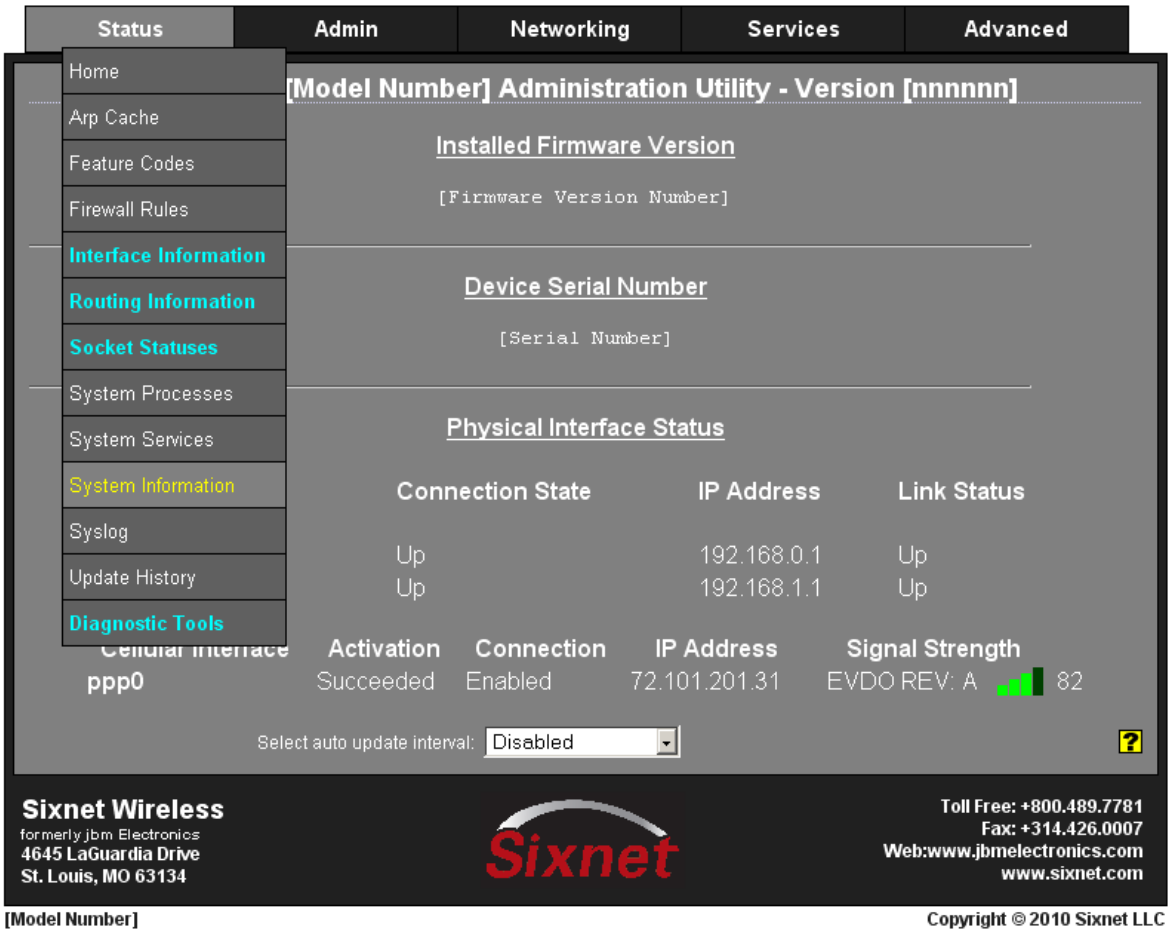

- Click on the “System Information” menu item and the following window will appear:

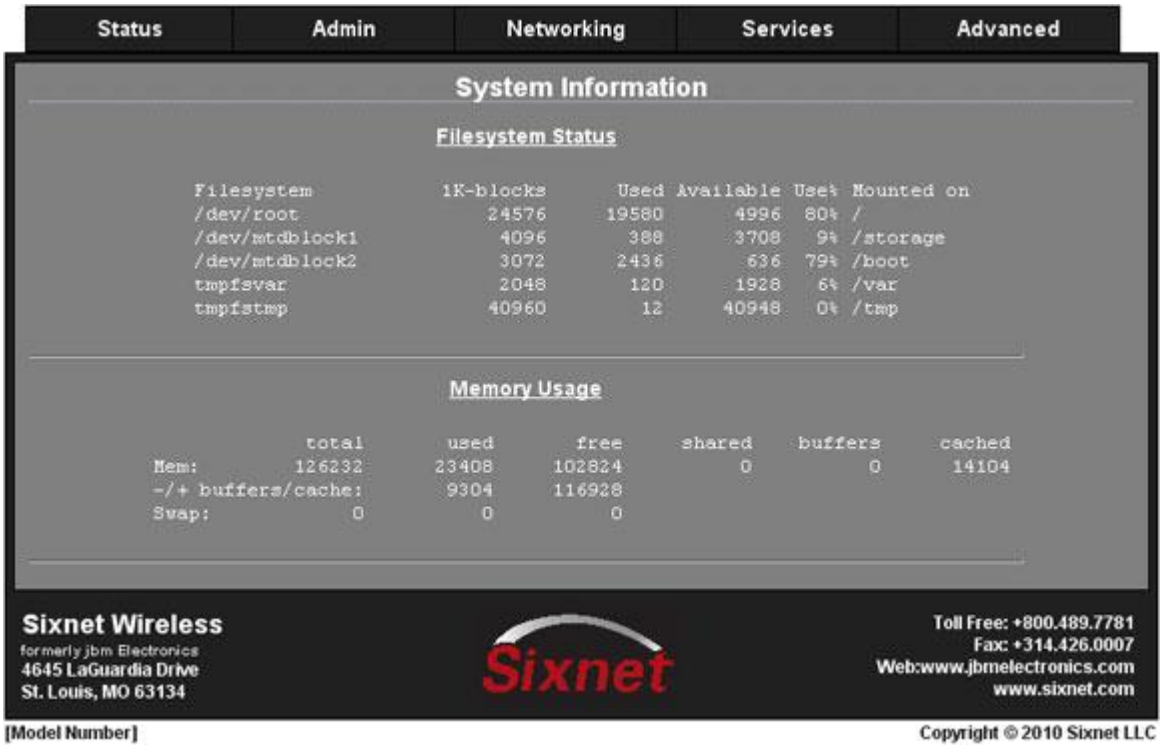

3.2.10 Syslog

The “Syslog” menu item will display the current entries into the syslog of the Sixnet router.

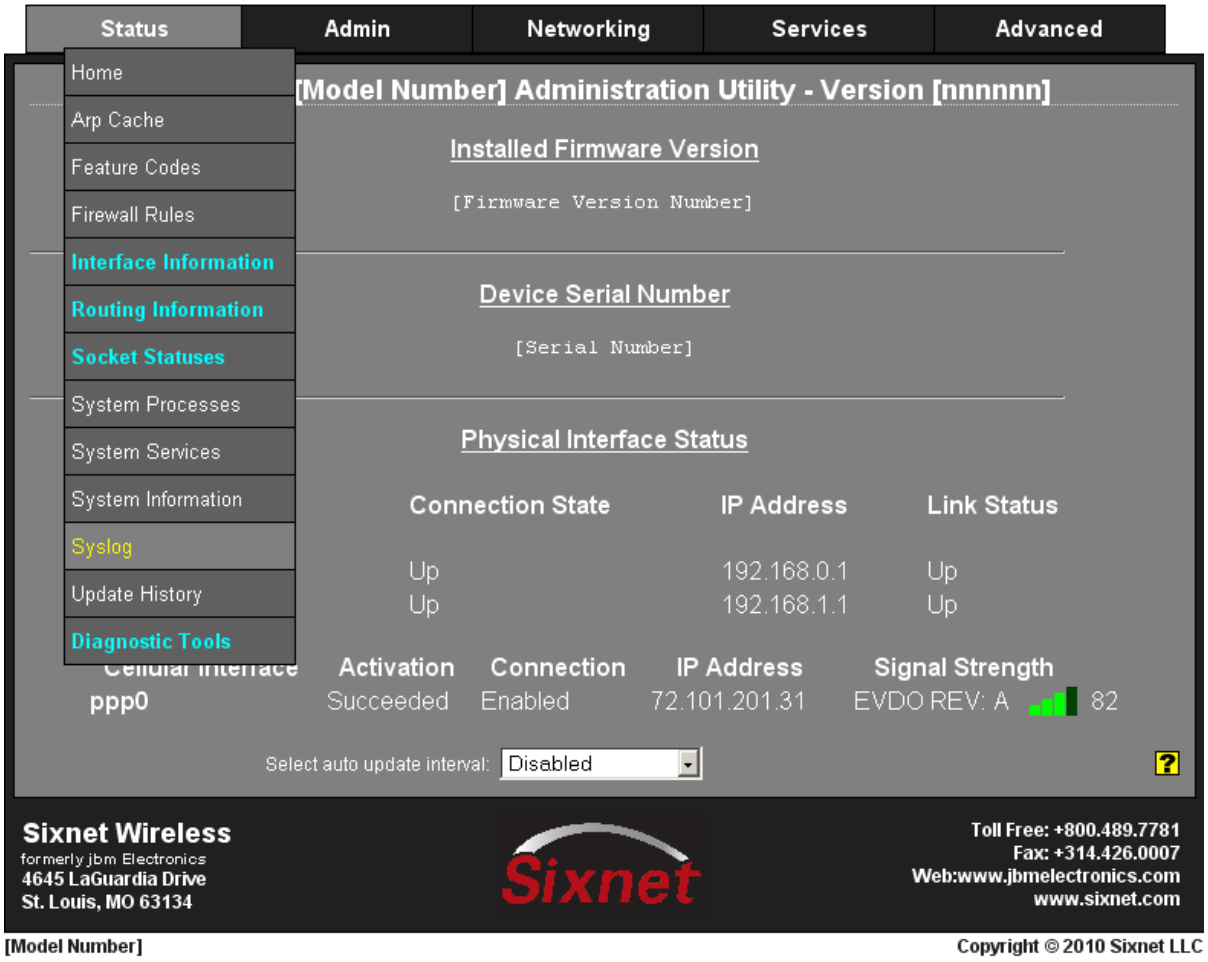

- Click on the “Syslog” menu item and the following window will appear:

This screen is configurable to allow searches using a string filter. Enter a filter string in the space provided, only lines containing the filter value(s) will be displayed via a 'grep' style filter mechanism.

Note: the filter value is case sensitive.

Status
Admin
Networking
Services
Advanced
System Log
Using filter: 'kernel'
Feb 13 20:54:31 kernel: loop: module loaded
Feb 13 20:54:31 kernel: Intel(R) PRO/1000 Network Driver - version 7.3.20-k2-NAPI
Feb 13 20:54:31 kernel: Copyright (c) 1999-2006 Intel Corporation.
Feb 13 20:54:31 kernel: Gianfar MII Bus: probed
Feb 13 20:54:31 kernel: fsl-gianfar fsl-gianfar.0: enabling Lossless Flow Control
Feb 13 20:54:31 kernel: eth0: Gianfar Ethernet Controller Version 1.3-skbr, 00:60:
Feb 13 20:54:31 kernel: GFAR: SKB Handler initialized at CPU#0(max=32)
Feb 13 20:54:31 kernel: eth0: MTU = 1500 (frame size=1526, truesize=1816)
Feb 13 20:54:31 kernel: eth0: Running with NAPI enabled
Feb 13 20:54:31 kernel: eth0: 64/64 RX/TX BD ring size
Feb 13 20:54:31 kernel: fsl-gianfar fsl-gianfar.1: enabling Lossless Flow Control
Feb 13 20:54:31 kernel: eth1: Gianfar Ethernet Controller Version 1.3-skbr, 00:60:
Feb 13 20:54:31 kernel: GFAR: SKB Handler initialized at CPU#0(max=32)
Feb 13 20:54:31 kernel: eth1: MTU = 1500 (frame size=1526, truesize=1816)
Feb 13 20:54:31 kernel: eth1: Running with NAPI enabled
Feb 13 20:54:31 kernel: eth1: 64/64 RX/TX BD ring size
Feb 13 20:54:31 kernel: e100: Intel(R) PRO/100 Network Driver, 3.5.23-k4-NAPI
Feb 13 20:54:31 kernel: e100: Copyright(c) 1999-2006 Intel Corporation
Always scroll display to end
Enter (optional) filter string:
kernel
Select # of lines to display:
Last 250
Enable Auto update?:
No
Select update interval:
Every 15 seconds
Refresh
Download
Sixnet Wireless
formerly jbm Electronics
4645 LaGuardia Drive
St. Louis, MO 63134
Sixnet
Toll Free: +800.489.7781
Fax: +314.426.0007
Web:www.jbmelectronics.com
www.sixnet.com
[Model Number]
Copyright © 2010 Sixnet LLC

You have the option of selecting the number of lines to display, enable the auto update function and set the frequency of the updates interval.

3.2.11 CSQ History

CSQ stands for Cellular Signal Quality. The "CSQ History" menu item will display a listing of recent cellular signal quality. It will include Module model number, IMEI, MDN as well as the date / time, CSQ, ECIO and Channel information.

Click on CSQ History and the following screen will appear:

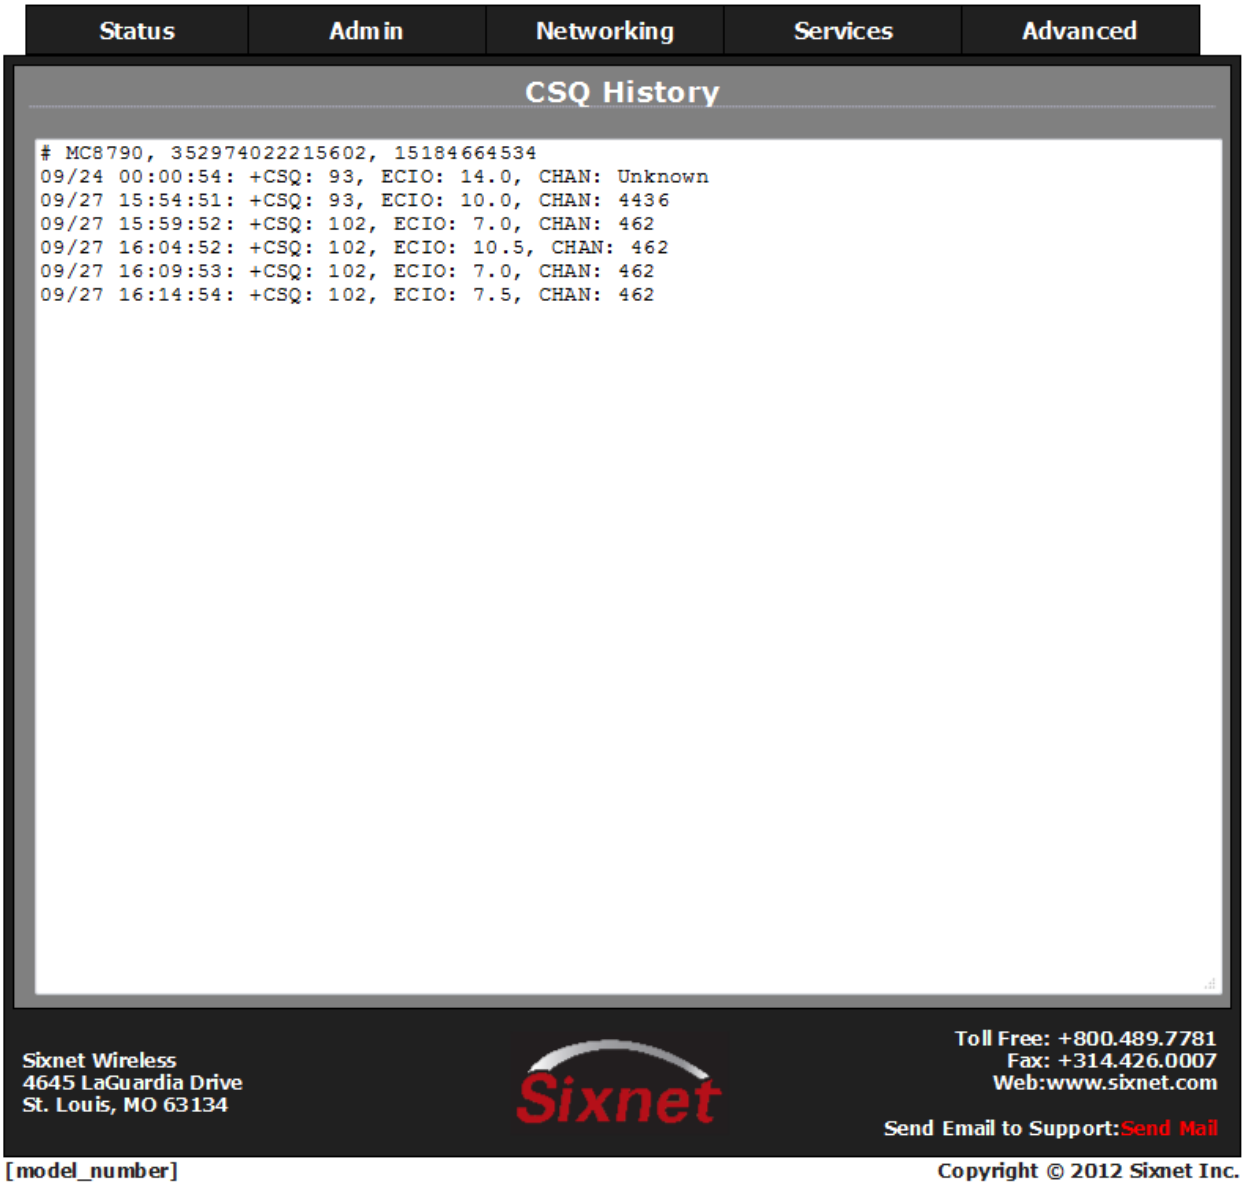

3.2.12 Update History

The "Update History" menu item will display a listing of any software updates that have been loaded onto the Sixnet router.

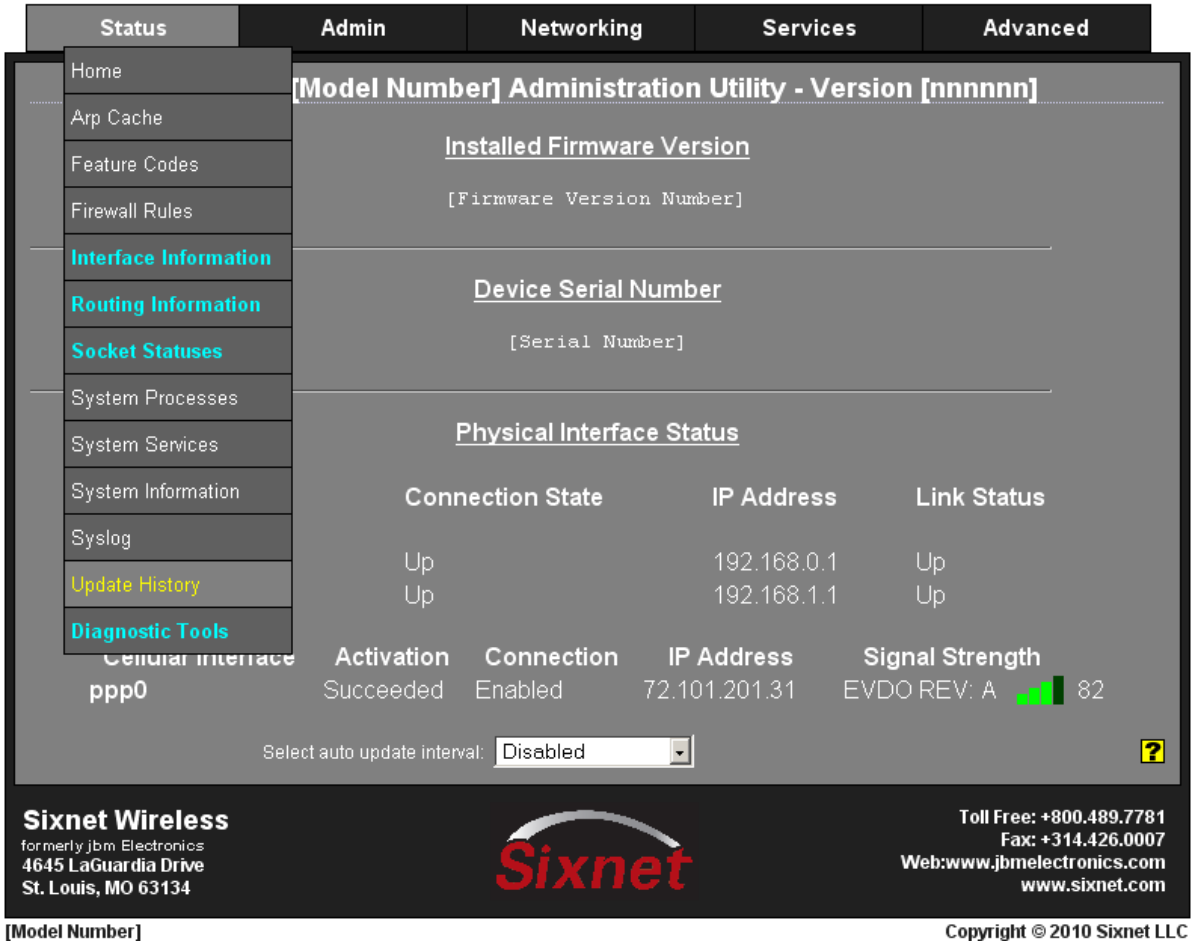

3.2.13 Diagnostic Tools

The "Diagnostic Tools" menu item is sub sectioned into Ping, Socket Test, Speed Test and Traceroute. These are useful in troubleshooting connectivity of the Sixnet router to the Internet or the network the router is connected to.

The "Ping" menu item allows you to input an address either as an IP Address or a URL for testing the destination availability.

- Click on the "Ping" menu item and the following window will appear:

Type in the IP Address or URL you wish to ping and click on the "Ping" button to use any interface that the router determines as having the route to the designated address. It is recommended to start with a locally accessible IP address to confirm communication to an interface's local subnet. Then proceed to addresses on distant networks. Your local default gateway is a good test, and this IP can be found in your routing table. A commonly available internet server available to test against is 4.2.2.2.

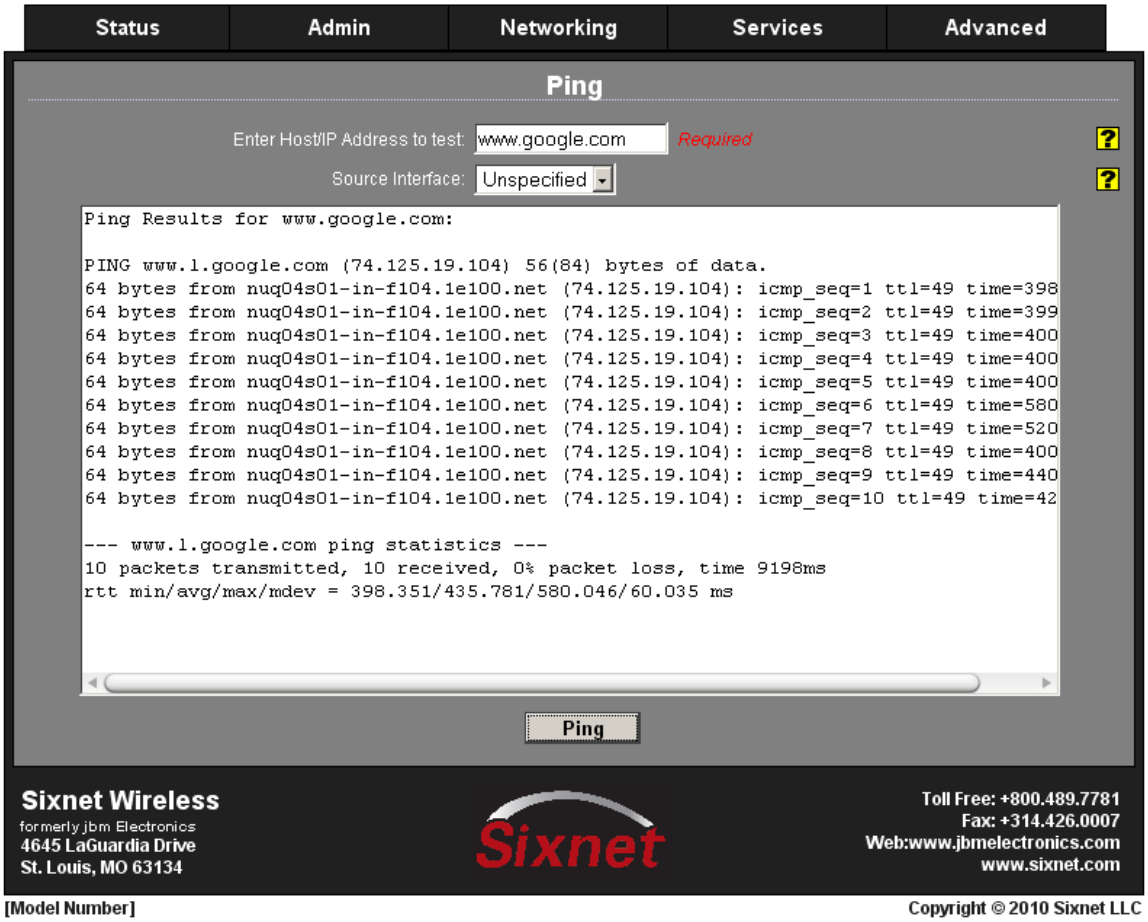
Status
Admin
Networking
Services
Advanced
Ping
Enter Host/IP Address to test:
www.google.com
Required
Source Interface:
Unspecified
Ping Results for www.google.com:
PING www.l.google.com (74.125.19.104) 56(84) bytes of data.
64 bytes from nuq04s01-in-f104.1e100.net (74.125.19.104): icmp_seq=1 ttl=49 time=398
64 bytes from nuq04s01-in-f104.1e100.net (74.125.19.104): icmp_seq=2 ttl=49 time=399
64 bytes from nuq04s01-in-f104.1e100.net (74.125.19.104): icmp_seq=3 ttl=49 time=400
64 bytes from nuq04s01-in-f104.1e100.net (74.125.19.104): icmp_seq=4 ttl=49 time=400
64 bytes from nuq04s01-in-f104.1e100.net (74.125.19.104): icmp_seq=5 ttl=49 time=400
64 bytes from nuq04s01-in-f104.1e100.net (74.125.19.104): icmp_seq=6 ttl=49 time=580
64 bytes from nuq04s01-in-f104.1e100.net (74.125.19.104): icmp_seq=7 ttl=49 time=520
64 bytes from nuq04s01-in-f104.1e100.net (74.125.19.104): icmp_seq=8 ttl=49 time=400
64 bytes from nuq04s01-in-f104.1e100.net (74.125.19.104): icmp_seq=9 ttl=49 time=440
64 bytes from nuq04s01-in-f104.1e100.net (74.125.19.104): icmp_seq=10 ttl=49 time=42
--- www.l.google.com ping statistics ---
10 packets transmitted, 10 received, 0% packet loss, time 9198ms
rtt min/avg/max/mdev = 398.351/435.781/580.046/60.035 ms
Ping
Sixnet Wireless
formerly jbm Electronics
4645 LaGuardia Drive
St. Louis, MO 63134
Sixnet
Toll Free: +800.489.7781
Fax: +314.426.0007
Web:www.jbmelectronics.com
www.sixnet.com
[Model Number]
Copyright © 2010 Sixnet LLC

The Source Interface offers the option of using different interfaces to send the ping through. This is useful if you have a VPN Tunnel in place. Testing the connection through the VPN Tunnel is required to verify connectivity through the tunnel.

- Choose the interface that the VPN Tunnel has listed for the Local Subnet end-point, i.e. if the Left Subnet is 10.100.100.0/24 and eth1 has 10.100.100.1 as its IP Address, then choose Source Interface: eth1.
- Specify a host IP Address at the head-end to ping through the tunnel.
- Click on the "Ping" button to see the result.

The "Socket Test" menu item will allows you to "telnet" to desire destination IP and Port address to verify the socket availability.

- Click on the “Socket Test” menu item and the following window will appear:

Type in the IP or URL and Port Address you wish to telnet to and click on the "Test" button to proceed with the TCP socket handshaking to verify and display socket availability. The following screens illustrate the successful and failed test result.

Status
Admin
Networking
Services
Advanced
TCP Socket test with Telnet
Enter Host/IP Address to test:
192.168.10.101
Required
Enter Destination Port Address to test:
5001
Required
Telnet Results for 192.168.10.101 5001
telnet: Unable to connect to remote host: No route to host
Trying 192.168.10.101(35091)...
..Test Complete..
Test
Sixnet Wireless
4645 LaGuardia Drive
St. Louis, MO 63134
Sixnet
Toll Free: +800.489.7781
Fax: +314.426.0007
Web:www.sixnet.com
Copyright © 2010 Sixnet LLC

The “Speed Test” menu item will allows you to test the bandwidth and latency of a unit’s cellular connection. Note: Only for testing units with an activated cellular connection.

- Click on “Speed Test” option, the following screen will appear.

- Click the “Start” button, which will begin the speed test. Depending on the bandwidth of the connection under test, this can take up to 30 minutes. When finished, the speed test will generate report of the latency and bandwidth results for this test. These results will vary widely based on cellular technology (2G vs 3G vs 4G) and signal strength. Below is the similar speed test result.

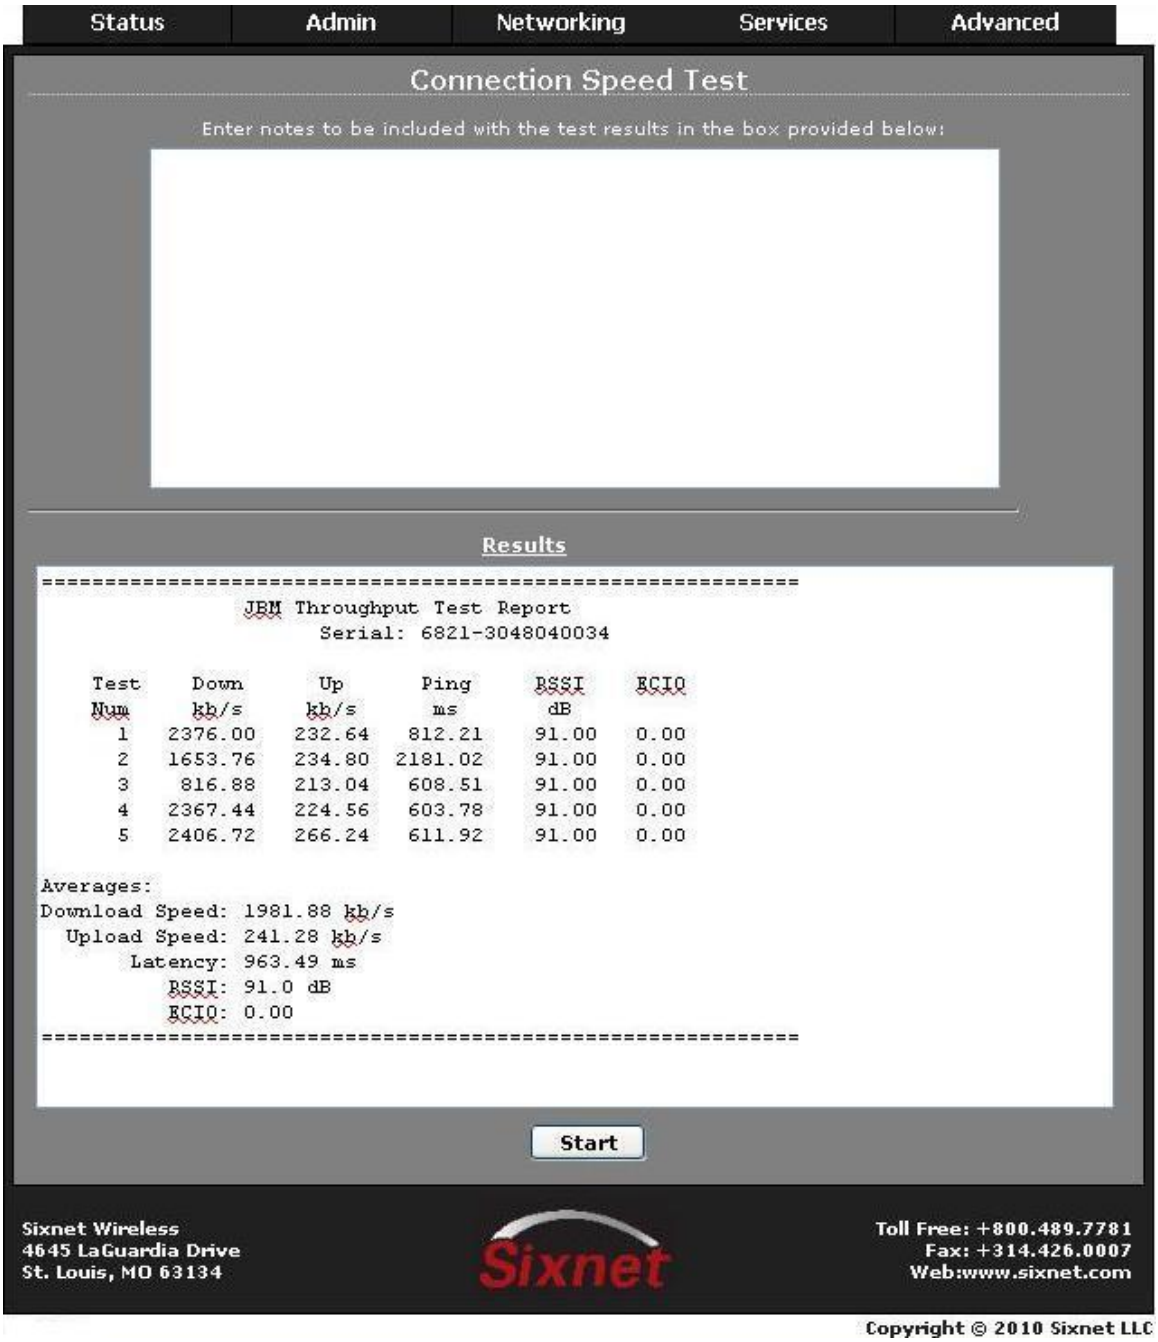
Status
Admin
Networking
Services
Advanced
Connection Speed Test
Enter notes to be included with the test results in the box provided below:
Results
JBM Throughput Test Report
Serial: 6821-3048040034
Test Num | Down kb/s | Up kb/s | Ping ms | RSSI dB | ECIO
1 2376.00 232.64 812.21 91.00 0.00
2 1653.76 234.80 2181.02 91.00 0.00
3 816.88 213.04 608.51 91.00 0.00
4 2367.44 224.56 603.78 91.00 0.00
5 2406.72 266.24 611.92 91.00 0.00
Averages:
Download Speed: 1981.88 kb/s
Upload Speed: 241.28 kb/s
Latency: 963.49 ms
RSSI: 91.0 dB
ECIO: 0.00
Start
Sixnet Wireless
4645 LaGuardia Drive
St. Louis, MO 63134
Sixnet
Toll Free: +800.489.7781
Fax: +314.426.0007
Web:www.sixnet.com
Copyright © 2010 Sixnet LLC

The “Traceroute” menu item will allows you to watch the route traverse the Internet to the specified IP Address or URL.

- Click on the “Traceroute” menu item and the following window will appear:

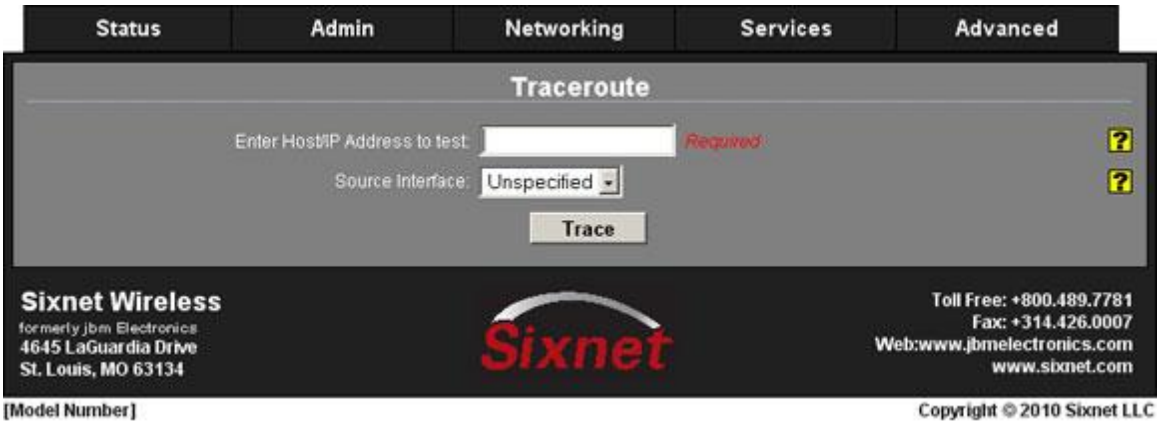

Type in the IP Address or URL you wish to trace and click on the "Trace" button to use any interface that the router determines as having the route to the designated address.

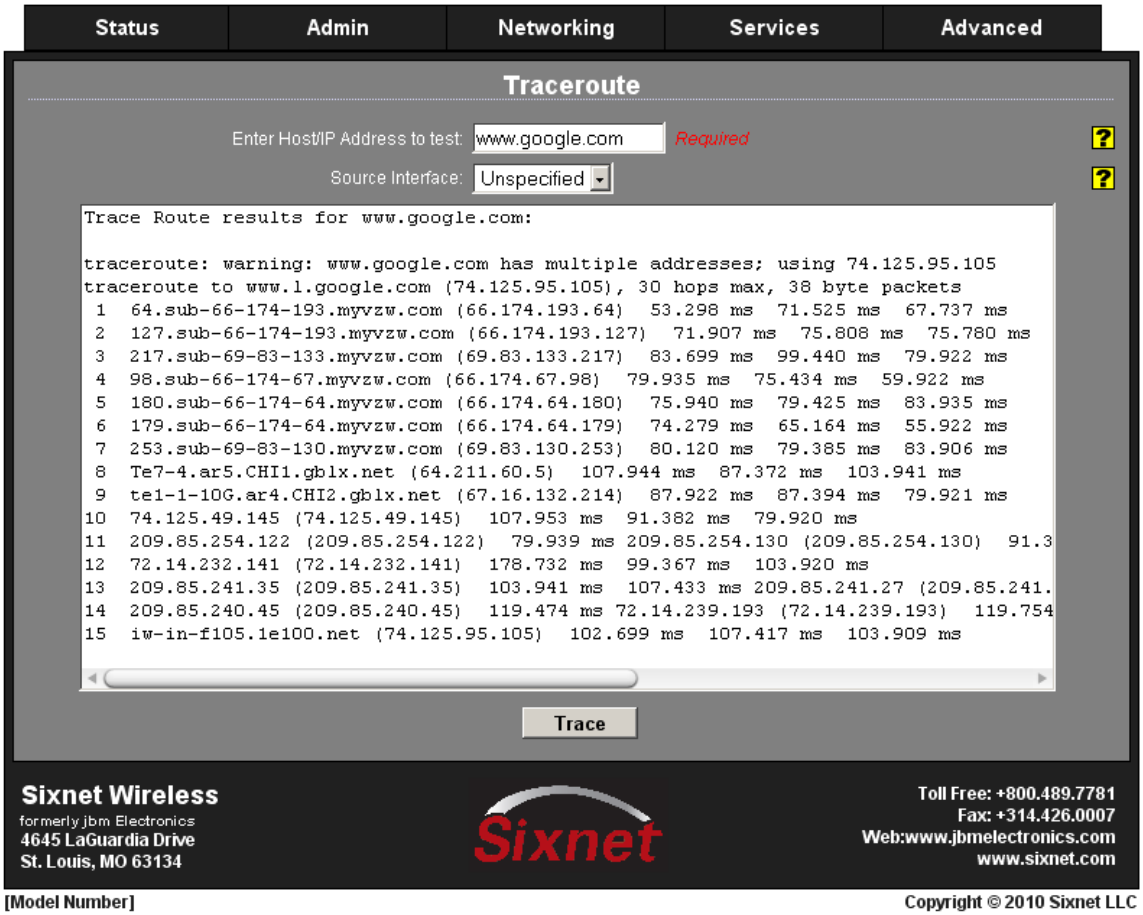

It is recommended to start with a locally accessible IP address to confirm communication to an interface's local subnet. Then proceed to addresses on distant networks. Your local default gateway is a good test, and this IP can be found in your routing table. A commonly available internet server available to test against is 4.2.2.2.

The Source Interface offers the option of using different interfaces to send the trace through. This is useful should you have a VPN Tunnel in place and testing the connection through the VPN Tunnel is required to verify connectivity through the tunnel.

- Choose the interface that the VPN Tunnel has listed for the Local Subnet end-point, i.e. if the Left Subnet is 10.100.100.0/24 and eth1 has 10.100.100.1 as its IP Address, then choose Source Interface: eth1.
- Specify a host IP Address at the head-end to ping through the tunnel.
- Click on the “Trace” button to see the result.

3.3 Admin Tab

The Admin Tab is where the administration of the Sixnet router takes place. From here you can configure how the unit is accessed, manage SSL/IPSEC certificates, restore the unit to factory defaults, update the firmware, gather the configurations to send to support for analysis, gather a report on the functions of the router to send to support for analysis, install system patches (packages), remotely reboot the router, and configure the system time.

3.3.1 Access Settings

The "Access Settings" menu item allows you to change how the unit's GUI interface is accessed, either by HTTP or HTTPS. You can also change the password used to access the GUI interface.

Click on the "Access Settings" menu item and the following window will appear:

To change the access method:

- Click on the pull down menu next to "Select Web Access Method" and select the method by which you would like to access the Gateway Administration Utility. You do not need to enter the password in order to change the access method. Note: The HTTP method can result in better performance and faster page load times; however, it is less secure than the HTTPS method, which uses data encryption to provide a secure connection.

- If you are not changing the password, click on the "Apply" button for changes to take effect.

To change the password:

- Enter the new password in the "Enter New Password" field. Note: For a secure password, choose one that is at least six characters long, which is not a common word and comprised of a mixture of upper and lower case characters and numbers.

- Re-enter the new password in the “Confirm New Password” field.
- Click on the “Apply” button for the changes to take effect.

- Enter the current password in the “Enter Current Password” field.

3.3.2 Certificate Manager

The "Certificate Manager" gives you the option of adding a certificate, deleting a certificate, or editing a current certificate.

Click on the "Certificate Manager" menu item and the following window will appear:

To add a certificate:

- Click on the "Add" button and the following pop-up window will appear

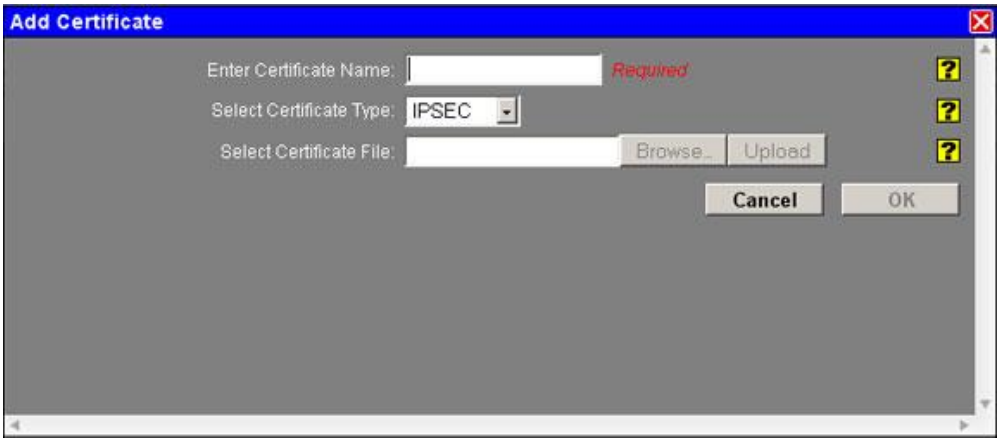

- Enter a descriptive name to be associated with the Certificate File to be uploaded. This name will be used later in fields where selection of a certificate is required. The descriptive name can contain only upper and/or lower case **letters**, and **digits**.

- Select the type of certificate that you will be uploading. Each certificate is stored in a unique repository, depending on the service that will be using it. The certificate file name can contain only upper and/or lower case letters, digits, '-', '_' and must end with .ca, .csr, .crt, .key, or .pem.

Possible Choices include:

- IPsec Cert: This will specify a certificate to be used to authenticate a VPN connection. A server and client certificate will be required.
- IPsec Key: An RSA key must be provided for any client certificate uploaded. If this is signed with a password, that will need to be entered in the IPSec as well.
- IPsec CA: This specifies a Certificate Authority. Please include a CA valid for each signed certificate.
- SSL: This certificate will be available for SSL Connections as a Server Certificate, or a Client Certificate.
- SSLVPN: This certificate will be available for SSL VPN tunnels.

- Once you have entered a value into the **Certificate Name** field, the **Browse** button will be enabled and can be clicked to select a file from your local system for upload. When a valid file name is selected, the Upload button is enabled and can be clicked to **upload** the selected file to the device. The certificate file name can contain only upper and/or lower case letters, digits, '-', '_' and must end with .ca, .csr, .crt, .key, or .pem. NOTE: SSL type certificates must include the key and cert portions, and the key must not be password encrypted. Click on the file and click "OK".

- Click on the "OK" button, then click on the "Apply" button for changes to take effect.

3.3.3 Factory Defaults

The "Factory Defaults" menu item allows you to restore the configuration back to factory default settings.

- Click on the "Factory Default" menu item and the following window will appear:

To restore the Sixnet router to factory default settings click on the "Restore" button.

You will see the following warning message:

The page at http://‹IP Address›:10000 says:
This action will cause the device to revert the Master Configuration file to
default factory settings and reboot.
Your connection will be lost.
The default network settings could render the device incommunicable by any
means other than a direct physical connection.
Are you sure you want to proceed?
Cancel
OK

- Click on the “OK” button to acknowledge the warning

The Sixnet router is now reset back to default factory configuration settings.

3.3.4 Firmware Update

The "Firmware Update" menu item allows you to upgrade the firmware of the Sixnet router to the latest version to take advantage of advanced features.

- Click on the "Firmware Update" menu item and the following window will appear:

To upgrade the firmware of the Sixnet router:

- Check the "Preserve Current Configuration" box to cause the device to save its current configuration and restore it after the firmware image is installed.
- Select the firmware image file type from the drop down list.

Note: For SN-BT model devices, you need to select the "Boot File System" type and "Browse" to open "boot" file image first and click on "Upload" button for uploading the boot file. Then once this step is completed, select "Root File System" type and "Browse" to open "root" file image and click on "Upload" button for uploading the root file.

For D-series model devices such as (R3100, R3300, R1100, etc), you need to select "Bin File System" type and "Browse" to open "bin" file image and click on "Upload" button for uploading the bin file.

- Click on the "Upload" button.

You will see the following warning pop-up:

The page at http://‹IP Address›:10000 says:
This action will cause the device to be be completely wiped clean and have a new system image installed which will result in the entire device configuration to be reset to its factory defaults.
This includes communication interface settings.
Your connection to the device will be terminated.
If the device is installed on a remote network, the new default settings could render the device incommunicable.
Are you sure you want to proceed?
Cancel
OK

- Click on the “OK” button to acknowledge the warning

NOTE: This procedure could take anywhere from 6 to 10 minutes to complete.

WARNING: It is extremely important that the power to the unit is not interrupted as this could cause the unit to become corrupt and require shipment back to the factory to correct.

3.3.5 Gather Configs

The "Gather Configs" menu item allows you to zip up the configuration files of the Sixnet router in order to send them to the Sixnet support personnel for review.

- Click on the "Gather Configs" menu item and the following window will appear:

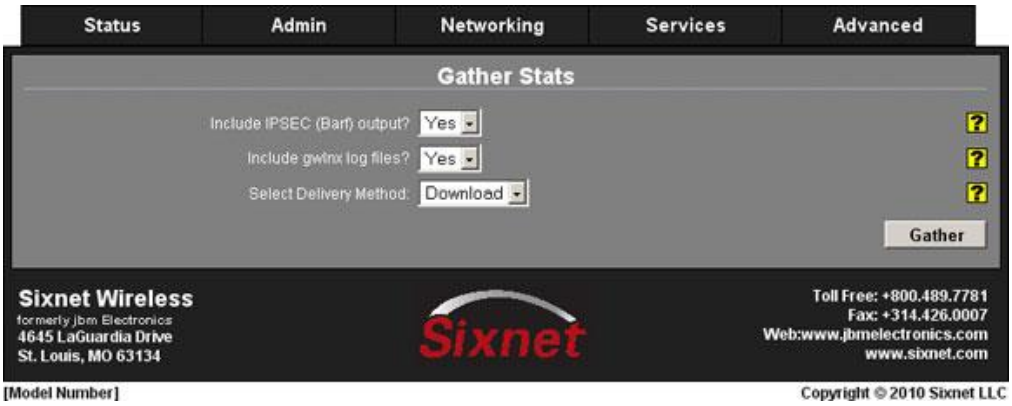

To gather the configurations of the Sixnet router:

- Choose whether you want to include all of the Sixnet files by clicking on the pull down menu next to "Include all Sixnet files?" and choose "No" or "Yes". (These files are located in the /etc/Sixnet/ directory)
- Choose whether you want to include the GWLNX files by clicking on the pull down menu next to "Include gwlnx files?" and choose "No" or "Yes". (These are the files that control Protocol Conversion)
- Choose whether you want to include the network files by clicking on the pull down menu next to "Include all network files?" and choose "No" or "Yes". (These files include the Ethernet interfaces, and GRE interfaces)
- Choose the method of delivery:
  - If you are downloading the zipped config file to your computer system, click on the pull down menu next to "Select Delivery Method:" and choose "Download"
  - Click on the "Gather" button

You will get the following pop-up window:

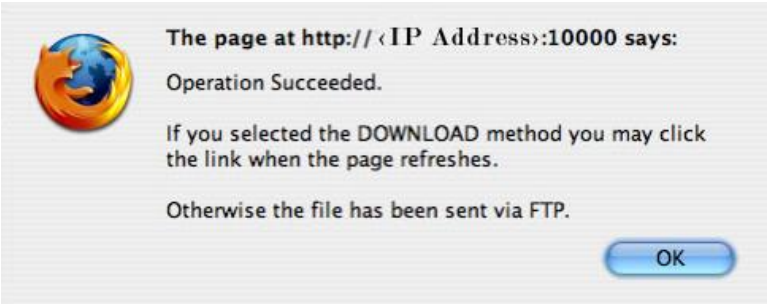
The page at http://‹IP Address›:10000 says:
Operation Succeeded.
If you selected the DOWNLOAD method you may click the link when the page refreshes.
Otherwise the file has been sent via FTP.
OK

- Click on the "OK" button to acknowledge the content.

Click on the link that appears under the Download field once the page is refreshed.

- The download pop-up window will appear, click “OK” to save the file to your computer system
- If you are uploading the zipped config file to the Sixnet FTP site or to a site of your choosing, click on the pull-down menu next to “Select Delivery Method:” and choose “FTP”

The display will change to reflect additional options for FTP’ing the file to either the Sixnet FTP site or to a site of your choosing.

- If you are utilizing the Sixnet FTP site, enter a project name (such as a company name) to designate the file on the FTP site
- Click on the "Gather" button
- If you want to input your own FTP site, click on the pull down menu next to the "Designation:" field and choose "User defined FTP site"

The display will change to reflect the options available for selecting your FTP site.

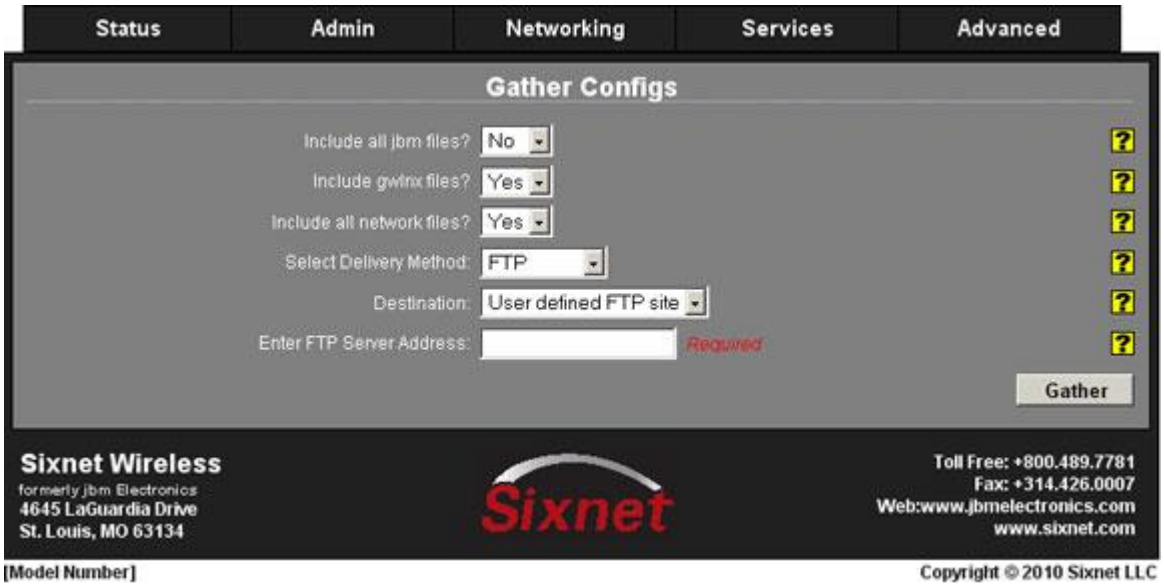

- Enter the IP Address or URL to the FTP site of your choosing.
- Click on the "Gather" button.

3.3.6 Gather Stats

The "Gather Stats" menu item allows you to create and zip up a report of pertinent information of the performance of the Sixnet router. This information will include interface status, network information such as 'netstat', 'arp', and 'routes', IPSEC information if included, firewall information, and a copy of the syslog.

Click on the "Gather Stats" menu item and the following window will appear:

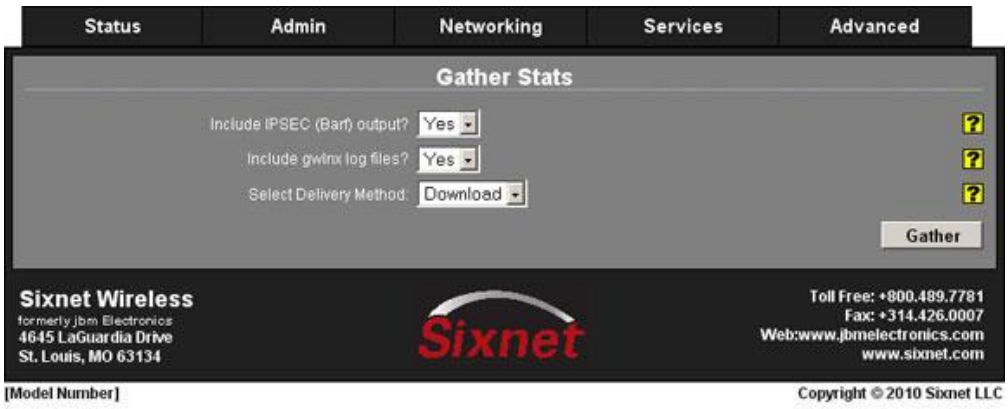

To gather the stats of the Sixnet router:

- Choose whether you want to include IPSEC (Barf) output by clicking on the pull-down menu next to "Include IPSEC (Barf) output?" and choose "No" or "Yes". (This is the output from several IPSEC commands that reveals the activity of the IPSEC configuration)
- Choose whether you want to include the GWLNX log files by clicking on the pull down menu next to "Include gwlnx log files?" and choose "No" or "Yes". (This reveals activity associated with Protocol Conversion)
- Choose the method of delivery:
    - If you are downloading the zipped stats file to your computer system, click on the pull down menu next to "Select Delivery Method:" and choose "Download"
    - Click on the "Gather" button

You will get the following pop-up window:

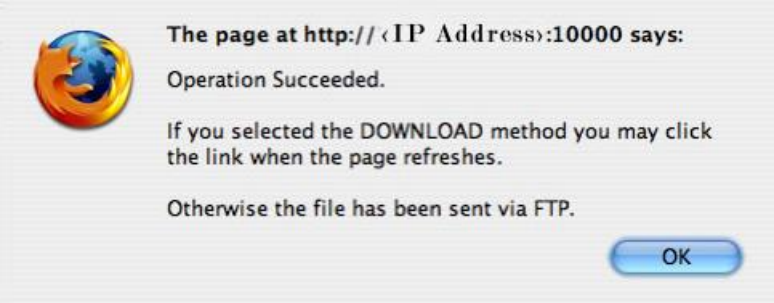
The page at http://‹IP Address›:10000 says:
Operation Succeeded.
If you selected the DOWNLOAD method you may click the link when the page refreshes.
Otherwise the file has been sent via FTP.
OK

- Click on the "OK" button to acknowledge the content.
- Click on the link that appears under the Download field once the page is refreshed.

- The download pop-up window will appear.
- Click "OK" to save the file to your computer system.
- If you are uploading the zipped stats file to the Sixnet FTP site or to a site of your choosing, click on the pull down menu next to "Select Delivery Method:" and choose "FTP".

The display will change to reflect additional options for FTP'ing the file to either the Sixnet FTP site or to a site of your choosing.

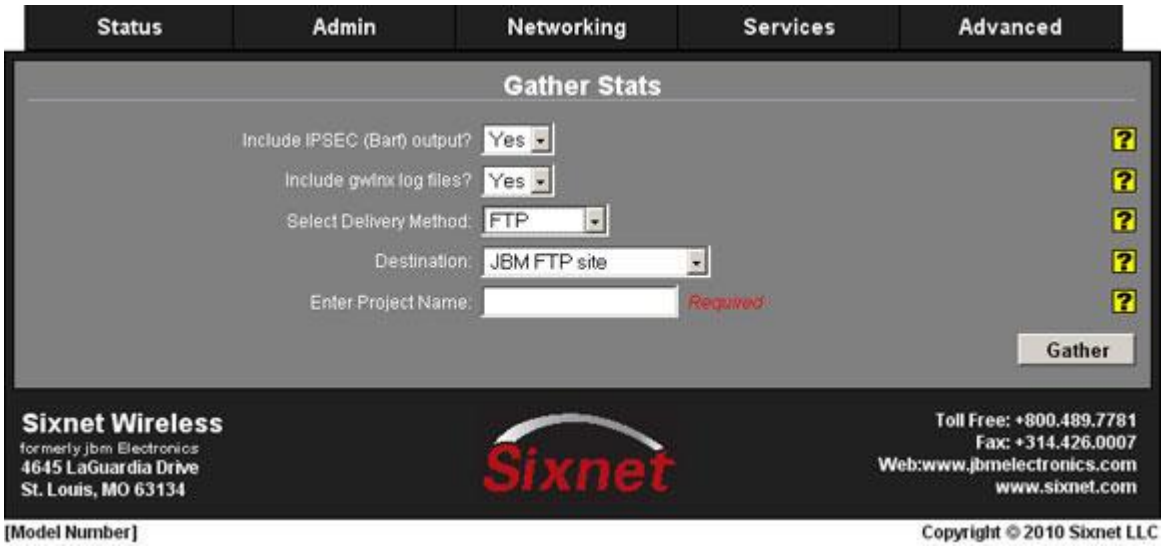

- If you are utilizing the Sixnet FTP site, enter a project name (such as a company name) to designate the file on the FTP site.
- Click on the "Gather" button.
- If you want to input your own FTP site, click on the pull down menu next to the "Designation:" field and choose "User defined FTP site".

The display will change to reflect the options available for selecting your FTP site.

- Enter the IP Address or URL to the FTP site of your choosing.
- Click on the “Gather” button.

3.3.7 Manage System Configuration

The "Manage System Configuration" menu item allows you to save a copy of the current system configuration, i.e., **Export**. This is useful when a confirmed good configuration is operational. A backup can be exported for use should the configuration become corrupt or re-configured in error.

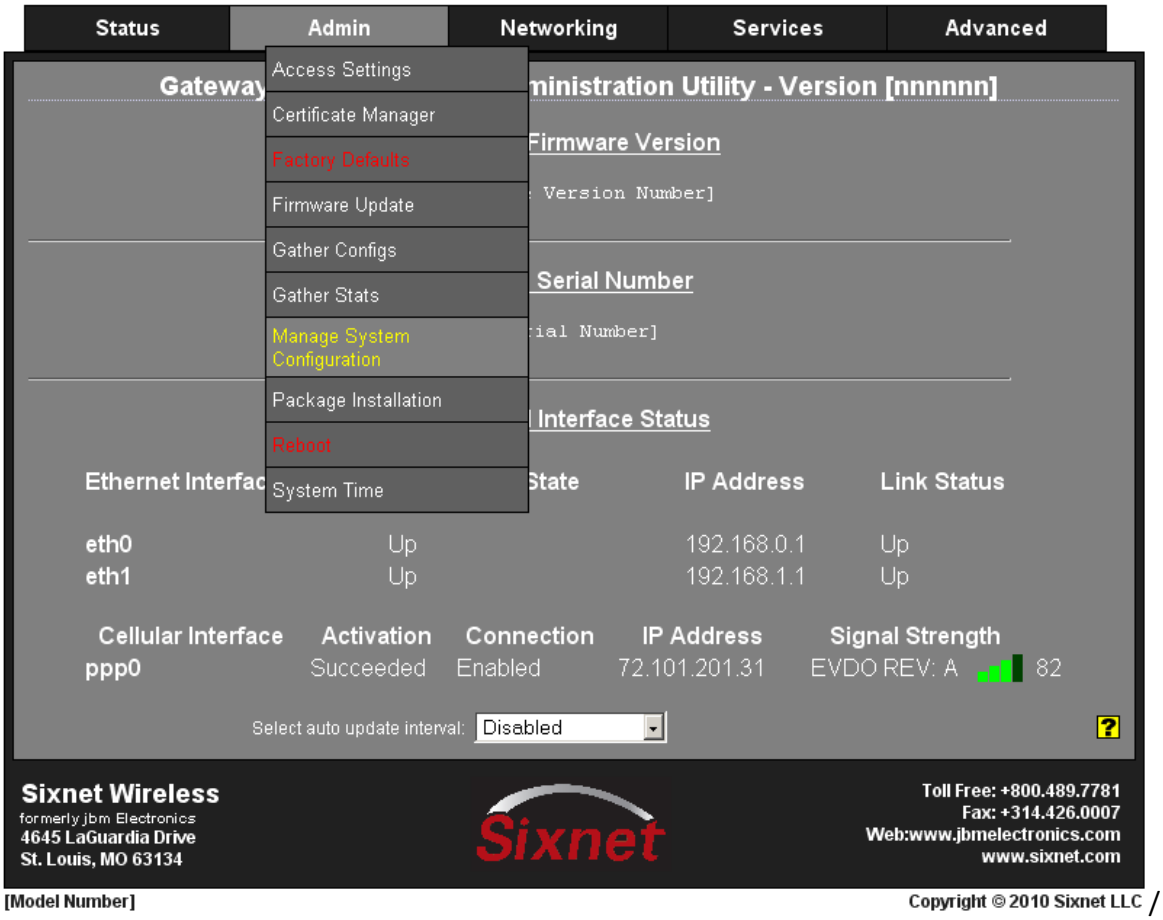

- Click on the "Manage System Configuration" menu item and the following window will appear:

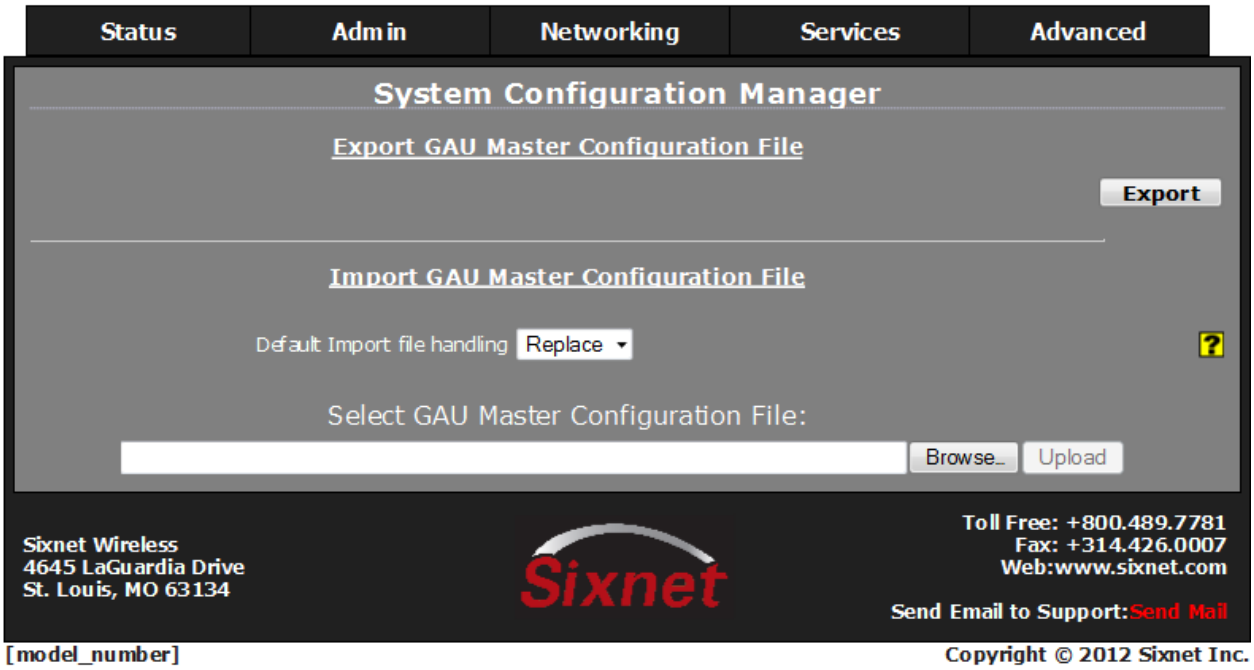

To save a copy of the Sixnet router configuration:

- Click on the "Export" button.
- You will get a pop-up window asking you to save to disk.

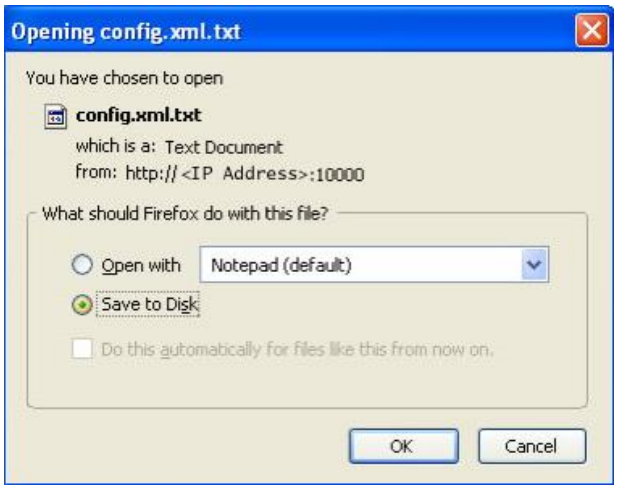

- Click on the "OK" button and save the config.xml.txt file to your computer system.

NOTE: Please note the directory where the file was saved in order to retrieve it when needed to put the file back onto the Sixnet router.

To Import a known good Sixnet router configuration:

- Click on the “Import” button.
- The file explorer of your computer system should appear.

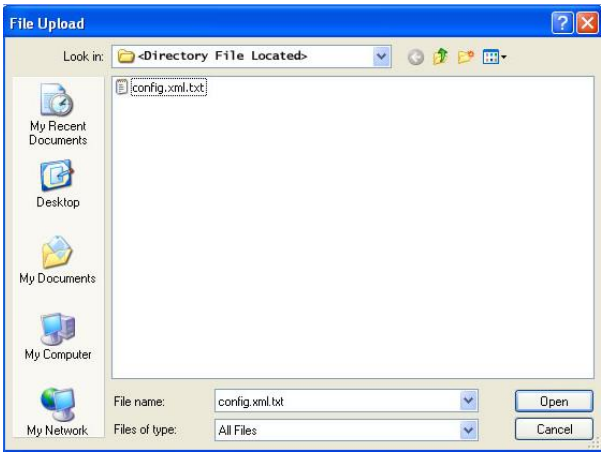

- Browse to the directory where the config.xml.txt file is located.
- Click on the config.xml.txt file to highlight it.
- Click on the “Open” button to populate the Browse window.

- Click on the “Upload” button.
- The following pop-up window will appear to show the file was successfully uploaded:

- Click on the "OK" button to acknowledge the content.
- The "Import" button is now available.

- Click on the "Import" button to reload the system configuration file. Note: If you want to save the new configuration without immediately applying it, simply check the box provided next to "Import" button.

- The following warning pop-up window will appear:

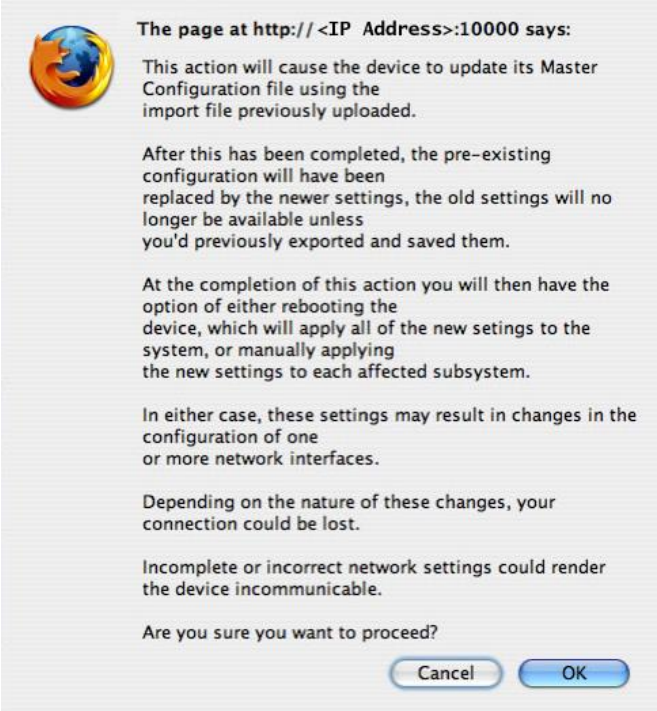
The page at http://<IP Address>:10000 says:
This action will cause the device to update its Master Configuration file using the import file previously uploaded.
After this has been completed, the pre-existing configuration will have been replaced by the newer settings, the old settings will no longer be available unless you'd previously exported and saved them.
At the completion of this action you will then have the option of either rebooting the device, which will apply all of the new setings to the system, or manually applying the new settings to each affected subsystem.
In either case, these settings may result in changes in the configuration of one or more network interfaces.
Depending on the nature of these changes, your connection could be lost.
Incomplete or incorrect network settings could render the device incommunicable.
Are you sure you want to proceed?
Cancel
OK

- Click on the “OK” button to acknowledge the content.
- A new window will open below the “Upload” and “Import” buttons:

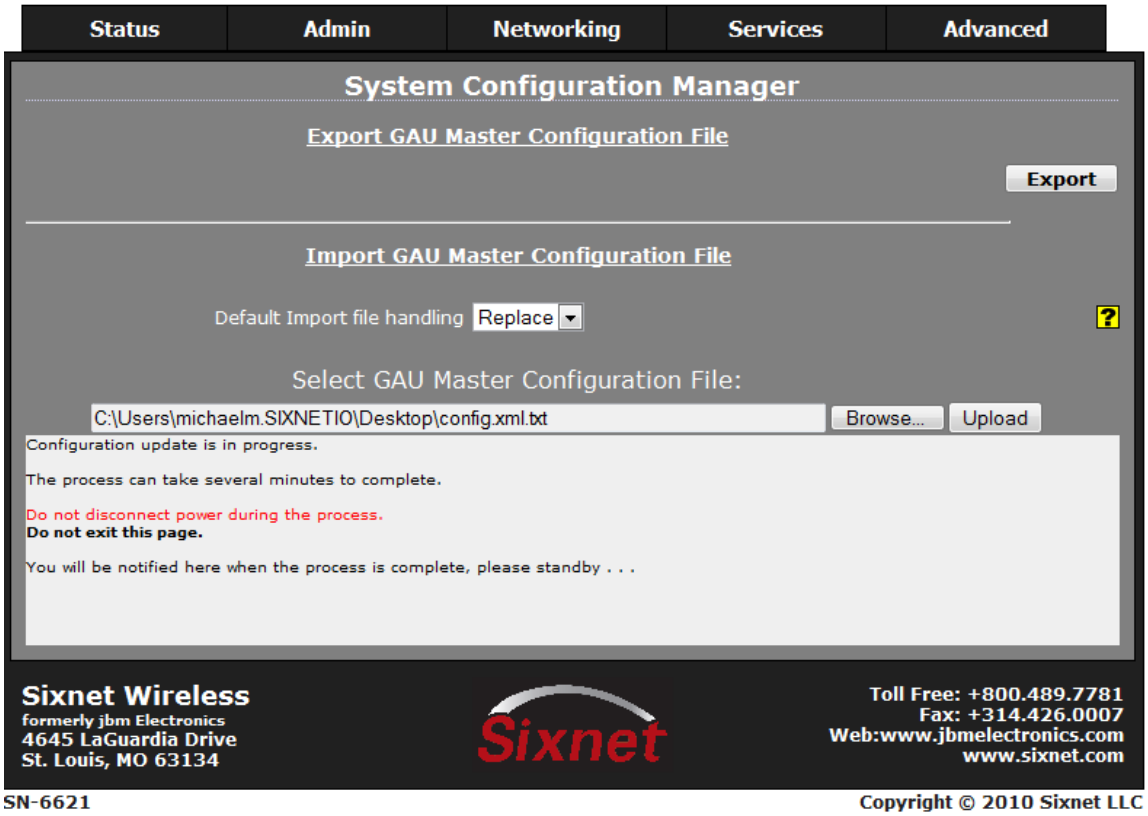

Once completed, a list of changes will appear in the message window and a pop-up window will appear to request a reboot:

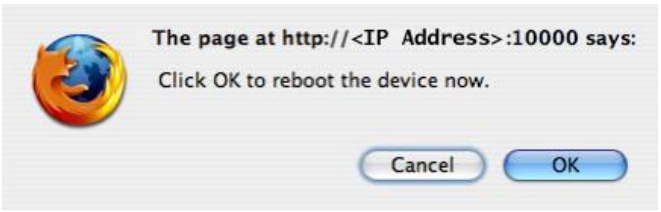

- Click on the "OK" button.
- The next pop-up window will inform you that the actions you are taking will reboot the device and will ask you to confirm your actions.

The page at http://<IP Address>:10000 says:
This action will cause the device to reboot.
Your connection will be lost.
Incomplete or incorrect network settings could render the device incommunicable.
Are you sure you want to proceed?
Cancel
OK

- Click on the “OK” button and the Sixnet router will reboot.
- Double check the unit when it comes back online to ensure the configs are as they should be.

3.3.8 Package Installation

The "Package Installation" menu item allows you to upload and install any patches that come from Sixnet.

- Click on the "Package Installation" menu item and the following window will appear:

- Click on the "Browse" button and the File Explorer window will appear:

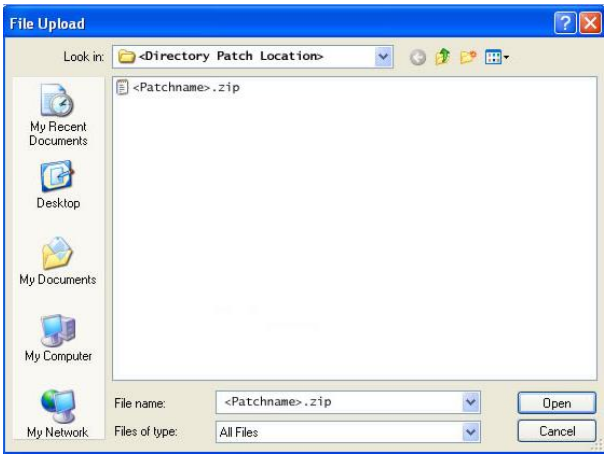

- Browse to the directory that the patch is located.
- Click on the filename to highlight the file. Note: Be sure to use only genuine Sixnet provided packages in the form of filename.zip
- Click on the "Open" button to populate the Package Installation window.

- Click on the "Install" button to upload and install the patch.
- The following warning pop-up window will appear:

The page at http://<IP Address>:10000 says:
This action will cause the device to install an update package.
The package contents may result in changes in the configuration of one
or more network interfaces and trigger a reboot of the device.
Depending on the nature of these changes, your connection could be lost.
Incomplete or incorrect network settings could render the device incommunicable.
Are you sure you want to proceed?
Cancel
OK

- Click on the "OK" button.
- The following Operation Succeeded window will appear:

- Click on the "OK" button to acknowledge the content.

The package has been successfully uploaded and installed.

3.3.9 Reboot

The "Reboot" menu item allows you to remotely reboot the device if necessary.

- Click on the "Reboot" menu item and the following window will appear:

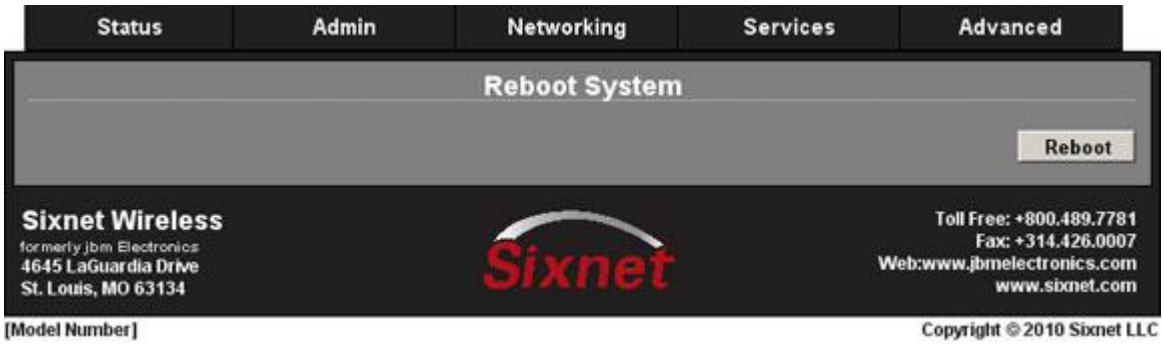

- Click on the "Reboot" button.
- The following warning pop-up window will appear:

The page at http://<IP Address>:10000 says:
This action will cause the device to reboot.
Your connection will be lost.
Incomplete or incorrect network settings could render the device incommunicable.
Are you sure you want to proceed?
Cancel
OK

- Click on the "OK" button the reboot the Sixnet router remotely.

NOTE: It may take 3 to 5 minutes for the Sixnet router to fully reboot. Any connection attempt should only be attempted after a sufficient amount of time has passed.

3.3.10 System Time

The "System Time" menu item allows you to configure the Time Zone on the Sixnet router to correspond to your location.

- Click on the "System Time" menu item and the following window will appear:

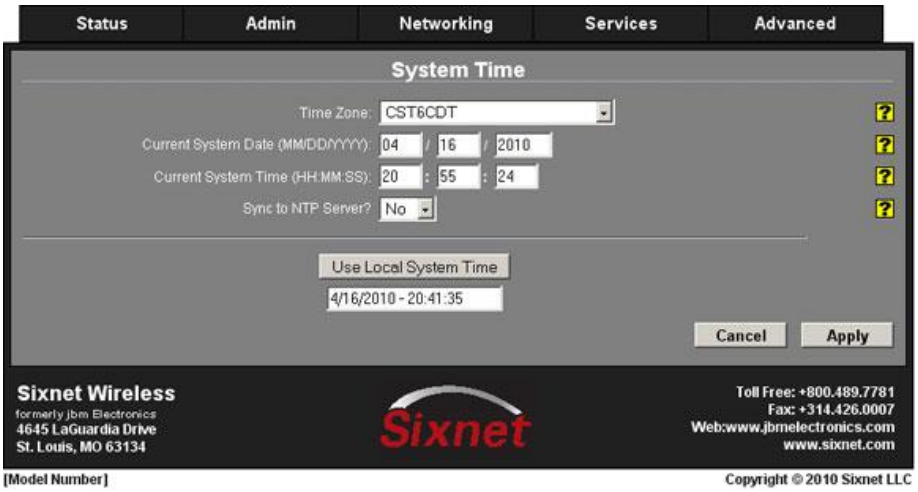

- To change the Time Zone click on the pull down menu next on the "Time Zone:" field.

The following is a full list of available Time Zones:

CET	Universal	Moscow (Europe)
CST6CDT	W-SU	Nicosia (Europe)
Cuba	WET	Oslo (Europe)
EET	Zulu	Paris (Europe)
EST	Atlantic (Canada)	Prague (Europe)
EST5EDT	Central (Canada)	Riga (Europe)
Egypt	East-Saskatchewan (Canada)	Rome (Europe)
Eire	Eastern (Canada)	Samara (Europe)
Factory	Mountain (Canada)	San Marino (Europe)
GB	Newfoundland (Canada)	Sarajevo (Europe)
GB-Eire	Pacific (Canada)	Simferopol (Europe)
GMT	Saskatchewan (Canada)	Skopje (Europe)
GMT+0	Yukon (Canada)	Sofia (Europe)
GMT-0	Amsterdam (Europe)	Stockholm (Europe)
GMT0	Andorra (Europe)	Tallinn (Europe)
Greenwich	Athens (Europe)	Tirane (Europe)
HST	Belfast (Europe)	Tiraspol (Europe)
Hongkong	Belgrade (Europe)	Uzhgorod (Europe)
Iceland	Berlin (Europe)	Vaduz (Europe)
Iran	Bratislava (Europe)	Vatican (Europe)
Israel	Brussels (Europe)	Vienna (Europe)

Jamaica	Bucharest (Europe)	Vilnius (Europe)
Japan	Budapest (Europe)	Warsaw (Europe)
Kwajalein	Chisinau (Europe)	Zagreb (Europe)
Libya	Copenhagen (Europe)	Zaporozhye (Europe)
MET	Dublin (Europe)	Zurich (Europe)
MST	Gibraltar (Europe)	Alaska (US)
MST7MDT	Helsinki (Europe)	Aleutian (US)
NZ	Istanbul (Europe)	Arizona (US)
NZ-CHAT	Kaliningrad (Europe)	Central (US)
Navajo	Kiev (Europe)	East-Indiana (US)
PRC	Lisbon (Europe)	Eastern (US)
PST8PDT	Ljubljana (Europe)	Hawaii (US)
Poland	London (Europe)	Indiana-Starke (US)
Portugal	Luxembourg (Europe)	Michigan (US)
ROK	Madrid (Europe)	Mountain (US)
Singapore	Malta (Europe)	Pacific (US)
Turkey	Mariehamn (Europe)	Samoa (US)
UCT	Minsk (Europe)	
UTC	Monaco (Europe)	

- Scroll down and up until you locate the Time Zone you need.
- Click on the selected Time Zone to populate the “Time Zone:” field.

To configure the date and time for your Sixnet router there are three options:

Option 1: Manual Configuration

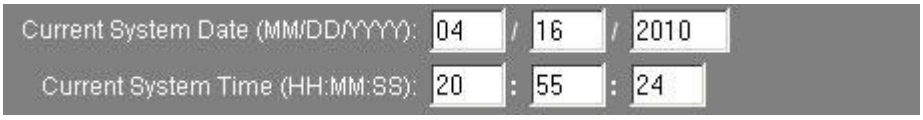

- Click on the individual fields and make changes to suit.
- Click on the “Apply” button.

NOTE: The Hour field is on the 24-hour time clock, range 00 – 24. This page verifies the Month, Day, Year, Hour, Minute, and Seconds conform to expected inputs. For example, month range from 01 – 12, days range from 01 – 31 (checks for limit according to month; i.e., Jan has 31 days, Feb has 28 or 29 depending on year, etc.).

Option 2: Use Local System Time Configuration

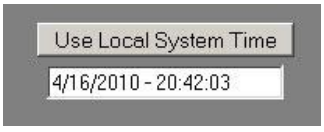

- Click on the “Use Local System Time” button.
- Click on the “Apply” button.

Option 3: Sync to NTP Server

- Click on the pull down menu next to the “Sync to NTP Server?”

- Click on “Yes”and the following window will appear:

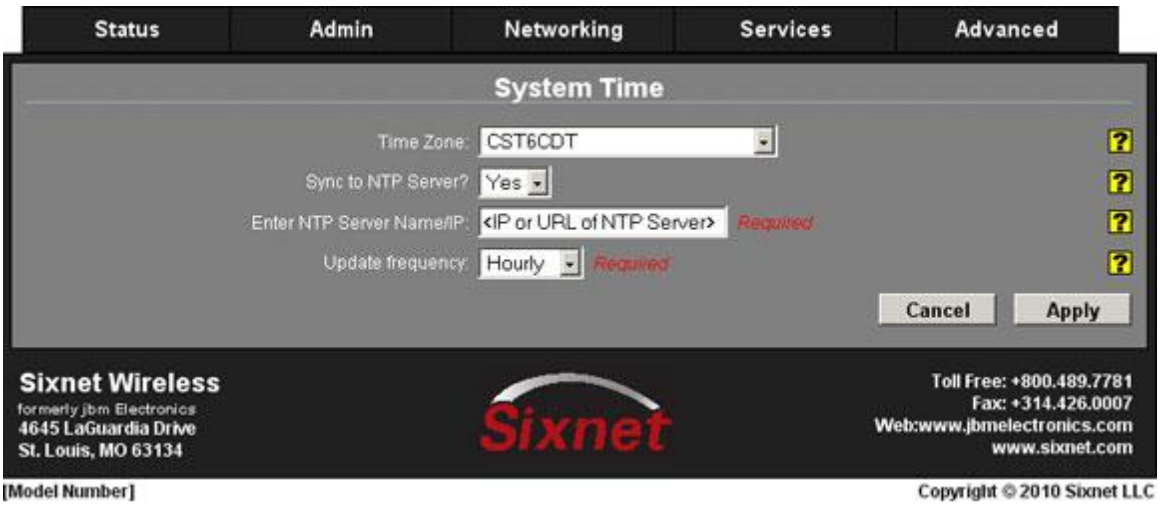

- Type in the IP Address or URL or the NTP Server location.
- Choose the Update frequency from the pull down menu: Hourly, Daily, or Weekly.
- Click on the “Apply” button.

3.4 Networking Tab

The Networking Tab allows you to configure aspects of the Sixnet router that affect the networking functionality of the unit. From here you can configure the cellular connection (should the air card/SIM not be recognized at power-up), provision certain functionality on specific air cards, configure DNS, Ethernet Interfaces, Firewall, PPP Dial Backup on units available with dial capabilities, PPPoE, Static Routes, TCP Keep-Alives, and VPN Tunnel configuration.

3.4.1 Cellular Connection

The "Cellular Connection" menu item is sub-sectioned into Configuration and Provisioning. This allows you to configure the cellular air card/SIM on the Sixnet router.

NOTE: The Sixnet router's firmware will recognize supported air cards and will use the appropriate drivers. If the air card is on the GSM network and requires the use of a username, password, and APN, then you will need to verify the information and input the data on the "Configuration" page.

NOTE: The "Provisioning" page is currently only available for air cards supplied by Nortel.

Configuration

The "Configuration" menu item allows you to make configuration changes to the air card/SIM on the Sixnet router.

- Click on the "Configuration" menu item and the following window will appear:

If the identity of the air card is acquired by the firmware these fields will be populated and no further action is required.

NOTE: In some instances the inserted air card will be recognized but display a different carrier. This is simply a matter of multiple carriers using the same model and make of air card.

GSM type air cards:

Most GSM type air cards require the use of a username, password, and APN to authenticate to the carrier network.

- Click on the “Configuration” menu item and the following window will appear:

You will notice that two new fields, “Select APN Context:” and “Enter APN:”

The “Select APN Context:” field has four options, 1 – 4, these are for future implementations of carrier supplied predefined authentication parameters for SIMs installed in R3300 routers.

The “Enter APN:” field is for entering the Access Point Name (APN) of the external Internet network that is accessible using a GSM air card.

To enter the username, password, and APN needed for GSM air cards:

- Click on the “Enter User Name:” field and type in the username provided by the carrier.
- Click on the “Enter Password:” field and type in the password provided by the carrier.
- Click on the “Confirm Password:” field and re-type the password provided by the carrier.
- Click on the “Enter APN:” field and type in the APN provided by the carrier.

It should look similar to the following:

- Click on the “Apply” button.
- Verify that you have Internet access by browsing from the computer system connected to the Sixnet router to the Internet.

There are also Advanced Options available if needed.

WARNING: These options should not be used unless directed to do so by Sixnet support staff.

- Click on the pull down next to the “View/Change Advanced Options?”

- Click on the “Yes” and the following will be added to the display:

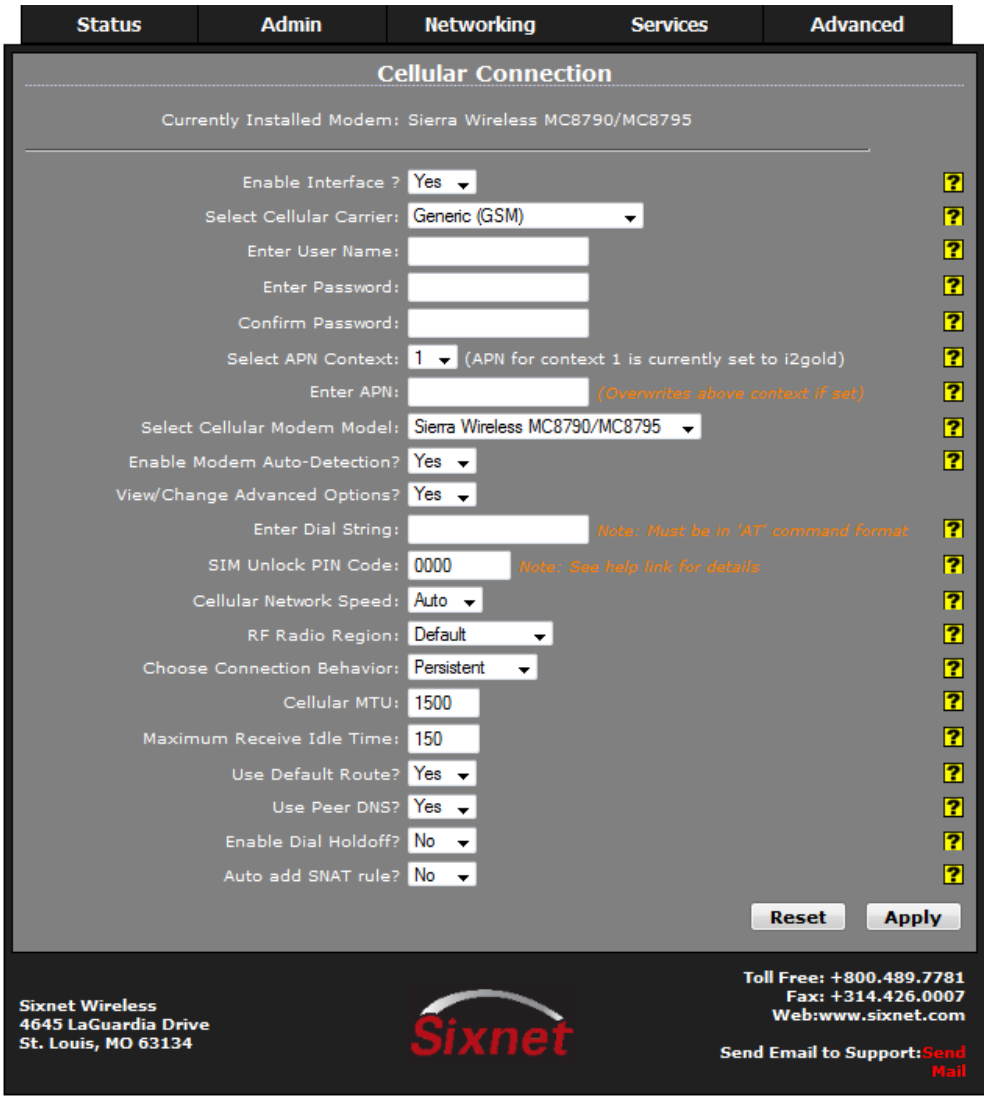
Status
Admin
Networking
Services
Advanced
Cellular Connection
Currently Installed Modem: Sierra Wireless MC8790/MC8795
Enable Interface ? Yes
Select Cellular Carrier: Generic (GSM)
Enter User Name:
Enter Password:
Confirm Password:
Select APN Context: 1 (APN for context 1 is currently set to i2gold)
Enter APN: (Overwrites above context if set)
Select Cellular Modem Model: Sierra Wireless MC8790/MC8795
Enable Modem Auto-Detection? Yes
View/Change Advanced Options? Yes
Enter Dial String: Note: Must be in 'AT' command format
SIM Unlock PIN Code: 0000 Note: See help link for details
Cellular Network Speed: Auto
RF Radio Region: Default
Choose Connection Behavior: Persistent
Cellular MTU: 1500
Maximum Receive Idle Time: 150
Use Default Route? Yes
Use Peer DNS? Yes
Enable Dial Holdoff? No
Auto add SNAT rule? No
Reset
Apply
Sixnet Wireless
4645 LaGuardia Drive
St. Louis, MO 63134
Sixnet
Toll Free: +800.489.7781
Fax: +314.426.0007
Web:www.sixnet.com
Send Email to Support:Send Mail

You now see the following options available:

Enter Dial String field: The Dial String field is where you would input the string of characters the air card/SIM uses to dial into the carrier's network.
NOTE: This will be automatically filled in if the air card/SIM is recognized by the Sixnet router.

To enter the Dial String:
- Click on the field next to "Enter Dial String:"
- Type in the string of characters issued by the carrier.

Cellular Network Speed: There are three choices for the setting; Auto, High, and Low.
- Click on the drop down menu next to the "Cellular Network Speed:"
- Select either Auto, High, or Low and click on your selection to populate field.

Connection Behavior: The Choose Connection Behavior allows you to change how the air card/SIM stays connected to the tower. There are two choices: Persistent and On-Demand.

Persistent: In Persistent mode, the unit will always attempt to maintain a cellular connection with the carrier's network. This is the default setting.

On-Demand: In On-Demand mode, the connection to the cellular network will only be attempted when packets are destined to leave the wireless interface. In addition, after a period of Idle Time, the connection will terminate.

To change the connection behavior to On-Demand:

- Click on the drop down menu at the "Choose Connection Behavior:" field
- Click on the "On-Demand" selection

You will see an additional field appear on the screen:

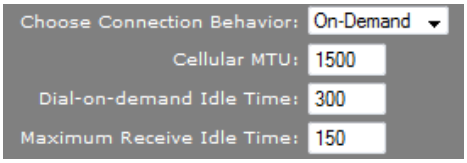

Dial-on-demand Idle Time: Allows you to enter the number of seconds the connection may be allowed to remain "idle" (no data transmitted or received) before closing the connection. This will allow a DoD connection to automatically reset once idle, so that any network usage is limited. This is useful for an environment where constant usage of the POTS line is not desired. Recommended time is 300 seconds (5 minutes). This is defaulted to 600 seconds.

Cellular MTU: Enter the MTU size you desire to use.

In computer networking, the Maximum Transmission Unit (MTU) of a communications protocol of a layer is the size (in bytes) of the largest protocol data unit that the layer can pass onwards. MTU parameters usually appear in association with a communications interface (NIC, serial port, etc.). Standards (Ethernet, for example) can fix the size of an MTU; or

systems (such as point-to-point serial links) may decide MTU at connect time. A larger MTU brings greater efficiency because each packet carries more user data while protocol overheads, such as headers or underlying per-packet delays, remain fixed; the resulting higher efficiency means a slight improvement in bulk protocol throughput. A larger MTU also means processing of fewer packets for the same amount of data. In some systems, per-packet-processing can be a critical performance limitation. However, this gain is not without some downside. Large packets can occupy a slow link for some time, causing greater delays to following packets and increasing lag and minimum latency. For example, a 1500-byte packet, the largest allowed by Ethernet at the network layer (and hence over most of the Internet), ties up a 14.4k modem for about one second.

Recommended Setting: 1500

Maximum Receive Idle Time: The "Maximum Receive Idle Time:" Enter the number of seconds the connection may be allowed to remain "idle" or "unresponsive" (no data received) before closing the connection. If packets are leaving the interface, but no return packet is received for the specified time, then the connection is reset. This can be useful for detecting an unresponsive situation where the network is down, the modem is in an unknown state, or other low level error may have occurred. Recommended times are 0 seconds (to turn off) or 150 seconds (2.5 minutes). This is defaulted to 150 seconds.

To change the value:

- Click on the box for "Maximum Receive Idle Time:"
- Input the time to fit your needs.

Use Default Route: This field allows you to choose to have the default route for the Sixnet router to be the cellular connection when it is connected, or to designate an Ethernet port as the default route. The default setting is "Yes".

To change the setting:

- Click on the drop down menu at the "Use Default Route?" field
- Click on the "No" selection.

Use Peer DNS

This field allows you to choose whether the Sixnet router accepts DNS information from the peer device to which it is connected, or uses DNS servers designated on the "DNS Settings" page (listed in the next section). The default setting is "Yes".

To change the settings:

- Click on the pull down menu at the "Use Peer DNS?" field
- Click on the "No" selection.

Enable Dial Holdoff

The "Dial Holdoff" behavior will restrict your connection to three (3) failed connection attempts, before entering an idle state for a duration of time specified by the Dial Holdoff Timeout parameter. The default setting is "No".

To change the settings:

- Click on the pull down menu at the "Enable Dial Holdoff?" field
- Click on the "Yes" selection; a new field will appear:

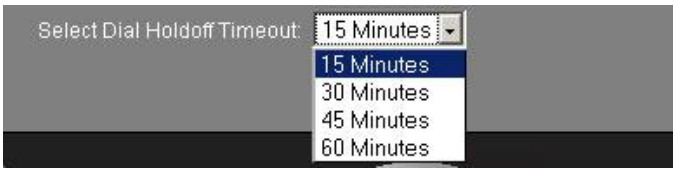

These are the holdoff timer settings. To change the settings:

- Click on the pull down menu at the "Select Dial Holdoff Timeout:" field.
- Click on the selection you want; Choices are 15 Minutes, 30 Minutes, 45 Minutes, and 60 Minutes

Once you have the "Cellular Connection" configured as you want:

- Click on the "Apply" button to accept the changes.

Provisioning

The "Provisioning" menu item allows you to activate a limited number of cellular air cards for a limited number of carriers.

- Click on the “Provisioning” menu item. If the cellular air card/SIM is not recognized as a supported card, then you the following warning pop-up window will appear:

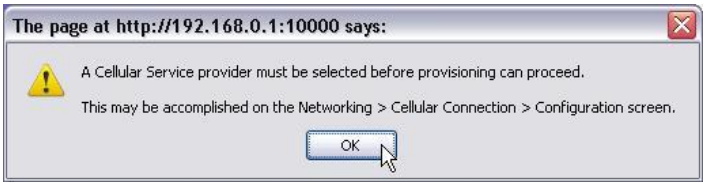
The page at http://192.168.0.1:10000 says:
A Cellular Service provider must be selected before provisioning can proceed.
This may be accomplished on the Networking > Cellular Connection > Configuration screen.
OK

- Click on the “OK” button to acknowledge the content.

Then you will see the following display:

- Under the Networking tab highlight “Cellular Connection” and choose the “Configuration” option.

- Instructions for “Cellular Connection” configuration are located in the previous section beneath the “Configuration” heading.
- Once you have the “Cellular Connection” configured as you want, return to the “Provisioning” screen.

If the cellular air card/SIM is recognized as a supported card that can be provisioned with the Sixnet router then the following window will appear with the information about the air card/SIM displayed in the upper window:

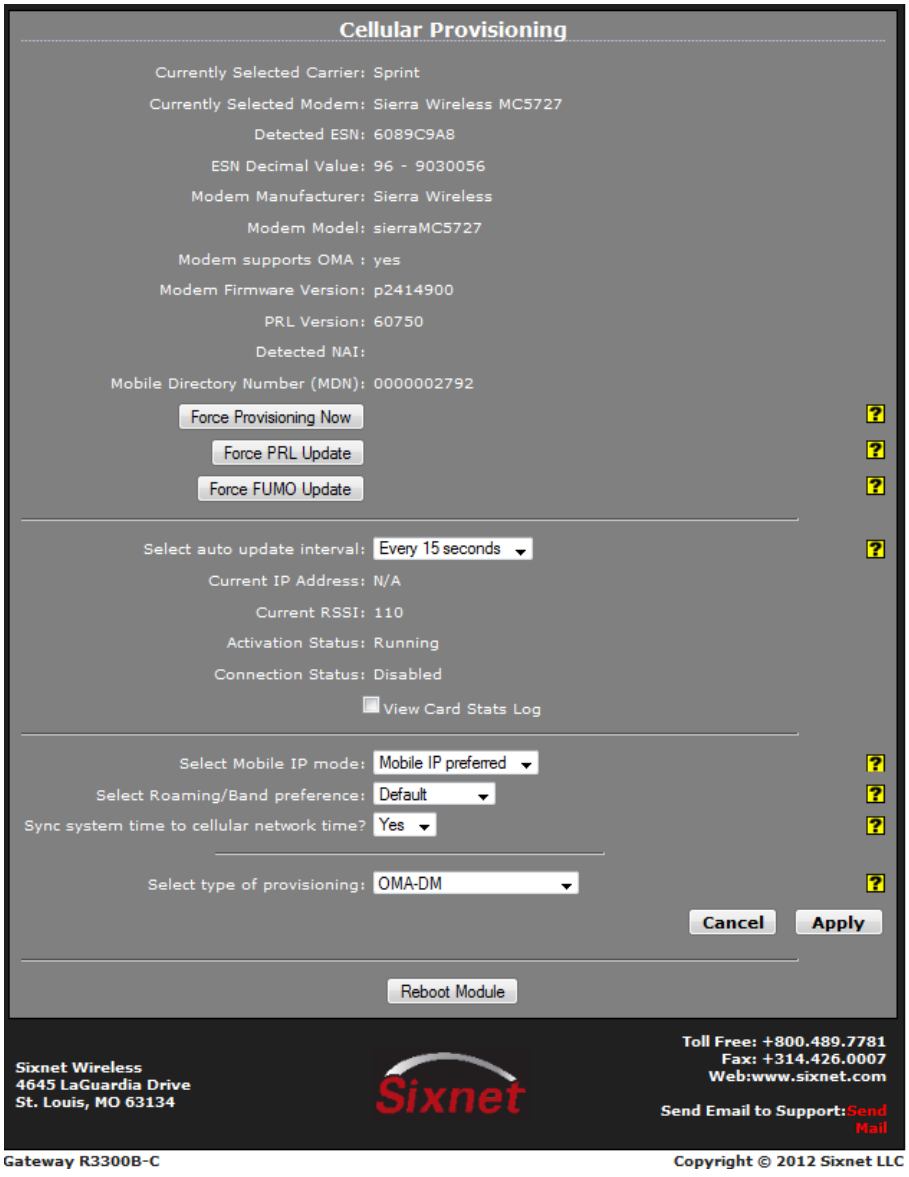

Select which type of Provisioning you will be using. There are six (6) different types of provisioning:

- OMA-DM (Automatic Activation Provisioning)
- Vision IP only
- Static IP only
- Static, Vision alternate
- Datalink only
- Datalink, Vision alternate

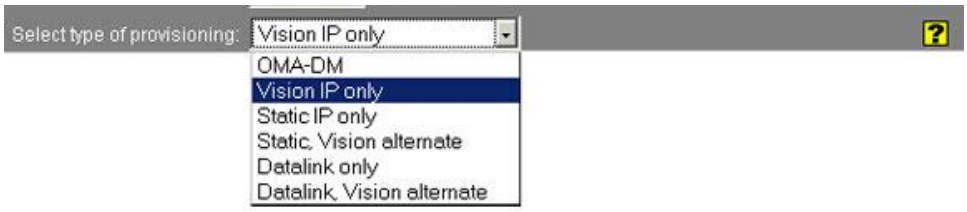

Provisioning for Vision IP only/Static IP only

If you are you using Vision IP only or Static IP only provisioning you will enter the following information:

- Enter the SPC Unlock code provided by your cellular carrier at time of activation.
- The Mobile IP mode should always be set to “Mobile IP preferred”
- Set the Sync system time to cellular network time to “Yes”
- Enter the ESN # which can be found in the upper window next to “Detected ESN”
- Enter the MDN# provided by your cellular carrier
- Enter the MSID # provided by your cellular carrier
- When all of your information is correctly entered, click “Apply”

For more information regarding a specific field, refer to the yellow “Help” button to the right side of the screen.

Provisioning for Static, Vision alternate

If you are using Static, Vision alternate provisioning, there are two more required fields than there are for Vision/Static only provisioning. The “Set PPP Error threshold” field and “Set Vision timeout” field should automatically be defaulted to the numbers below:

- Set PPP Error threshold: 10
- Set Vision timeout: 1440
- When all of your information is correct click “Apply”

Provisioning for Datalink only or Datalink, Vision alternate

If you are provisioning for Datalink only or Datalink, Vision alternate, enter the following information:

- Enter the SPC Unlock code provided by your cellular carrier at time of activation
- The Mobile IP mode should always be set to “Mobile IP preferred”
- You will set Sync system time to cellular network time to “Yes”
- Enter the ESN # which can be found in the upper window next to “Detected ESN”
- Enter the MDN# provided by your cellular carrier
- Enter the MSID # provided by your cellular carrier
- Enter the NAI User Name provided by your cellular carrier
- Enter the AAA Password provided by your cellular carrier
- HA Password provided by your cellular carrier
- Home IP Address provided by your cellular carrier
- Primary HA IP Address provided by your cellular carrier
- Secondary HA IP Address provided by your cellular carrier
- When all of your information is correctly entered, click “Apply”

3.4.2 DNS Settings

The Domain Name Server Settings screen is broken down into two components. The top section pertains to the DNS resolver configuration and the bottom section pertains to the host configuration.
Click on the "DNS Settings" menu item and the following window will appear:

The Primary, Alternate #1, and Alternate #2 DNS server fields are already filled in; they are the current servers in use by the Sixnet router.

Search Domain: Enter the local domain name(s) to be searched, separated by spaces. These domains are used as the default local domains when performing DNS queries. **Example:** local.net domain.com

Primary DNS Server: Enter the IP Address of the Primary DNS Server you want to use. (Required) **Note:** This setting may be overridden if a network interface is set to obtain its configuration information from its peer (either via PPP or DHCP).

Alternate DNS Servers #1: In the event that a DNS query is submitted to the Primary DNS Server and a response is not received (possibly because the host is down), the Sixnet router will forward the query to the Alternate DNS servers #1, if they are specified. **Note:** This setting may be overridden if a network interface is set to obtain its configuration information from its peer (either via PPP or DHCP).

Alternate DNS Servers #2: In the event that a DNS query is submitted to the Primary DNS Server and Alternate DNS Server #1 and a response is not received (possibly because the host is down), the Sixnet router will forward the query to the Alternate DNS servers #2, if they are specified. **Note:** This setting may be overridden if a network interface is set to obtain its configuration information from its peer (either via PPP or DHCP).

Static Host Entries: Static Host Entries may be added for local hosts, allowing the Sixnet router to resolve local host names to IP addresses if requested.

3.4.3 Network Interfaces

The “Ethernet Interfaces” menu item allows the administrator to configure the Ethernet ports of Sixnet routers to meet their needs.

The R3100/R3300 has two Ethernet ports available on the device, the “WAN”/‘eth0’ port and the “LAN”/‘eth1’ port, while the SN series products have “eth0” and “USB” ports.

These ports are ‘auto-sensing’, allowing for greater flexibility.

The configuration of the Ethernet ports are the same, therefore this document will only cover the configuration of “WAN”/‘eth0’. Please refer to this section when configuring “LAN”/‘eth1’.

Ethernet Interface “WAN”/’eth0’

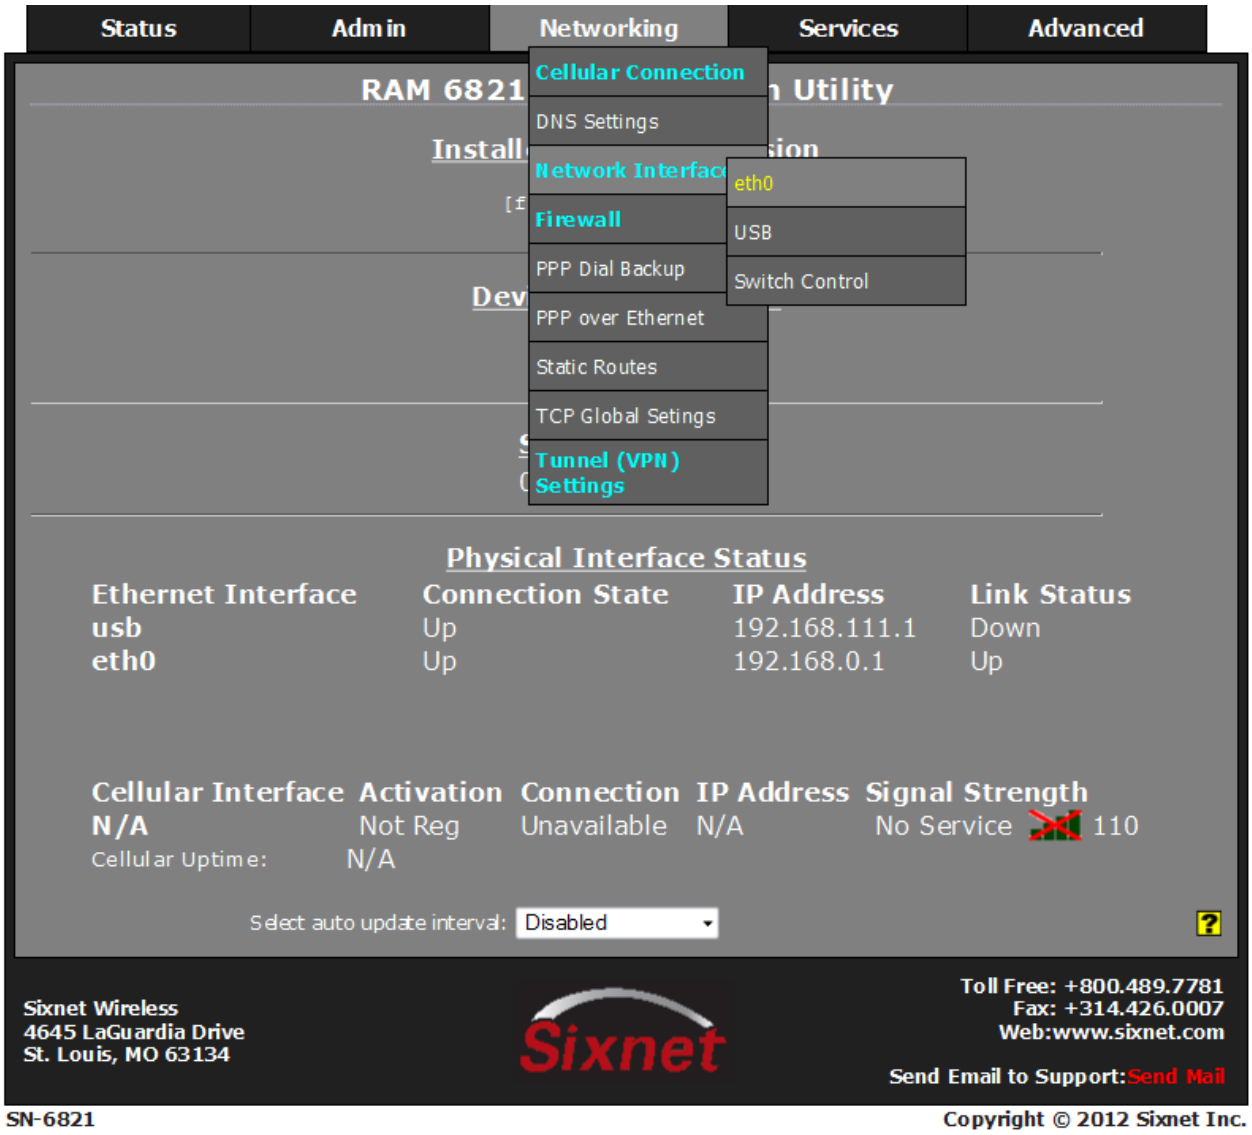
Status
Admin
Networking
Services
Advanced
Cellular Connection
DNS Settings
Network Interface
Firewall
PPP Dial Backup
PPP over Ethernet
Static Routes
TCP Global Setings
Tunnel (VPN) Settings
eth0
USB
Switch Control
RAM 6821
Utility
Physical Interface Status
Ethernet Interface
Connection State
IP Address
Link Status
usb
Up
192.168.111.1
Down
eth0
Up
192.168.0.1
Up
Cellular Interface
Activation
Connection
IP Address
Signal Strength
N/A
Not Reg
Unavailable
N/A
No Service
110
Cellular Uptime:
N/A
Select auto update interval:
Disabled
Sixnet Wireless
4645 LaGuardia Drive
St. Louis, MO 63134
Sixnet
Toll Free: +800.489.7781
Fax: +314.426.0007
Web:www.sixnet.com
Send Email to Support:Send Mail
SN-6821
Copyright © 2012 Sixnet Inc.

- Click on the “eth0” menu item and the following window will appear:

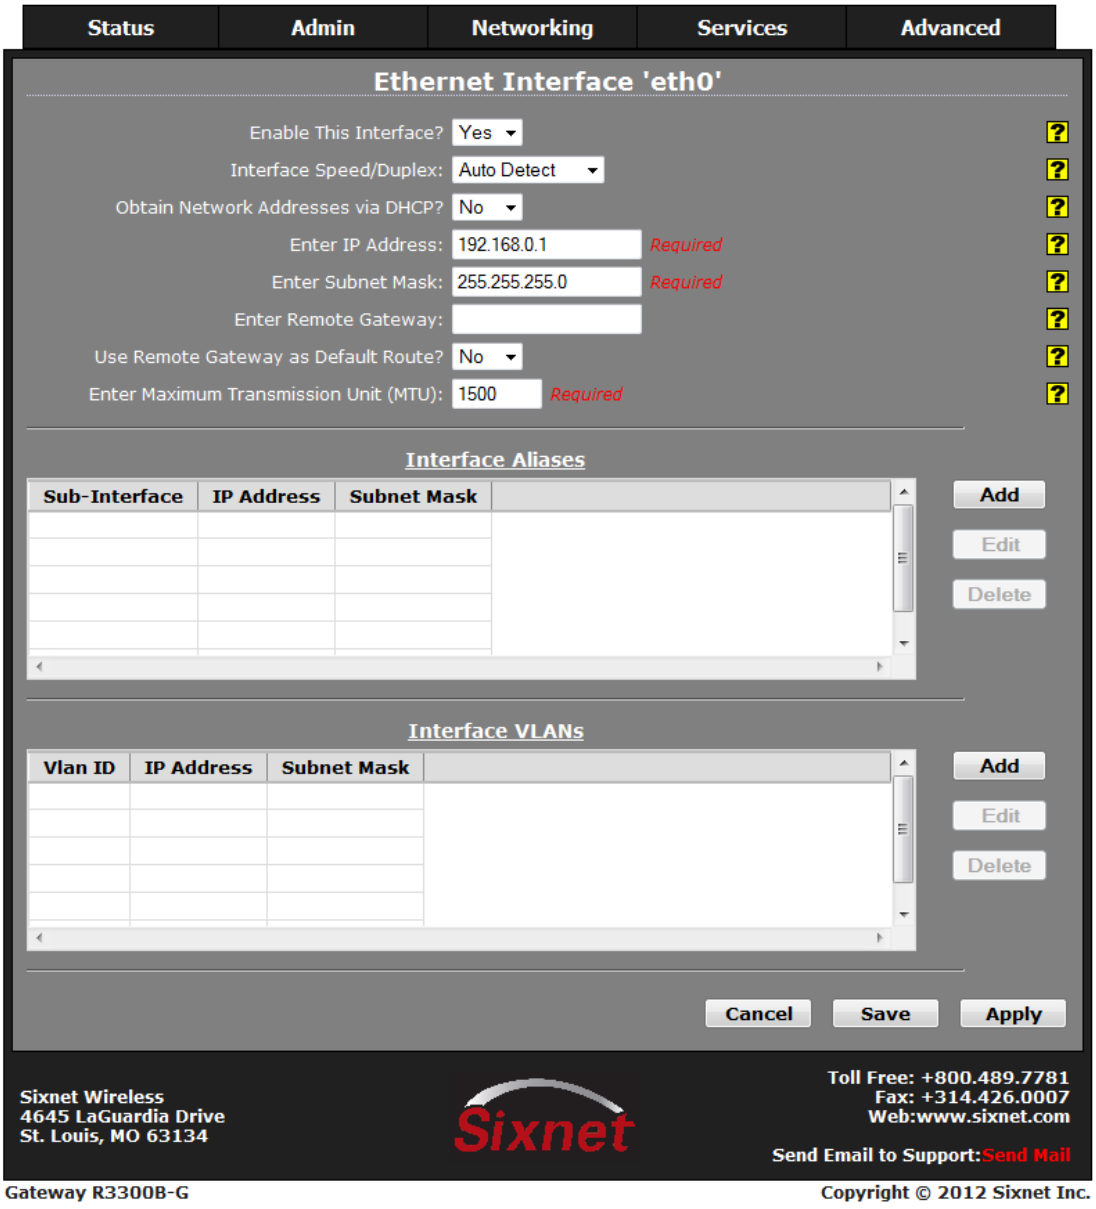

Enable This Interface: This field determines whether or not the specified Ethernet port is enabled or disabled, allowing the administrator to disable the port if necessary.

Note 1:
When the **Save** button is clicked, the interface will not be immediately activated or deactivated, but will be after the device is rebooted. This allows for other configuration changes to be made to the device which can be committed at a later time.

When the **Apply** button is clicked, the current settings will be saved and the interface will immediately be either deactivated or activated.

If the interface was already active, then it will be deactivated and reactivated using the configured settings just saved. If you were connected to the GAU via this interface, an attempt will be made to re-connect to it using the new settings, when possible.

Note 2:
Applying new settings to the interface may result in disconnection, requiring reconnection using alternate methods. Incomplete or incorrect network settings could render the device incommunicable and may require being able to connect either to the device directly or via the network to which it is attached.

Interface Speed/Duplex: This configuration parameter controls the speed and duplex behavior of the Ethernet port. Valid selections are:

- **Auto Detect:** The Ethernet port will attempt to automatically determine both the speed and the duplex settings of the device to which it is connected. Some devices to which Sixnet routers are connected do not always perform proper speed and duplex negotiation. In the event that throughput and performance difficulties are encountered, it is recommended that speed and duplex of both the Sixnet router, and the device to which it is connected, have the speed and duplex configuration explicitly specified.
- **10Mbps/Half:** If selected, the interface will communicate at 10 million bits per second and half duplex, meaning that one side will communicate while the other one listens.
- **100Mbps/Half:** If selected, the interface will communicate at 100 million bits per second and half duplex.
- **100Mbps/Full:** If selected, the interface will communicate at 100 million bits per second and full duplex, meaning the both sides may transmit and receive simultaneously.

Obtain Network Addresses via DHCP: This field determines how an IP address will be assigned to the specified Ethernet interface. If '**No'** is selected, the interface will have a 'Static' IP Address, the IP address will be manually specified. The IP Address, Subnet Mask, and Default Gateway fields will be visible so that the administrator may enter the appropriate information. If '**Yes'** is selected, the interface will have a 'Dynamic' IP Address, the router will employ its onboard DHCP client to issue a request for an IP address to the network in order to obtain an IP address, netmask and remote gateway and, optionally, use the remote gateway as the default route. In this configuration the IP Address, Subnet Mask, and Default Gateway fields will disappear and be unavailable to the administrator.

IP Address: This field specifies the IP address to be assigned to the Ethernet port when a 'Static' IP address configuration is selected. This field will not be visible or accessible when a 'Dynamic' IP address configuration is selected, as the DHCP server will provide the Sixnet router with the IP address that it should use.

The IP address identifies a device on a TCP/IP network. Every device on a network must have a unique address. The range of valid addresses for a given network is determined by the value of the Netmask.
Some addresses are reserved for special uses such as network and broadcast.
For example, if a netmask is 255.255.255.0 and the IP address assigned to the device is 192.168.1.3, then the range of valid addresses is 192.168.1.1 through 192.168.1.254 as 192.168.1.0 is the value reserved for the network and 192.168.1.255 is the value reserved for the broadcast address.

Subnet Mask: This field specifies the subnet mask to be assigned to the Ethernet port when a 'Static' IP address configuration is selected. This field is only available when Obtain Network Addresses via DHCP has been set to **No**. (Required)

Default Gateway: This field specifies IP address of the default gateway to be assigned to the Ethernet port when a 'Static' IP address configuration is selected. This field will not be visible or accessible when a 'Dynamic' IP address configuration is selected, as the DHCP server will provide the Sixnet router with the default gateway that it should use. If specified, the Default Gateway will tell the Sixnet router the IP address of a router to which the Sixnet router should forward all traffic for which it does not already know a specific route.

In the cases where the Sixnet router includes the use of a cellular modem, the cellular network will provide this information to the Sixnet router, and traffic will be default routed to the cellular network. Therefore, an additional default gateway should not be configured. If a default gateway is specified and a cellular interface is activated, the cellular interface will automatically become the default route.

Use Interface as Default Route: If this option is set to 'yes', the Sixnet router will forward any packets for which it does not have a route out through this interface. This parameter should not be specified if the Sixnet router will be using a cellular card, as the cellular interface will become the default gateway when it connects to the cellular carrier.

NOTE: Should a cellular interface be activated subsequent to an Ethernet interface having already been specified as the default route, the cellular interface will override the Ethernet default route. If this is not done, it will be impossible to route traffic over the cellular interface when it is activated.

Enter Maximum Transmission Unit (MTU): In computer networking, the Maximum Transmission Unit (MTU) of a communications protocol of a layer is the size (in bytes) of the largest protocol data unit that the layer can pass onwards. MTU parameters usually appear in association with a communications interface (NIC, serial port, etc.). Standards (Ethernet, for example) can fix the size of an MTU; or systems (such as point-to-point serial links) may decide MTU at connect time. A larger MTU brings greater efficiency because each packet carries more user data while protocol overheads, such as headers or underlying per-packet delays, remain fixed; the resulting higher efficiency means a slight improvement in bulk protocol throughput. A larger MTU also means processing of fewer packets for the same amount of data. In some systems, per-packet-processing can be a critical performance limitation. However, this gain is not without some downside. Large packets can occupy a slow link for some time, causing greater delays to following packets and increasing lag and minimum latency. For example, a 1500-byte packet, the largest allowed by Ethernet at the network layer (and hence over most of the Internet), ties up a 14.4k modem for about one second.
Recommended Setting: 1500

Interface Aliases (Sub Interfaces)

Sub interfacing is essentially the segmenting of a single wire, or port, into multiple IP networks. Instead of subnetting and routing, you can create a sub interface and then set it up as you would a standard Ethernet interface.

To configure a sub interface:

- Click on the "Add" button and the following pop-up window will appear:

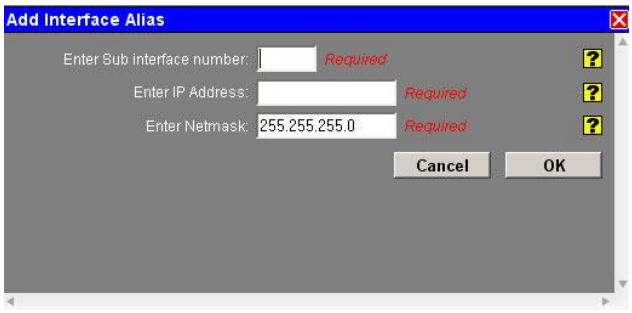

Enter Sub interface number: Enter the desired Sub interface number in the file provided. The valid range is 0-99, and each aliased interface must be uniquely numbered. The final sub interface name will then be in the form **ethx:y** where **x** is the root interface number and **y** is the sub-interface number.

Enter IP Address: This field specifies the IP Address of the sub interface.

Enter Netmask: This field specifies the netmask to be assigned to the sub interface.

- Click on the "OK" button once the inputs are completed. This will populate the Ethernet screen. Once you are finished, click "Save" and then "Apply"

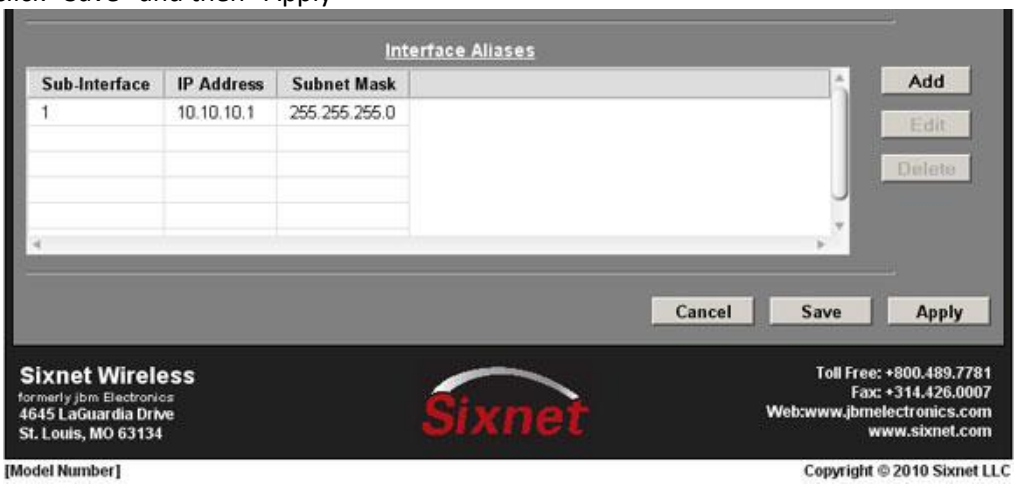

The "usb Interfaces" menu item allows the administrator to configure the usb port of Sixnet routers to meet their needs. The default address is set for 192.168.111.1 with subnet mask of 255.255.255.0.

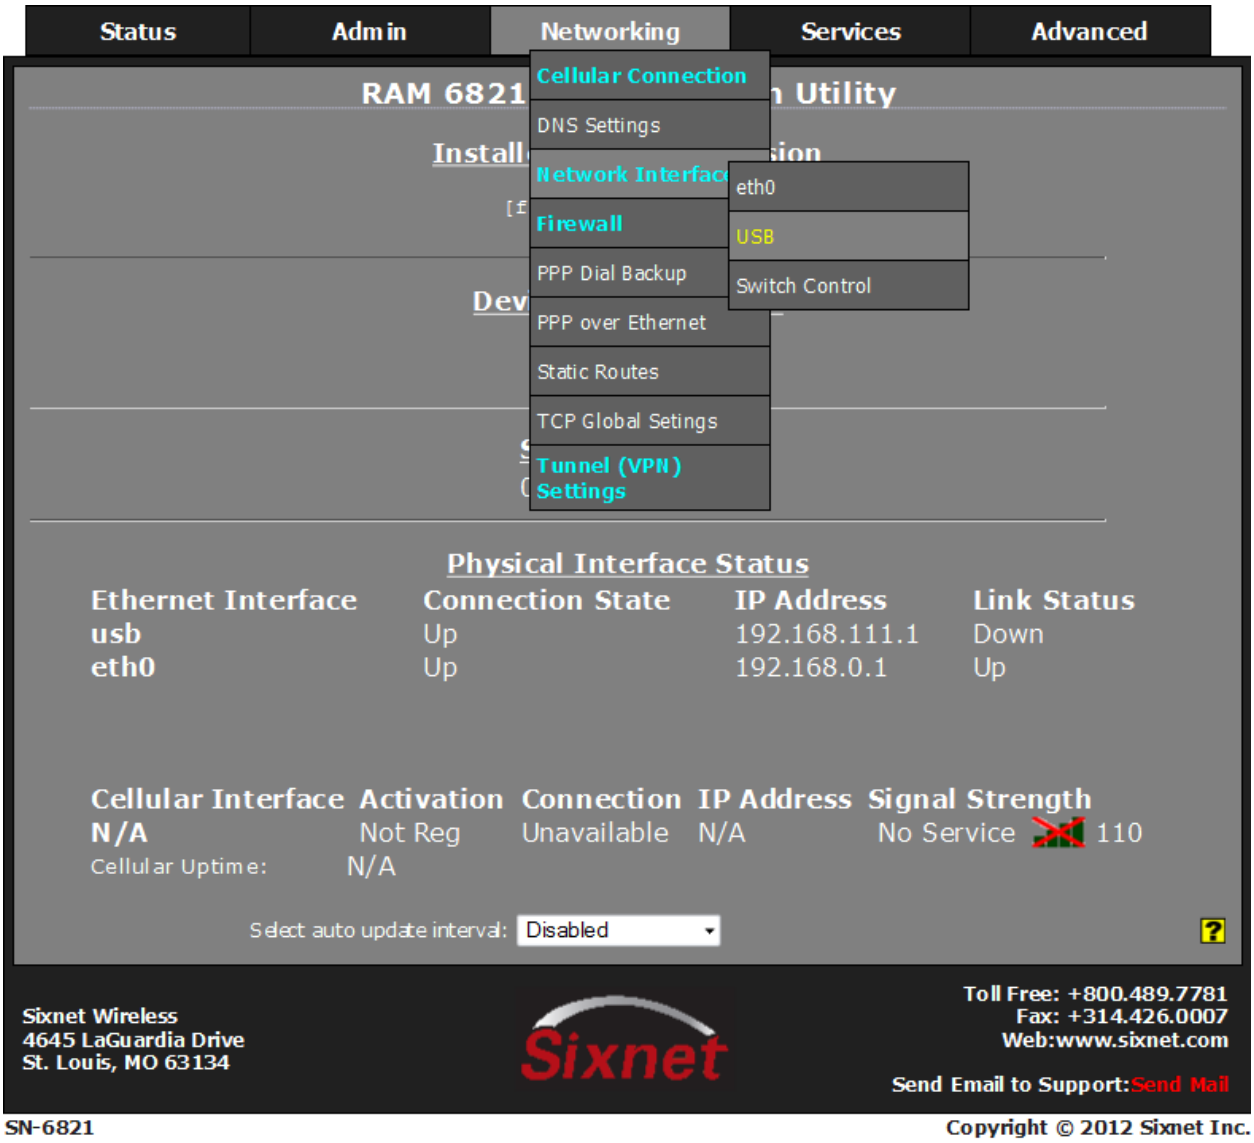
Status
Admin
Networking
Services
Advanced
Cellular Connection
DNS Settings
Network Interfac
Firewall
PPP Dial Backup
PPP over Ethernet
Static Routes
TCP Global Setings
Tunnel (VPN) Settings
eth0
USB
Switch Control
RAM 6821
Utility
Physical Interface Status
Ethernet Interface
Connection State
IP Address
Link Status
usb
Up
192.168.111.1
Down
eth0
Up
192.168.0.1
Up
Cellular Interface
Activation
Connection
IP Address
Signal Strength
N/A
Not Reg
Unavailable
N/A
No Service
110
Cellular Uptime:
N/A
Select auto update interval:
Disabled
Sixnet Wireless
4645 LaGuardia Drive
St. Louis, MO 63134
Sixnet
Toll Free: +800.489.7781
Fax: +314.426.0007
Web:www.sixnet.com
Send Email to Support:Send Mail
SN-6821
Copyright © 2012 Sixnet Inc.

Click on the “usb’ menu item and the following window will appear:

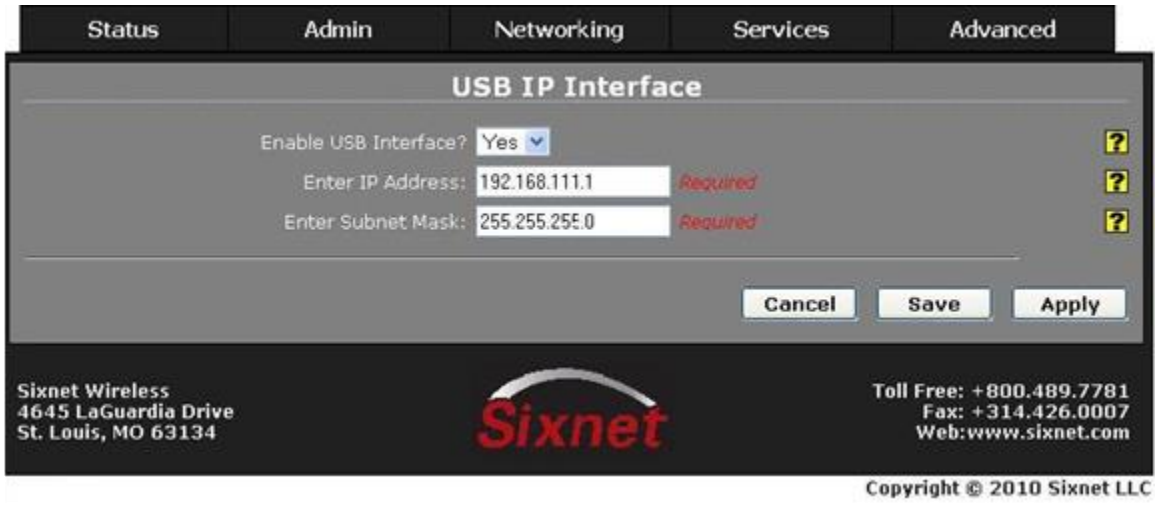

Select “Yes” to enable the USB interface.

- Enter the desired interface IP Address and Subnet Mask into their designated field. (Required)

  The IP address identifies a device on a TCP/IP network. Every device on a network must have a unique address. The range of valid addresses for a given network is determined by the value of the Netmask. Some addresses are reserved for special uses such as network and broadcast.

  For example, if a netmask is 255.255.255.0 and the IP address assigned to the device is 192.168.1.3, then the range of valid addresses is 192.168.1.1 through 192.168.1.254 as 192.168.1.0 is the value reserved for the network and 192.168.1.255 is the value reserved for the broadcast address.

- Click on “Save” button for changes to be saved without activation the interface.

- Click on “Apply” button for changes to be saved and activate this interface.

Switch Control

This mode is only available on RAM-6x21 - 5 port equipped hardware. The purpose of the Switch Control function is to create a WAN/LAN separation similar to what is seen on the R series router. This gives the user the ability to create a divided network with additional capabilities.

Switch Control Settings

Split LAN Enable: This will alter the switch port allocations. When disabled, all switch ports 1-5 will be treated as a single LAN. This will be configurable as eth0 and will default to being a firewall trusted/internal interface.

When enabled, port 5 will be divided out as a WAN port, eth0 (firewalled as external/untrusted). Ports 1-4 will be an internally trusted LAN.

WARNING: When switching modes, your firewall interface tables will be rebuilt and may need any custom changes reapplied. In addition, a USER INITIATED reboot is required to complete the mode switch.

WARNING! When enabling switch mode, current Ethernet settings (eth0) will apply only to the single WAN port. On the front of the unit, this may be shown as <Port 5> under the power connector. The remaining four ports will be configured as a LAN (eth1).
Please check your Ethernet connections to make sure that the new settings will not conflict with previous network configurations. You may need to revisit your Untrusted/Trusted interface lists in the Firewall→General Settings, as these will revert to new defaults (eth0 will be firewalled as Untrusted!). After an Apply is performed and you check firewall/ethernet configurations, a reboot is REQUIRED to complete this process.

3.4.4 Firewall

The “Firewall” menu item allows you to configure every aspect of the firewall on the Sixnet router.

It is organized into nine (9) sub-sections:

- General Settings
- DMZ Host Rules
- Filter Rules

- Host Redirect Rules
- Masquerade Rules
- NAT Rules
- Service Access Rules
- Subnet Blacklist Rules
- Subnet Whitelist Rules

General Settings (Firewall)

The “General Settings” allows you to configure common access services to the Sixnet router and configure how the interfaces are interpreted.
Click on the “General Settings” menu item and the following window will appear:

Enable Firewall? Determines whether the firewall is enabled or disabled. Default is "**Yes**".
*Note: Disabling the Firewall will compromise not only security, but many router functions of the unit.

Allow PING? To allow ICMP echo responses from external devices through untrusted interfaces on this unit, select "**Yes**", otherwise select "**No**".

Allow SSH? To allow external devices to connect to the SSH Server, via port 22, through untrusted interfaces on this unit, select "**Yes**", otherwise select "**No**".
*Note: Setting this option to Yes does not enable the SSH server, it just allows it to be accessible via

the firewall when it is enabled. The SSH Server may be enabled via the Services→SSH Server screen.

If the SSH Server is configured to use a port other than 22, a rule specifically for the alternate port will need to be added via the Networking→Firewall→Service Access Rules screen.

Allow Telnet? To allow external devices to connect to the TELNET Server, via port 23, through untrusted interfaces on this unit, select "**Yes**", otherwise select "**No**".
*Note: Setting this option to Yes does not enable the TELNET Server, it just allows it to be accessible via the firewall when it is enabled. The TELNET Server may be enabled via the Services→TELNET Server screen.

Allow Modbus? To allow external devices to connect to the MODBUS Server, via port 502, through untrusted interfaces on this unit, select "**Yes**", otherwise select "**No**".

Allow DNP3? To allow external devices to connect to the DNP3 Server, via port 20000, through untrusted interfaces on this unit, select Yes, otherwise select No.

To restrict access via a configured Whitelist, click the checkbox marked Use Whitelist and then select a Whitelist name from the list of names available in the drop-down list box provided.
Whitelists may be viewed/defined via the Networking→Firewall→Subnet Whitelist Rules screen.

Note: Setting this option to Yes does not enable the DNP3 Server, it just allows it to be accessible via the firewall when it is enabled. The DNP3 Server may be enabled via the Services→Automation→DNP3→Physical Link Layer screen.
Recommended Setting: No

Web Interface Access? To allow external devices to connect to the Gateway Administration Utility (GAU), through untrusted interfaces on this unit, select "**Yes**", otherwise select "**No**".

Allow SNMP Agent Access? To allow external devices to connect to the SNMP Agent, via port 161, through untrusted interfaces on this unit, select "**Yes**", otherwise select "**No**".

Note: To restrict access for above services via a configured Whitelist, click the checkbox marked "Use Whitelist" next to their corresponding service option and then select a Whitelist name from the list of names available in the drop-down list box provided.
Whitelists may be viewed/defined via the Networking→Firewall→Subnet Whitelist Rules screen.

Allow IPSEC? Specify whether to allow ESP data, as well as UDP port 500 to communicate with external devices through Untrusted interfaces. Default is "Yes".
***Note: This is necessary if you are planning to configure any IPSEC tunnels originating from the Sixnet router.**

Allow NAT-Traversal? Specify whether to allow data on UDP port 4500 on un-trusted interface.

Note: This is necessary if you are planning to run any IPSEC tunnels through our device.
This would support a unit behind a trusted interface to make an IPSEC connection to a host beyond an untrusted interface.

Trusted Interface: Identifies the trusted (internal) Interface. Traffic from this interface will be permitted outbound. Default is "**WAN/eth0**".

- Click on the "Add" button for Trusted Interface and the following pop-up window will appear:

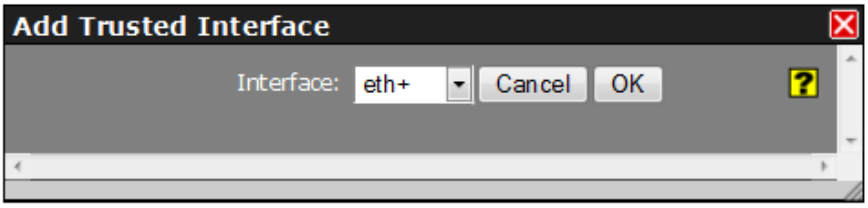

Interface: Choose an interface from the drop-down lists provided. You may add any number of interfaces, up to as many exist on the device. Each selection must be unique. Trusted interfaces will not block traffic to/from devices connected to that interface.

- Click on the "OK" button to populate the Trusted Interface screen.

Untrusted Interface: Identifies the Primary Untrusted (external) Interface. Default is "**ppp0**".

- Click on the "Add" button for Untrusted Interface and the following pop-up window will appear:

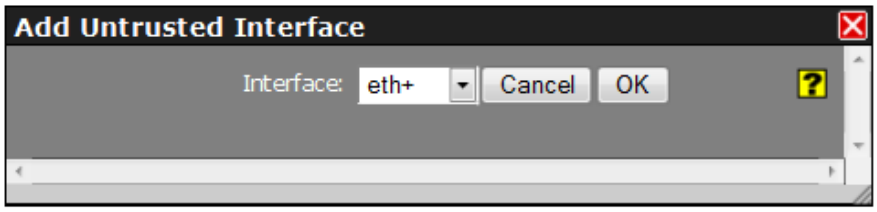

Interface: Choose an interface from the drop-down lists provided. You may add any number of interfaces, up to as many exist on the device. Each selection must be unique. Untrusted interfaces will block all incoming traffic from devices connected to this interface.

- Click on the "OK" button to populate the Untrusted Interface screen.

- Click on the "Save" button and the following pop-up window will appear:

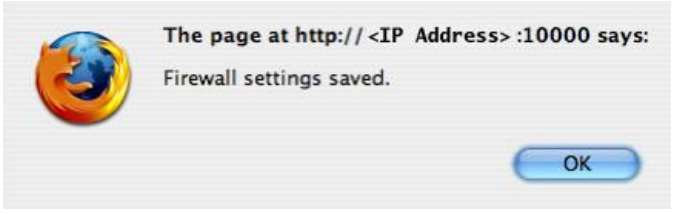

- Click on the "OK" button to acknowledge the content.

- Click on the “Apply” button and the following pop-up window will appear:

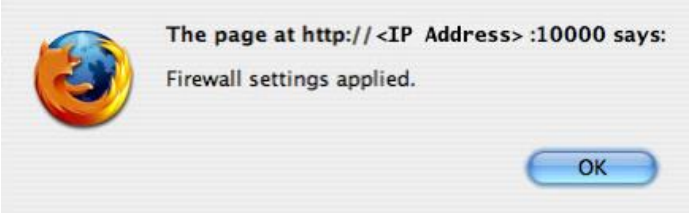

- Click on the “OK” button to acknowledge the content.

DMZ Host Rules (Firewall)

"DMZ Host Rules" are used to configure rules to route through a Demilitarized Zone (DMZ).

- Click on the "DMZ Host Rules" menu item and the following window will appear:

To add a DMZ host rule:

- Click on the "Add" button and the following pop-up window will appear:

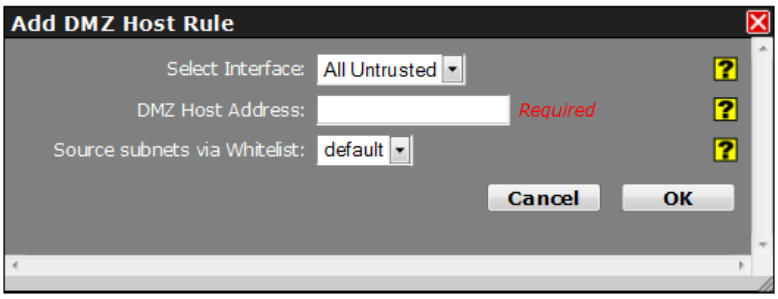

Select Interface: Click on the pull down menu to choose an interface that will be forwarded to a DMZ Host. All incoming packets (TCP/UDP/ICMP/etc) will be forwarded to the DMZ Host specified.

DMZ Host Address: Enter the IP address of the DMZ Host. This IP address will receive all packets destined for the interface specified. (Required)

NOTE: Host Redirect and Service Access rules will apply first, and may prevent certain ports from reaching the DMZ Host.

Source subnets via whitelist: Select a whitelist name from the list of names available in the drop-down list box provided. Whitelists may be viewed/defined via the **Networking→Firewall→Subnet Whitelist Rules** screen.

- Click on the “OK” button to populate the DMZ Host Rules screen.

- Click on the “Save” button and the following pop-up window will appear:

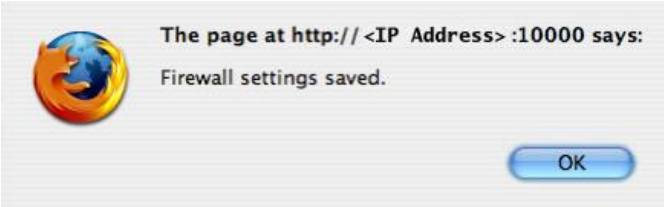

- Click on the “OK” button to acknowledge the content.
- Click on the “Apply” button and the following pop-up window will appear:

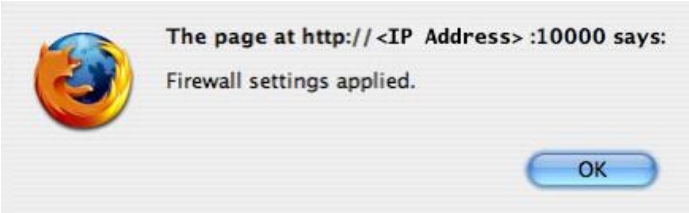

- Click on the “OK” button to acknowledge the content.

Filter Rules (Firewall)

The "Filter Rules" menu item allows you to configure routes from a small range of IP Addresses or all IP Addresses through one or more interfaces to a designated IP Address located behind the Sixnet router.

- Click on the "Filter Rules" menu item and the following window will appear:

To add a filter rule:

- Click on the "Add" button and the following pop-up window will appear:

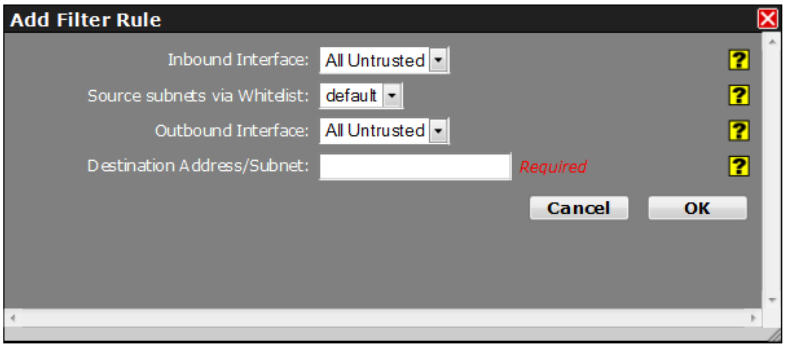

Inbound Interface: Click on the pull down menu to choose an interface associated with the Source Address/Subnet.

Source subnets via whitelist: Select a whitelist name from the list of names available in the drop-down list box provided. Whitelists may be viewed/defined via the **Networking→Firewall→Subnet Whitelist Rules** screen.

Outbound Interface: Select the interface associated with the Destination Address/Subnet.

Destination Address/Subnet: Enter the network to which the firewall will allow access from the Outbound Interface.

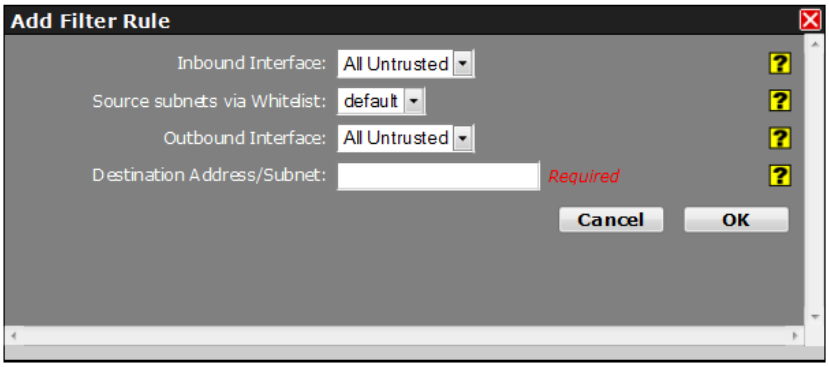

- Click on the "OK" button to populate the Filter Rules screen.

- Click on the "Save" button and the following pop-up window will appear:

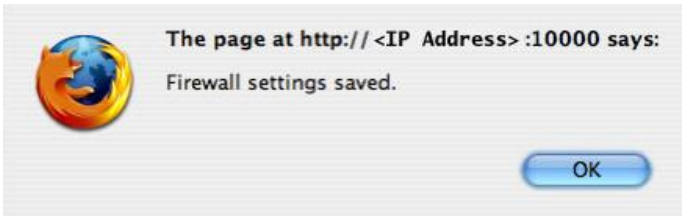

- Click on the "OK" button to acknowledge the content.

- Click on the “Apply” button and the following pop-up window will appear:

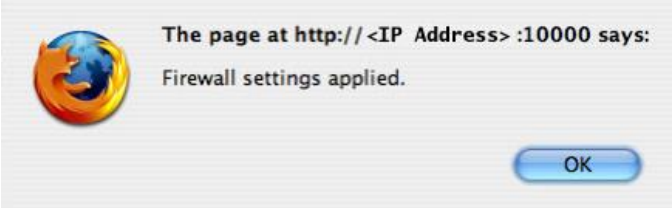

- Click on the “OK” button to acknowledge the content.

Host Redirect (Port Forwarding) Rules

The “Host Redirect Rules” menu item allows you to configure port forwarding rules that permit ports on external, untrusted interfaces to be passed to ports on internal hosts on the same or different ports.

- Click on the “Host Redirect Rules” menu item and the following window will appear:

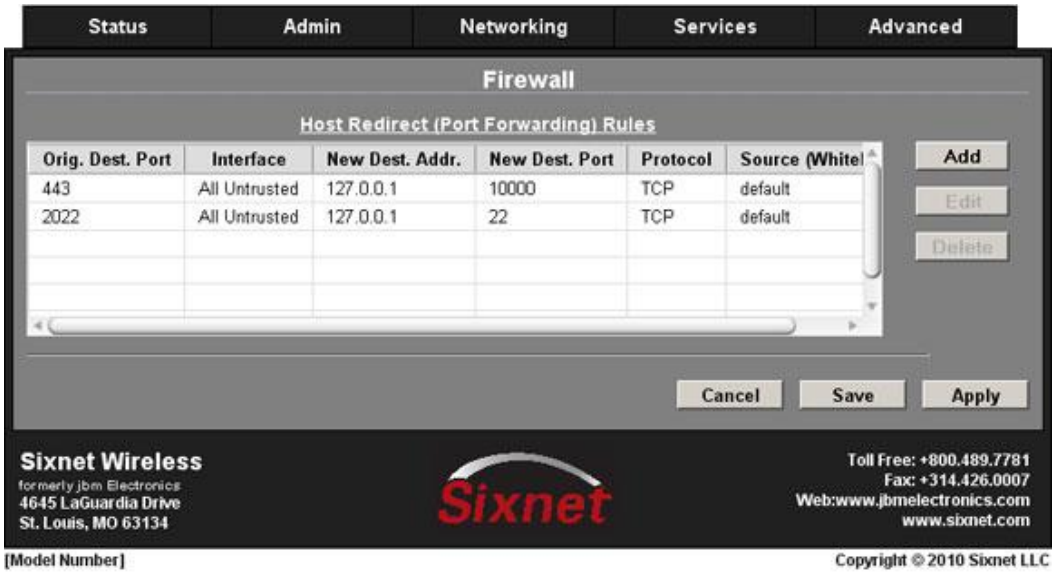

To add a new host redirect rule:

- Click on the “Add” button and the following pop-up window will appear:

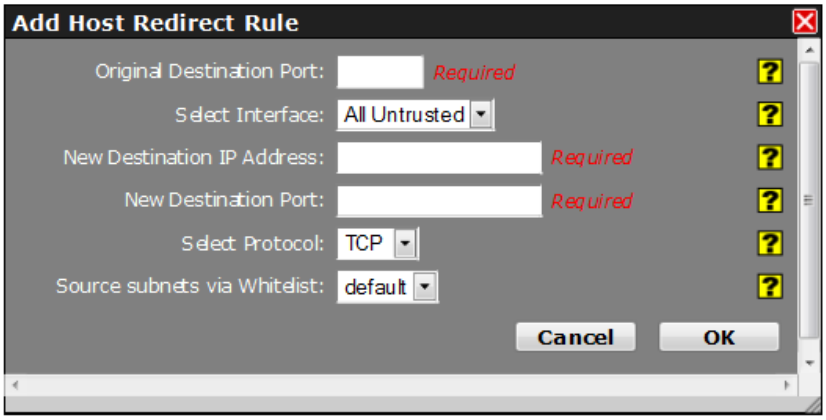

Original Destination Port: Enter the port that an external device will try to connect to. This is the port that will be open on the specified interface. (Required)

Select Interface: Click on the pull down menu to select the interface on which to open the specified port. Incoming connections will be allowed.

New Destination IP Address: Enter the IP Address that the incoming connection will be redirected to. This can be an IP address within or beyond this device. (Required)

New Destination Port: Enter the port that the incoming connection will be redirected to. This may be the same port number or a different port number as the Original Destination Port. (Required)

Select Protocol: Choose the protocol type for this port's data. Options are TCP and UDP.

Source subnets via whitelist: Select a whitelist name from the list of names available in the drop-down list box provided. Whitelists may be viewed/defined via the **Networking→Firewall→Subnet Whitelist Rules** screen.

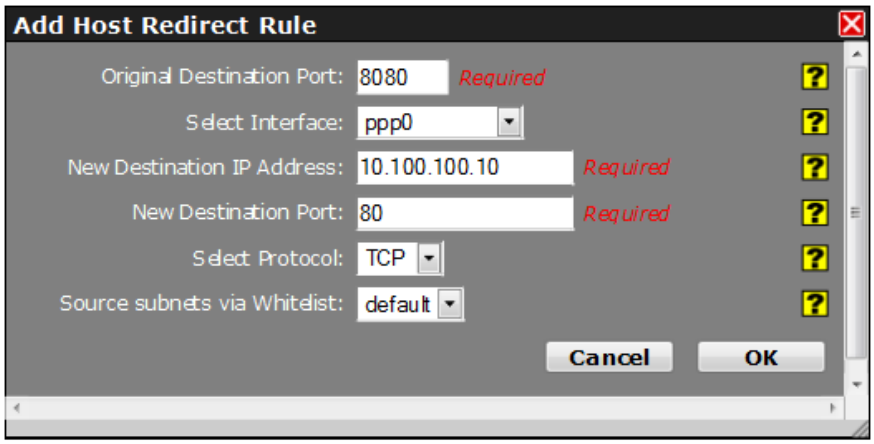

- Click on the “OK” button to populate the Host Redirect Rule screen

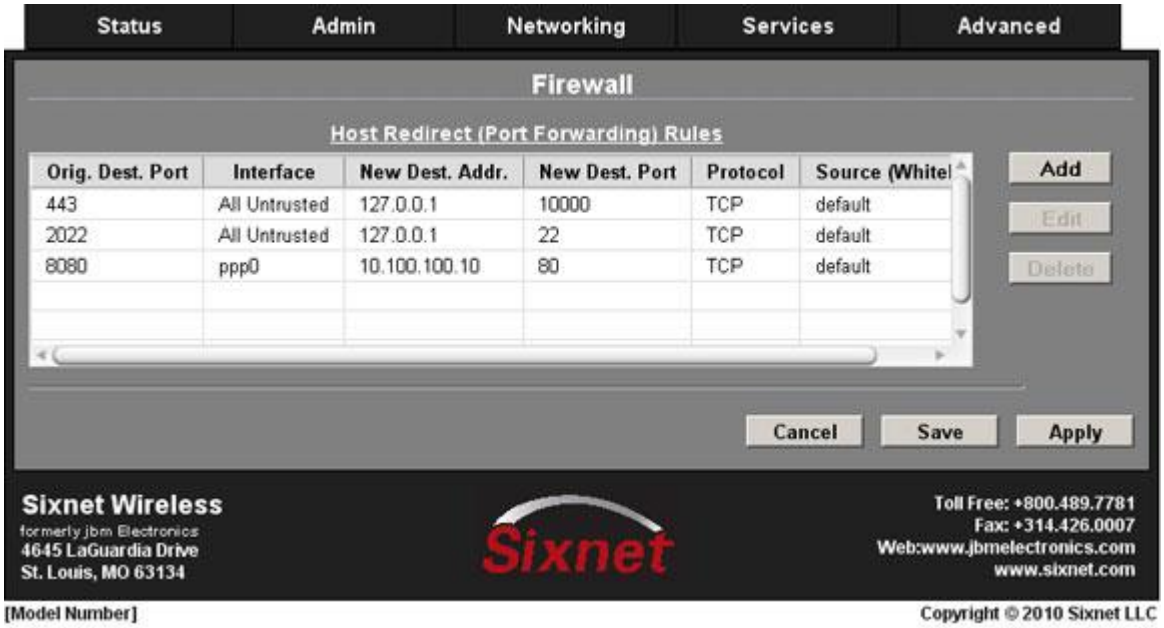

- Click on the “Save” button and the following pop-up window will appear:

- Click on the “OK” button to acknowledge the content
- Click on the “Apply” button and the following pop-up window will appear:

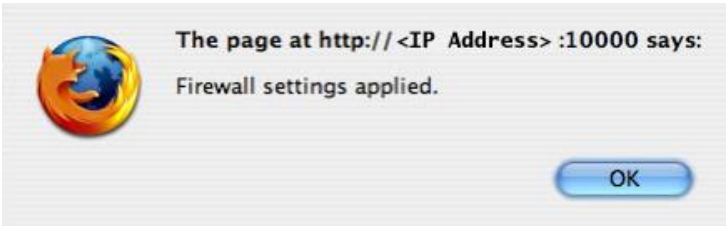

- Click on the “OK” button to acknowledge the content

Masquerade Rules

The "Masquerade Rules" menu item allows you to configure an interface to give all IP Addresses on a local network access to the Internet.

- Click on the "Masquerade Rules" menu item and the following window will appear:

To add a new masquerade rule:

- Click on the "Add" button and the following pop-up window will appear:

Original Source Subnet: Enter the subnet, using IP/CIDR notation that will be masqueraded out a specific interface. All traffic that is sourced from this subnet and that is destined to go out the specified interface, will be masqueraded with the source IP address of the interface specified. (Required)

Interface: Click on the pull down menu to select the interface through which you wish to masquerade source addresses.

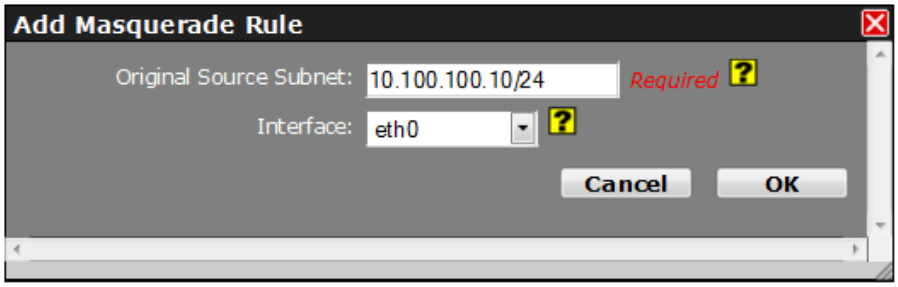

- Click on the "OK" button to populate the Masquerade Rules screen

- Click on the "Save" button and the following pop-up window will appear:

- Click on the "OK" button to acknowledge the content.
- Click on the "Apply" button and the following pop-up window will appear:

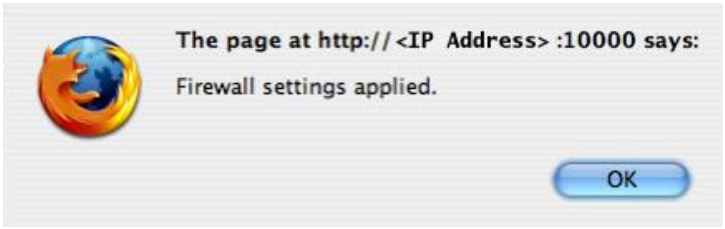

- Click on the "OK" button to acknowledge the content

Network Address Translation (NAT) Rules

The "NAT Rules" menu item allows you to provide access to the Internet through a single machine that translates the IP addresses. The NAT itself has one or more IP addresses, but all the machines behind the NAT have 'private' Internet addresses.

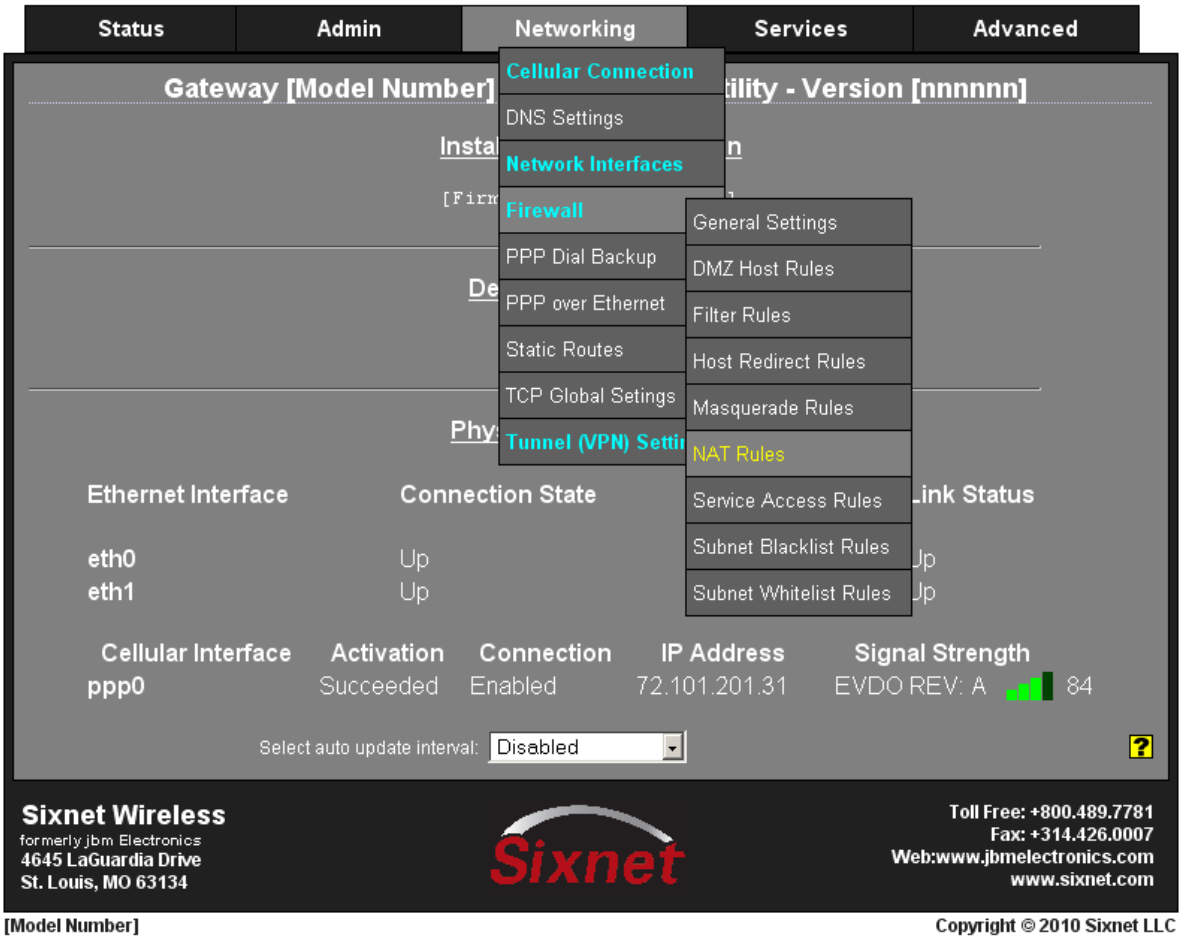

One-To-One NAT will perform a complete forwarding of all ports on the Original Destination IP to a new IP address entered in New Destination. Because the Original Destination need not be configured on this router, an interface is not required to setup.

One-To-One NAT Range will perform a complete forwarding of all ports for the range of starting/ending Original Destination IP's to a range of starting/ending New Destination IP addresses entered in New Destination Address Start and New Destination Address End fields. Both fields can be any valid IP. Neither need to be already present/configured/owned on a local interface of this device. (Required)

NOTE: Host Redirect and Service Access rules will apply first, and may prevent certain ports from reaching the New Destination. Ports 1-19 are excluded.

Click on the "NAT Rules" menu item and the following window will appear:

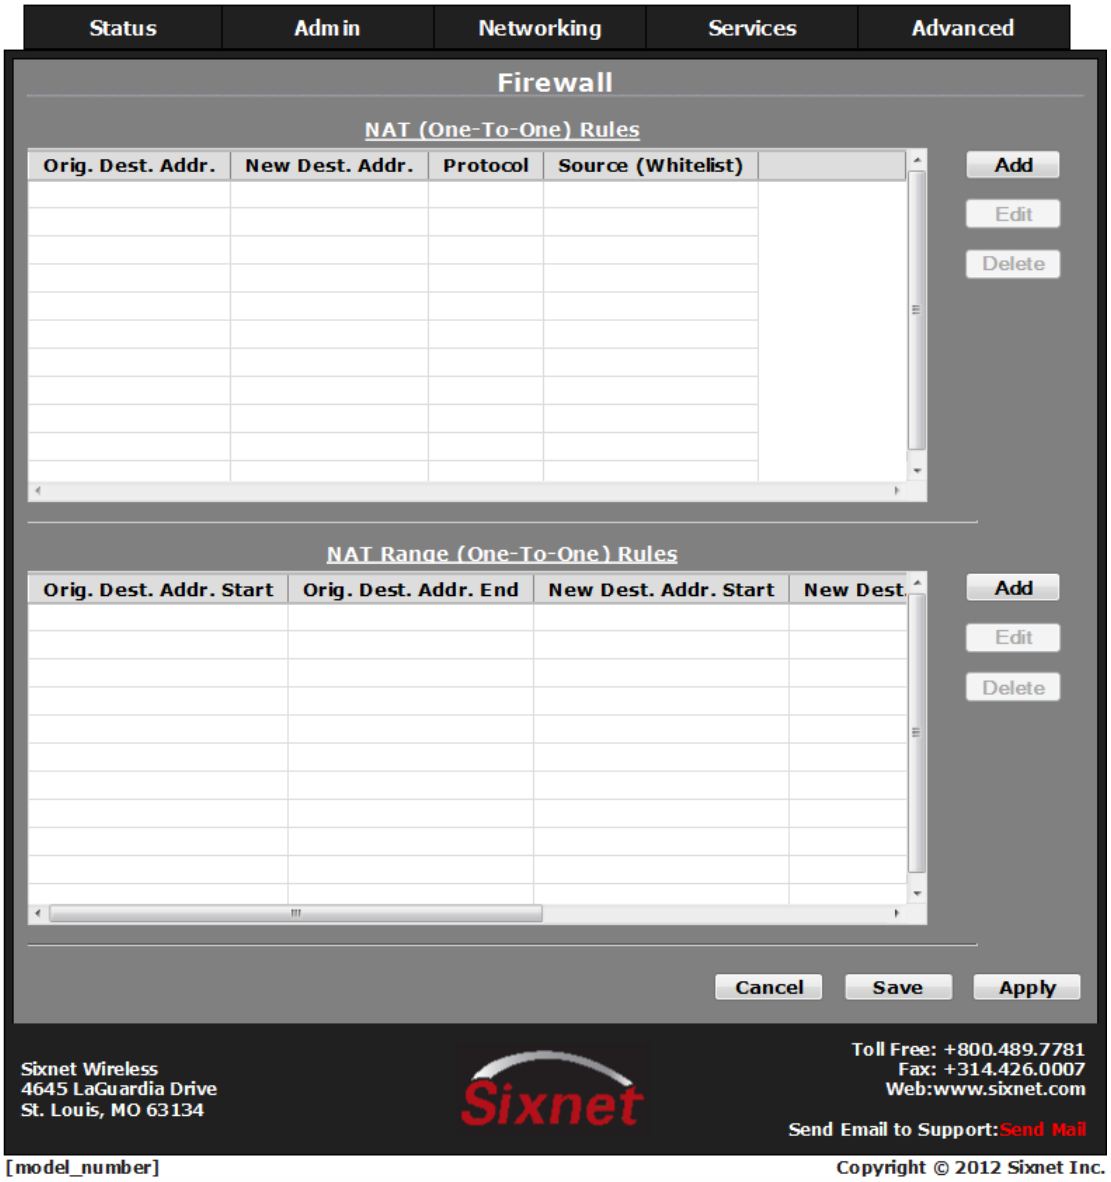

To add a new NAT (One-To-One) rule:

- Click on the “Add” button and the following pop-up window will appear:

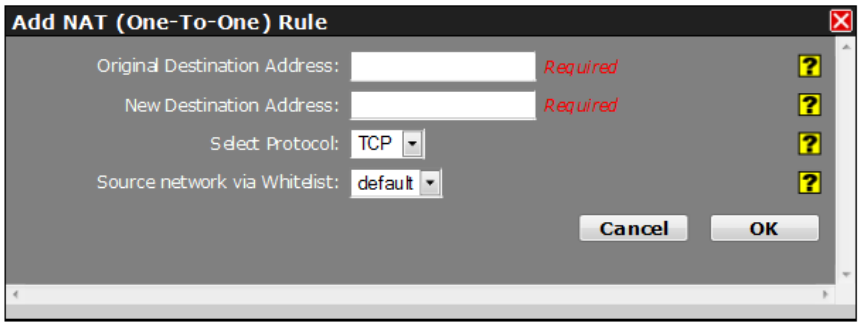

Original Destination Address: One-To-One NAT will perform a complete forwarding of all ports on the Original Destination IP to a new IP address entered in New Destination. Both fields can be any valid IP. Neither need to be already present/configured/owned on a local interface of this device. (Required)

New Destination Address: One-To-One NAT will perform a complete forwarding of all ports on the Original Destination IP to a new IP address entered in New Destination. Both fields can be any valid IP. Neither need to be already present/configured/owned on a local interface of this device. (Required)

Select Protocol: Choose the protocol type for this port's data. Options are TCP, UDP, All.

Source network via whitelist: Select a whitelist name from the list of names available in the drop-down list box provided. Whitelists may be viewed/defined via the **Networking→Firewall→Subnet Whitelist Rules** screen.

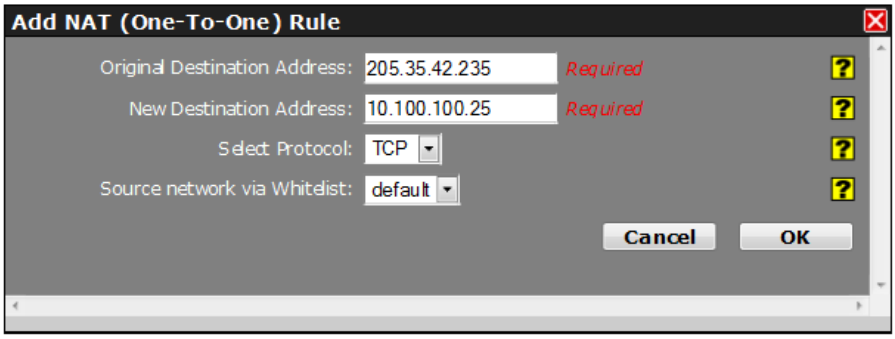

- Click on the "OK" button to populate the NAT Rules screen

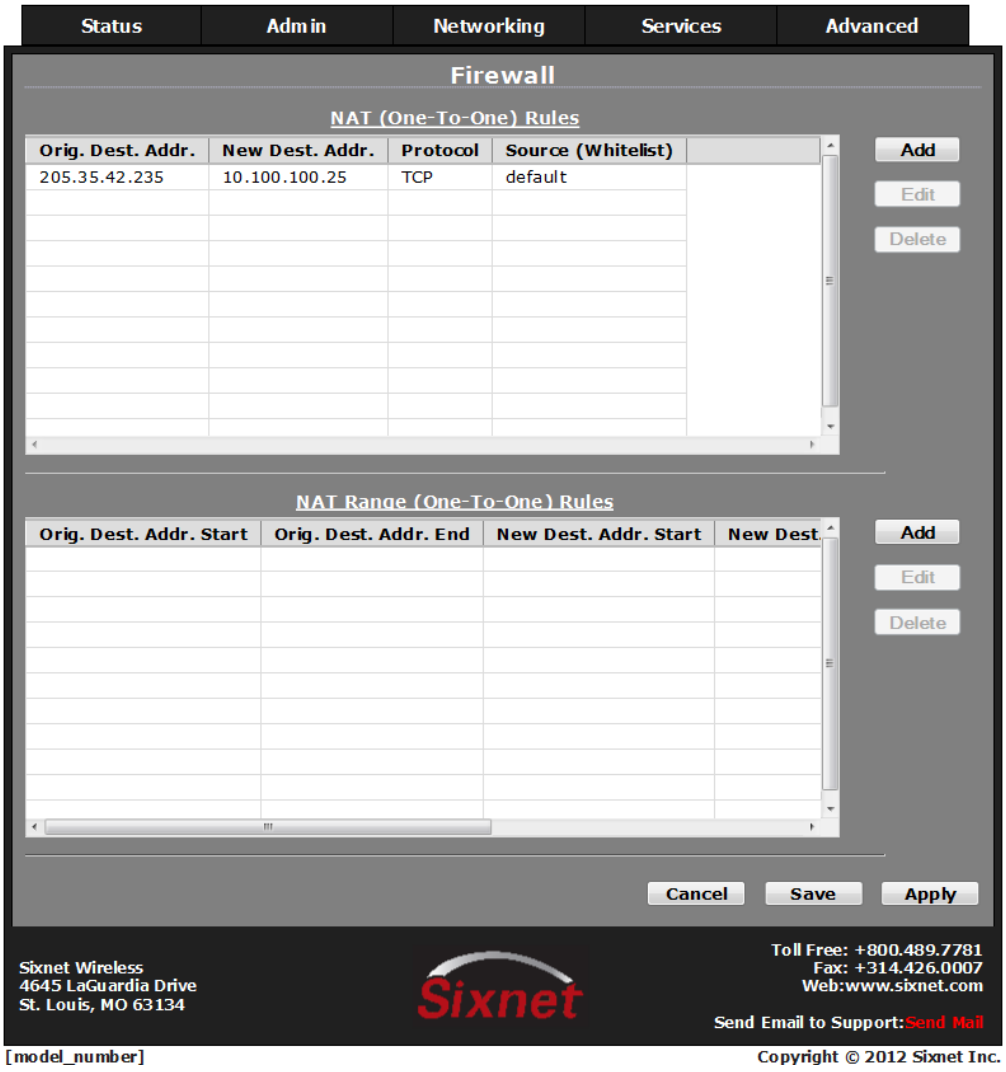

Click on the "Save" button and the following pop-up window will appear:

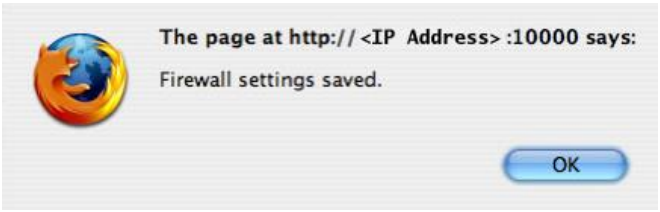

- Click on the "OK" button to acknowledge the content
- Click on the "Apply" button and the following pop-up window will appear:

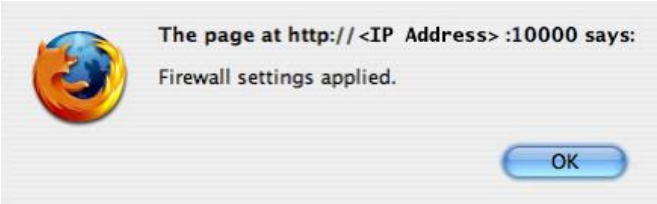

- Click on the "OK" button to acknowledge the content

To add a new NAT Range rule:

- Click on the "Add" button and the following pop-up window will appear:

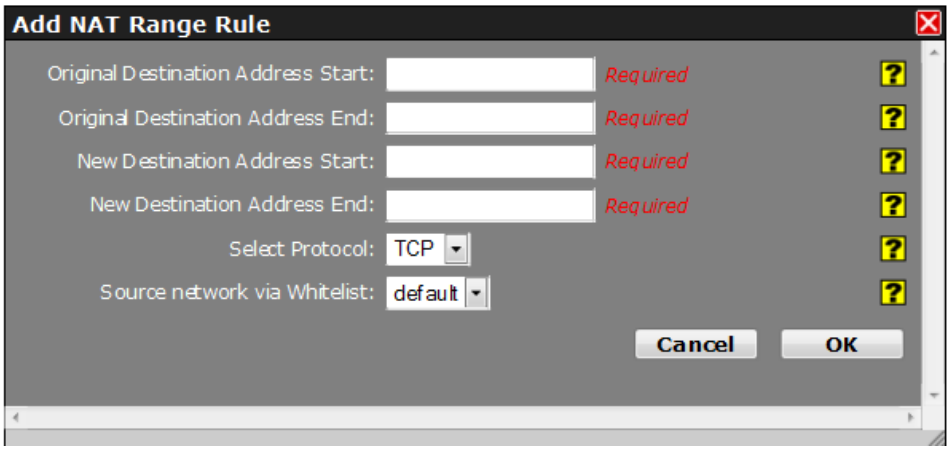

Original Destination Address Start: This field is used to hold the starting address of the range being transformed by NAT, the IP's seen by a remote host. This address may be owned by an interface on this device, or an unowned/fake range with a corresponding route (static or default).

Original Destination Address End: This field is used to hold the ending address range being transformed by NAT, the IP's seen by a remote host. This address may be owned by an interface on this device, or an unowned/fake range with a corresponding route (static or default).

New Destination Address Start: This field is used to hold the starting range of real LAN IP of the destination device behind this router.

New Destination Address End: This field is used to hold the ending range of real LAN IP of the destination device behind this router.

Select Protocol: Choose the protocol type for this port's data. Options are TCP, UDP, All. (Required)

Source network via Whitelist: Select a whitelist name from the list of names available in the drop-down list box provided.

Whitelists may be viewed/defined via the Networking→Firewall→Subnet Whitelist Rules screen.

Service Access Rules (Port Allow)

The "Service Access Rules" menu item allows you to define what ports, either as a single port or a range of ports that is authorized access through the firewall on the Sixnet router.

- Click on the "Service Access Rules" menu item and the following window will appear:

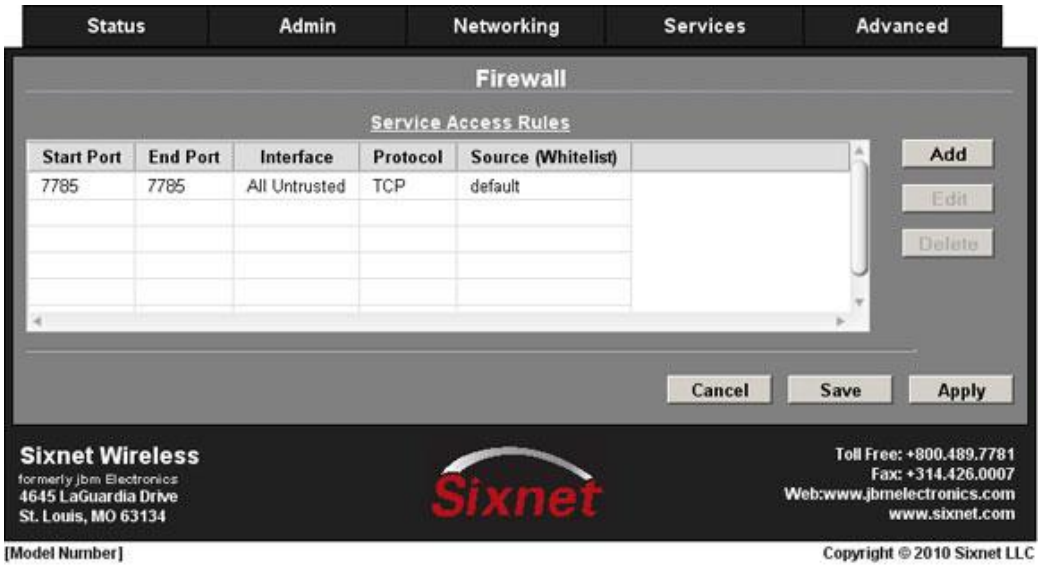

To add a new Service Access Rule:

- Click on the "Add" button and the following pop-up appears:

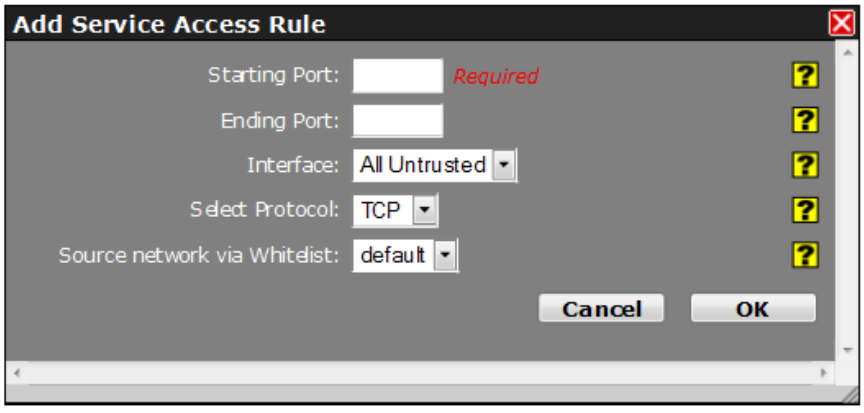

Starting Port: Enter the starting TCP or UDP port number for this rule. (Required)

NOTE: If adding only one port, enter it here.

Ending Port: Enter the ending TCP or UDP port number for this rule.

NOTE: If adding only one port, please omit this entry.

Interface: Select the interface on which this port will be opened. Incoming connections to this interface will be allowed into the device. **Note:** For connections destined to a device beyond this unit, use Host Redirect, NAT or DMZ rules instead.

Select Protocol: Choose the protocol for the type of data you want to allow. Options are TCP or UDP.

Source network via whitelist: Select a whitelist name from the list of names available in the drop-down list box provided. Whitelists may be viewed/defined via the **Networking→Firewall→Subnet Whitelist Rules** screen.

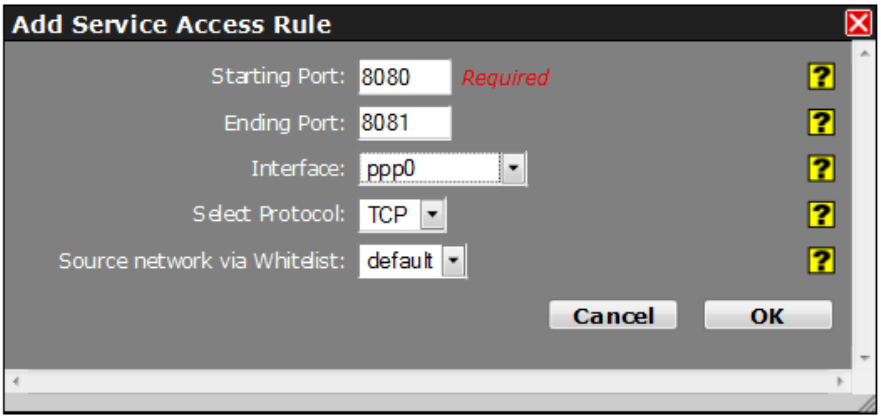

- Click on the "OK" button to populate the Service Access Rules screen

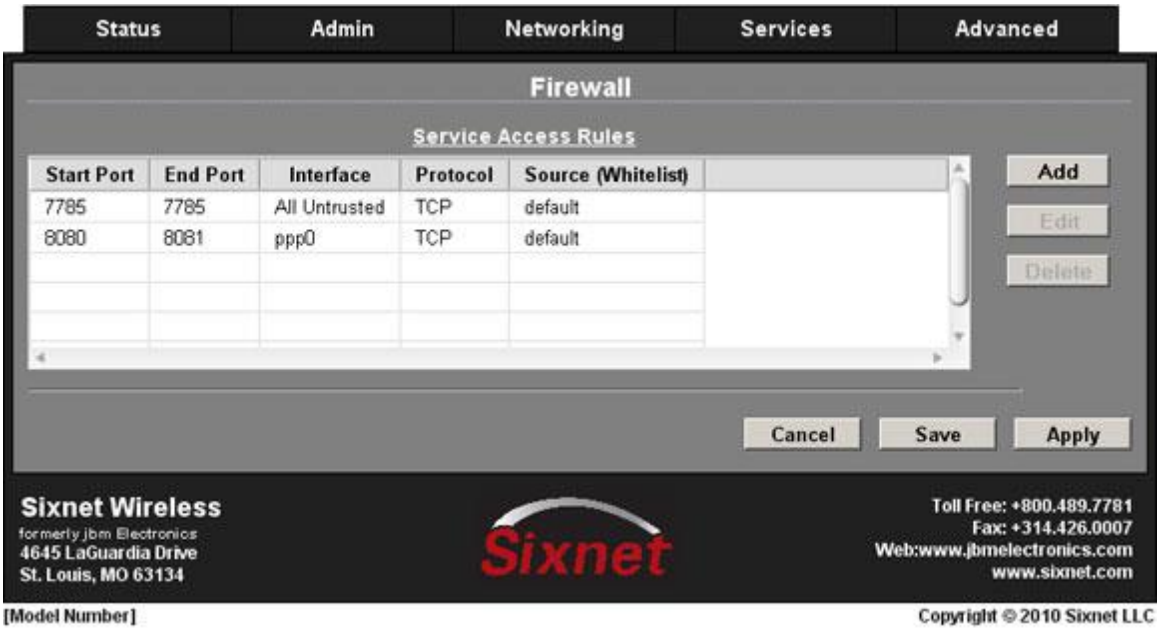

- Click on the “Save” button and the following pop-up window will appear:

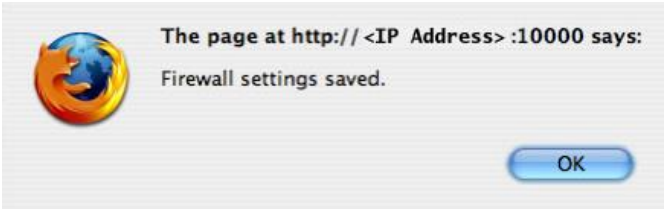

- Click on the “OK” button to acknowledge the content.
- Click on the “Apply” button and the following pop-up window will appear:

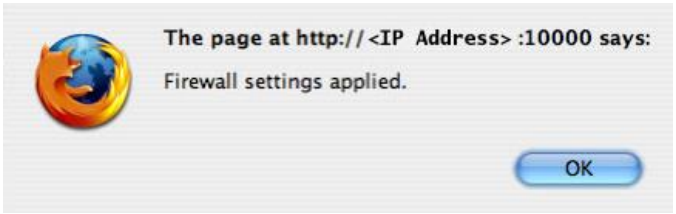

- Click on the “OK” button to acknowledge the content

Subnet Blacklist Rules

The "Subnet Blacklist Rules" menu item allows you to define a single IP Address or an entire network that you do not want to allow access into the network behind the Sixnet router.

- Click on the "Subnet Blacklist Rules" menu item and the following window will appear:

To add a new item to the list:

- Click on the "Add" button and the following pop-up window will appear:
-

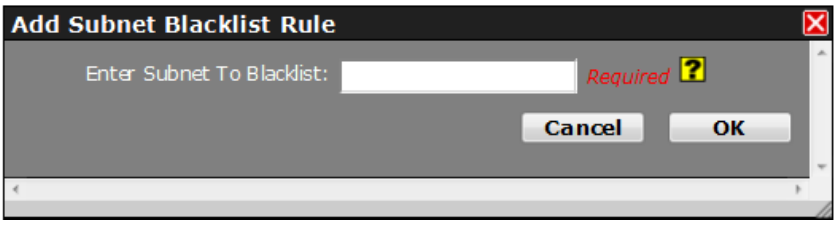

Enter Subnet To Blacklist: Enter the network to be banned from making any incoming connections, using IP/CIDR notation. To allow data from any source, enter 0.0.0.0/0. To specify a single host, use x.x.x.x/32, where x.x.x.x is the host's IP address. This will override any other section's rules (Allow/Redirect/DMZ/NAT/etc).

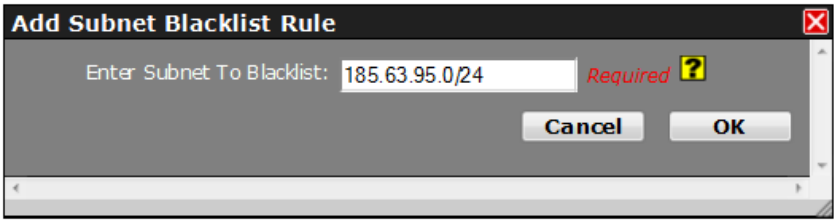

- Click on the “OK” button to populate the Subnet Blacklist Rules screen

- Click on the “Save” button and the following pop-up window will appear:

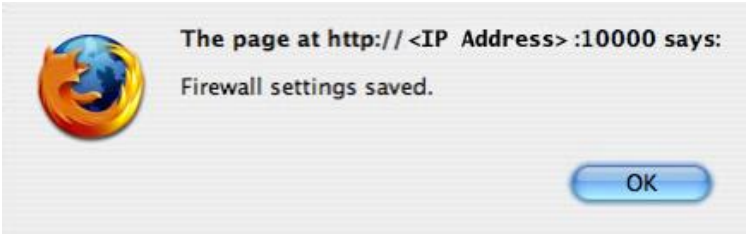

- Click on the “OK” button to acknowledge the content.
- Click on the “Apply” button and the following pop-up window will appear:

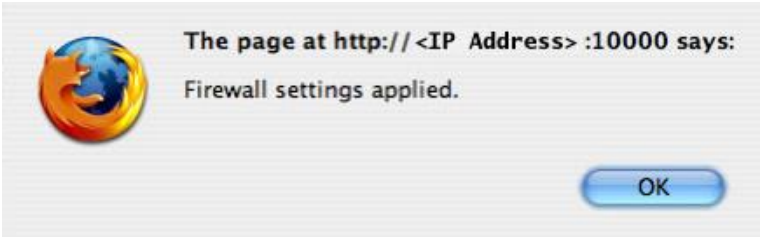

- Click on the “OK” button to acknowledge the content.

Subnet Whitelist Rules

The "Subnet Whitelist Rules" menu item allows you to define a single IP Address or an entire network that you want to allow access into the network behind the Sixnet router.

- Click on the "Subnet Whitelist Rules" menu item and the following window will appear:

General behavior setting controls whether or not the whitelist rules apply to packets originating from the Gateway device.

There are two choices:

- Only to Whitelisted IPs
- No Restrictions **(default)**

When “Only to Whitelist IPs” is selected, packets destined for subnets outside those allowed by the selected whitelist will be suppressed by the firewall.

When “No Restrictions” is selected, the device may send a packet to any subnet and the whitelist rules apply only to packets received.

- Click on the “Add” button and the following pop-up window will appear:

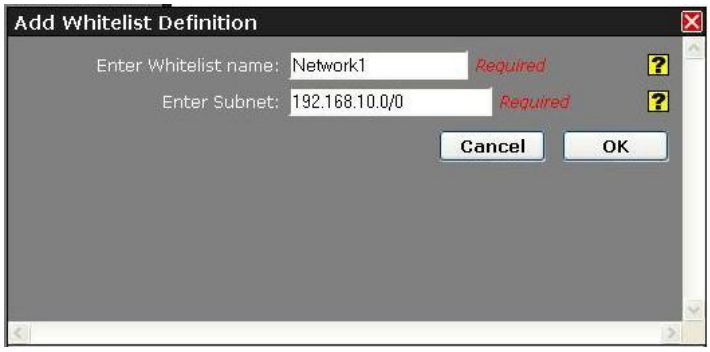

Enter Whitelist Name: Enter a name for the whitelist in the space provided. If the name of an existing whitelist is entered, then you are in effect adding another member to the list of subnets defined by that whitelist group.

After you click the **OK** button, you will see the entry added to the group in the (stored) display area under the **Current Whitelist Groups** heading.

This whitelist name will become available for selection in the other Firewall Rules sections where a whitelist can be selected. Bellow screen will demonstrate an entry for Network1 with the 192.168.10.0/0 network address.

NOTE: The first whitelist entry, the 'default' entry may not be deleted nor have its name changed, but its subnet value may be changed. Additional entries may be added, edited and deleted as needed.

- Click on the “Apply” button and the following pop-up window will appear:

- Click on the “OK” button to acknowledge the content.

3.4.5 PPP Dial Backup

The “PPP Dial Backup” menu item allows you to configure the capability of an alternate connection by dialing into an ISDN should the primary route get interrupted.

- Click on the "PPP Dial Backup" menu item and the following window will appear:

- Click on the pull down menu at the "Enable PPP Dial Backup?" field.
- Click on "Yes" and the display will expand to reveal the configuration fields.

Port: Select the ttyS port on which the modem is attached. For an external modem connected to a serial port, use the port name as labeled on the router. For an internal modem, a common setting is ttyS3.

Enter Dial String: Enter the phone number of the peer/ISP to dial.

Enter User Name: Enter the name issued by you ISP used for authenticating the local system to the peer.

Enter Password: Enter the password issued by your ISP to use for authenticating with the peer.

Confirm Password: Re-enter the password issued by your ISP to use for authenticating with the peer.

Choose Connection Behavior: In Persistent mode, the router will always attempt to maintain a constant connection to the POTS network. In On-Demand mode, the connection to the POTS network will only be attempted when packets are destined to leave the modem's PPP interface. In addition, after a period of Idle Time, the connection will terminate.

On-Demand is commonly chosen for an environment using an Ethernet connection as a primary interface, while IP Fallback is used to bring up this dialup connection as a backup.

- **Persistent** - When this link is intended as a Primary network connection.
- **On-Demand** - When this link is intended as a Fallback network connection.

Dial-on-Demand (DoD) Idle Timeout: Enter the number of seconds the connection may be allowed to remain "idle" (no data transmitted or received) before closing the connection. This will allow a DoD connection to automatically reset once idle, so that any network usage is limited. Recommended setting is 300 seconds (5 minutes).

This is useful for an environment where constant usage of the POTS line is not desired.

Use Default Route?

- Yes - When this link is intended as a Primary network connection.
- No - When this link is intended as a Fallback network connection.

Advance Setup? Select “Yes” to modify modem control, the modem speaker, and enter modem initialization string. The display will expand to reveal the Advance Setup options.

Maximum Receive Idle Time: Enter the number of seconds the connection may be allowed to remain "Idle" or "Unresponsive" (no data received) before closing the connection. If packets are leaving the interface, but no return packet is received for the specified time, then the connection is reset. This can be useful for detecting an unresponsive situation where the network is down, the modem is in an unknown state, or another low level error may have occurred. Default is 150 seconds; however, you can use 0 to turn this function off.

NOTE: If the normal usage of the device regularly has packets leaving the unit with no expected response, then premature disconnections may result. Outgoing UDP packets with no expected response may be normal operation, yet will trigger this disconnection and reset.

Modem? Select "Yes" to use the modem control lines CD (Carrier Detect) and DTR (Data Terminal Ready).

RTS/CTS? Select "Yes" to set hardware flow control using RTS and CTS signals.

Modem Speaker On?

- Yes - For testing and proof of concept phase to audibly verify connection attempts.
- No - For silent production mode.

Enter Custom AT command: Enter the modem initialization string. Please consult your modem AT Command documentation for unique initialization that may be required. Enter only a single initialization string.

- Click on the "Apply" button and the following pop-up window will appear:

- Click on the "OK" button to acknowledge the content.

3.4.6 PPP over Ethernet

The "PPP over Ethernet" menu item allows you to configure a connection by being able to connect to a DSL or cable modem.

- Click on the "PPP over Ethernet" menu item and the following window will appear

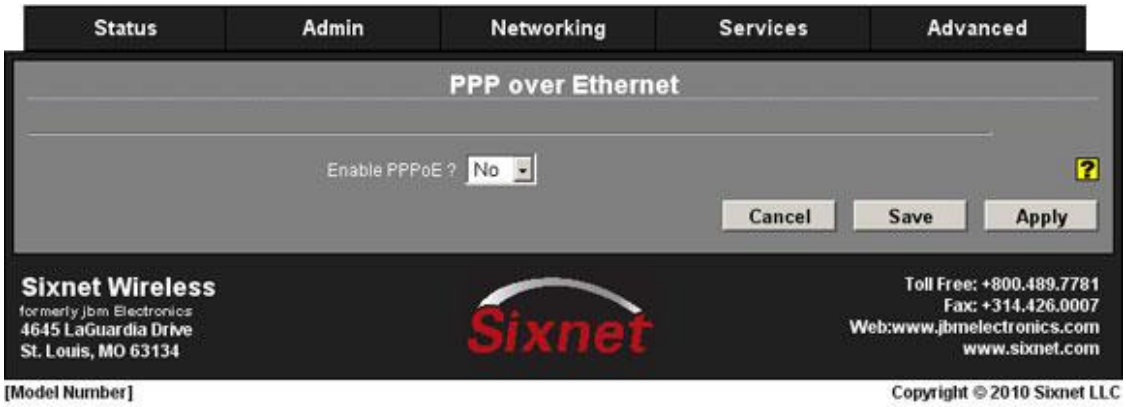

- Click on the pull down menu at the "Enable PPP0E?" field.
- Click on the "Yes" and the display will expand to reveal the fields for configuring the PPP over Ethernet.

Select Interface: Select the name of the Ethernet interface to which the "PPP over Ethernet" service should bind by choosing one of the options available in the provided drop-down list. Choose 'eth0' or 'eth1'.

Enter User Name: Enter the user name to be used with the PPPoE interface in the space provided. It is typically in the form name@domain.com.

Enter Password: Enter the password to be used with the PPPoE interface in the space provided.

Confirm Password: Re-enter the password to be used with the PPPoE interface in the space provided.

Select DNS Method: Select the method by which DNS Server information should be obtained.

 # Use Unit Default

- - Do not obtain DNS information from PPPoE Server. Use settings from **Networking→DNS Settings** instead.

 # Use Peer DNS

- - DNS information should be obtained from the peer host once connected.

 # Use Custom DNS

- - DNS information is entered manually in the fields which appear below:

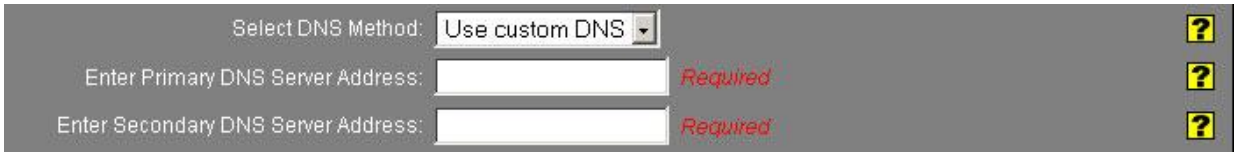

- Enter the IP Addresses of the Primary and Secondary DNS servers to be used

Use Default Route? Select "Yes" to use this interface as the default route.

Dial on Demand? Select "Yes" to enable 'Dial-on-Demand'.

- Click on the "Apply" button and the following pop-up window will appear:

- Click on the "OK" button to acknowledge the content.

3.4.7 Static Routes

The "Static Routes" menu item allows you to configure a route to a network through an interface manually.

- Click on the "Static Routes" menu item and the following window will appear:

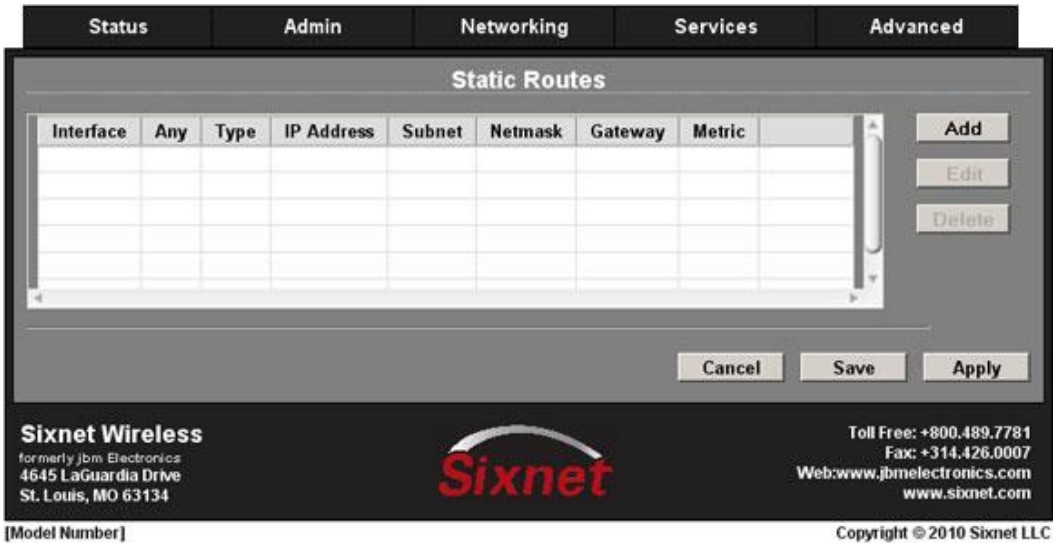

To add a static route on the Sixnet router:

- Click on the "Add" button and the following pop-up window will appear:

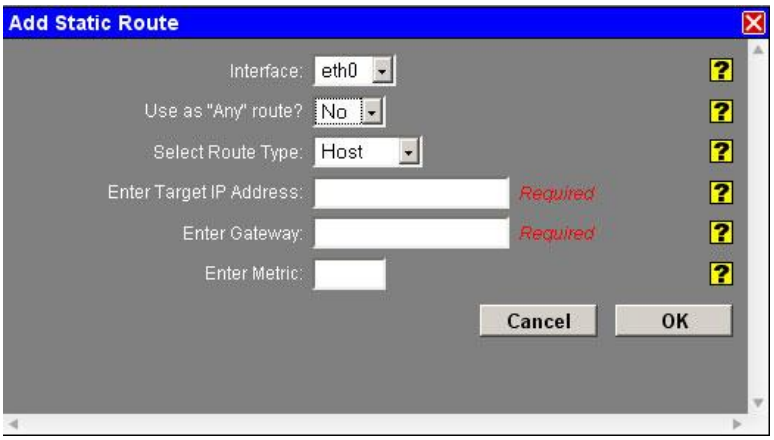

Interface: Select the interface to which the route should apply by selecting one of the available established options.

Use as "Any" route? Select whether or not this route should be used as an "any" route by selecting Yes or No from the provided drop-down list.

When set to **Yes**, the route will take effect when a network change event (up/down) occurs on any interface.
For example, if the configured interface is eth0, and the ppp0 interface becomes active, then the route will be reapplied to eth0.

When set to **No**, the route will take effect only when a network change occurs on the configured interface.
For example, if the configured interface is eth1, then the route will be assigned only when eth1 has a network change to an active state.

Select Route Type: Select the type of route to be created by choosing one of the available options from the provided drop-down list.

Choices include:

- **Host** to create a route to a specific device. This will require setting the **Target IP Address** and **Gateway** parameters.

- **Network** to create a route to a remote network. This will require setting the **Network IP Address**, **Netmask** and **Gateway** parameters.

Host Configuration (Static Route)

Enter Target IP Address: Enter the IP Address of the destination host to which the route should be created.

Enter Gateway: Enter the IP Address of the gateway for the specified host or network. A gateway is a device (typically a router) used to gain access to another network.

For example, if a device is attached to a LAN whose network address is 192.168.1.0 with a netmask of 255.255.255.0, then it can communicate directly with any other device on that network with a range of addresses of 192.168.1.1 through 192.168.1.254 (with 192.168.1.255 reserved for broadcast). An address outside of that range is on a different network which would need to accessed indirectly through a router and that router would be the gateway to the network on which the remote target device resides, so to communicate with it would mean sending and receiving via the gateway device. The address must be one within the valid range for the network on which the designated interface resides.

Enter Metric: Enter a value for the route metric in this field. Recommended value is '0'.

- Click on the "OK" button to populate the Static Routes screen

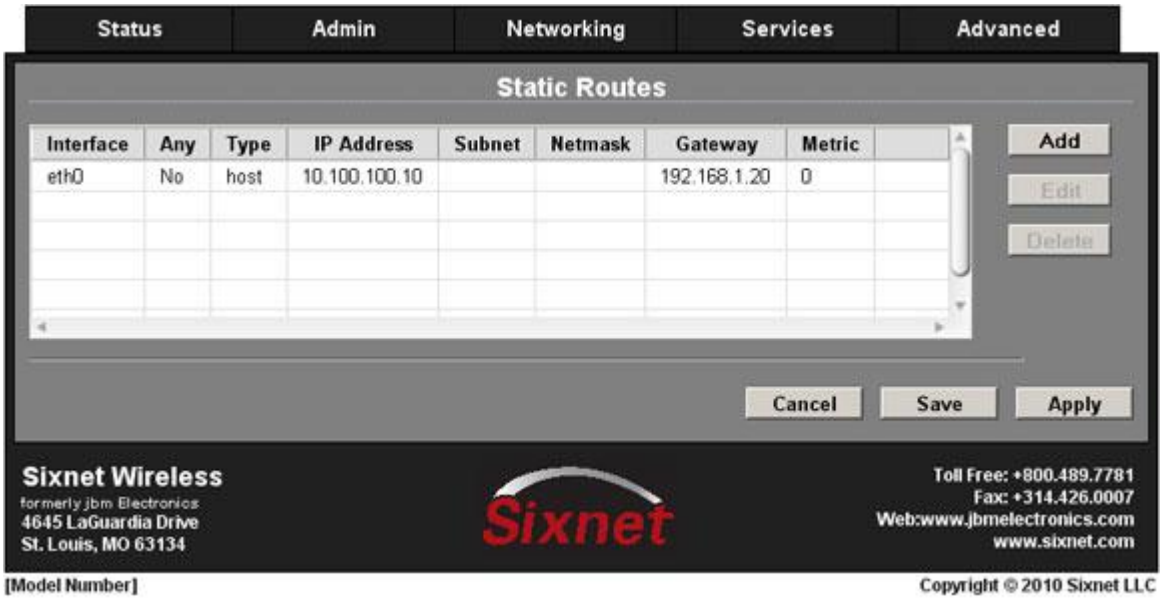

- Click on the “Save” button and the following pop-up window will appear:

- Click on the “OK” button to acknowledge the content
- Click on the “Apply” button and the following warning pop-up will appear:

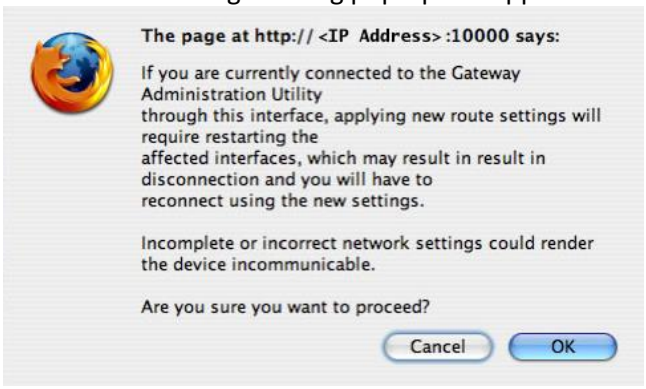
The page at http:// <IP Address> :10000 says:
If you are currently connected to the Gateway Administration Utility
through this interface, applying new route settings will require restarting the
affected interfaces, which may result in result in disconnection and you will have to
reconnect using the new settings.
Incomplete or incorrect network settings could render the device incommunicable.
Are you sure you want to proceed?
Cancel
OK

- Click on the “OK” button to acknowledge the content.
- Click on the “OK” button and the following pop-up window will appear:

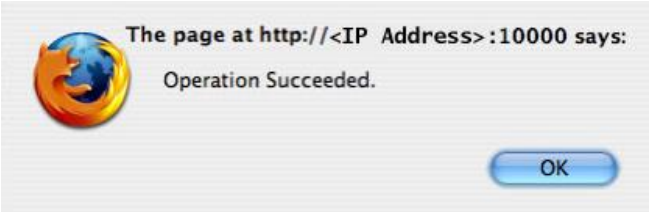

- Click on the "OK" button to acknowledge the content.

3.4.8 TCP Global Settings

Click on the TCP Global Settings menu item and the following window will appear:

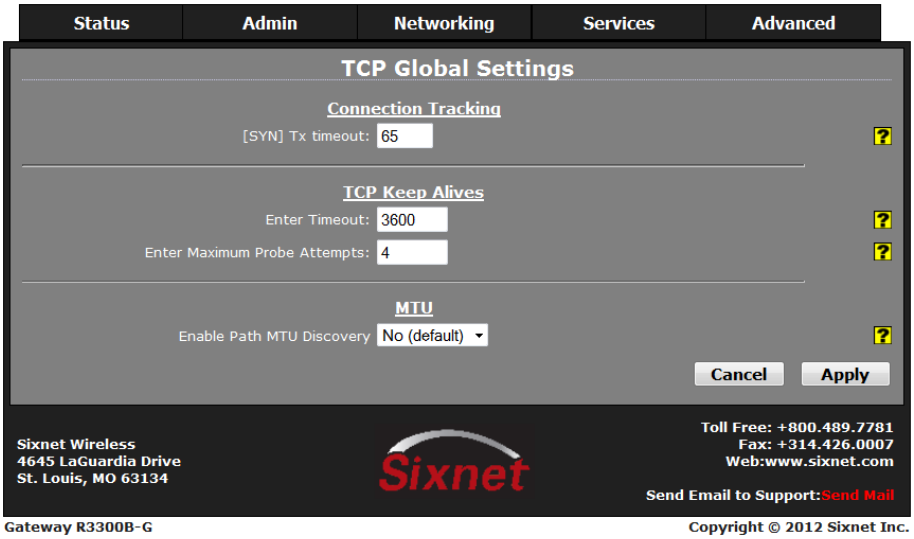

Connection Tracking:

[SYN] Tx Timeout: Specifies the timeout value, in seconds, for SYN packets for connection tracking.
65 is the generally recommended default which differs from the system default of 120.
30-120 is the recommended tuning range for IP ATMs.

TCP Keep Alives:

Enter Timeout: Specifies the amount of time, in seconds, that a TCP connection can remain in an idle state before sending Keep-Alive Probes to verify that the remote end of the socket is still available.

10 - 30 for Ethernet connections where data usage is not an issue.

60 - 300 for Cellular connections where total data usage must be considered.

Enter Maximum Probe Attempts: Specifies the acceptable number of failed probes that will be sent to the remote end of a TCP socket before determining the connection to be failed, and disconnecting.
Recommended values are 3 – 6.

MTU:

Enable Path MTU (PMTU) Discovery: Enable / Disable Path MTU Discovery. This might be useful if a private cellular network is restricting MTU sizes along the network path and causing packet drops.

- Click on the "Apply" button and the following pop-up window will appear:

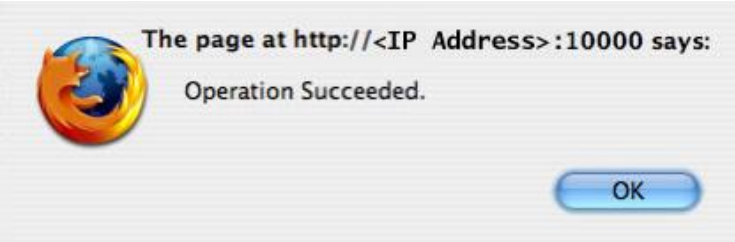

- Click on the "OK" button to acknowledge the content.

3.4.9 Tunnel (VPN) Settings

The "Tunnel (VPN) Settings" menu item is organized into three sub sections; GRE, IP in IP, and IPSEC.

GRE Tunnels (Generic Routing Encapsulation)

The "GRE Tunnels" menu item allows you to configure a GRE Tunnel. GRE is a tunneling protocol that was originally developed by Cisco; it can do a few more things than IP-in-IP tunneling. For example, you can also transport multicast traffic and IPv6 through a GRE tunnel.

Click on the "GRE Tunnels" menu item and the following window will appear:

To add a GRE Tunnel:

- Click on the "Add" button and the following pop-up window will appear:
-

Tunnel Name: Choose the name of the interface for the GRE Tunnel. Range "gre1" to "gre9".

Enable Tunnel? Click "Yes" to enable the tunnel and expand the display to reveal the configuration fields.

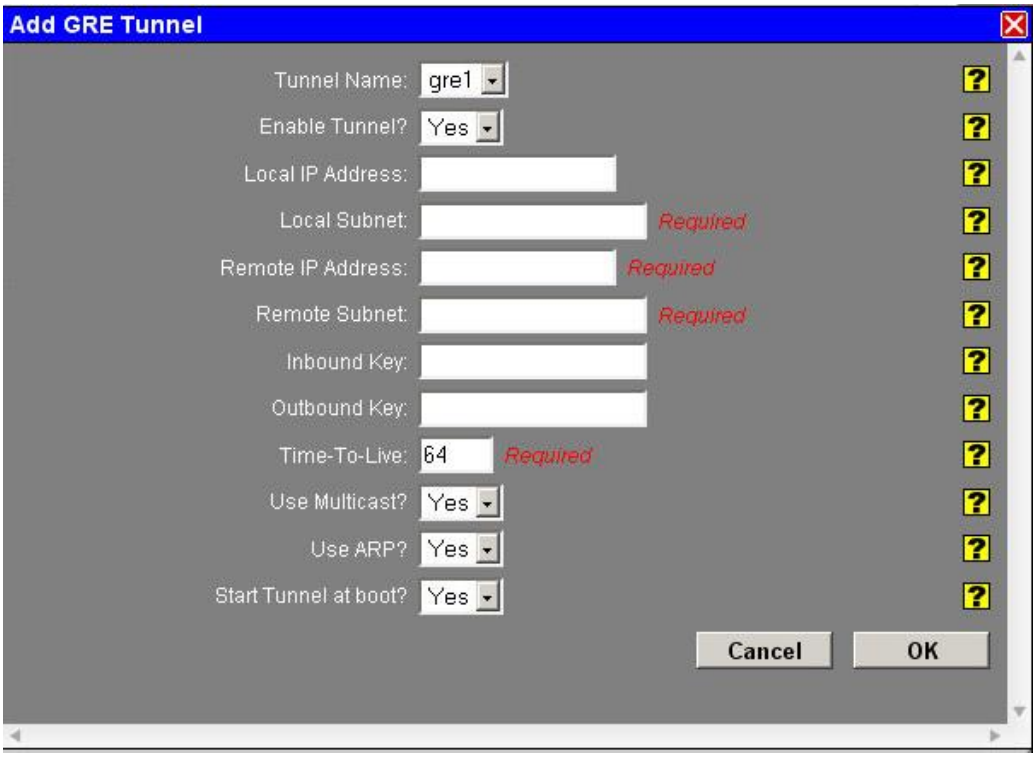

Local IP Address: Set the fixed local address for tunneled packets. (Optional)

Note: If supplied, the Local IP Address must be an address on another interface of this host. If not supplied, tunneled packets can be received from any interface.

Local Subnet: Set the local, private GRE network/mask.

Remote IP Address: Set the IP Address of the remote endpoint for this tunnel.

Remote Subnet: Set the remote, private GRE network/mask.

Inbound Key: Specify a key for use with keyed GRE. Key is either a number or an IP address. The Inbound Key is used for input only. (Optional)

Outbound Key: Specify a key for use with keyed GRE. Key is either a number or an IP address. The Outbound Key is used for output only. (Optional)

Time-To-Live: Set a fixed Time-To-Live for tunneled packets. (Optional)

Note: Values over 64 may cause connection failures.

Use Multicast? Select "Yes" to enable Multicast for the tunnel.

Use ARP? Select "Yes" to enable ARP for the tunnel.

Start Tunnel at boot? Select "Yes" to allow the interface to become active at system start.

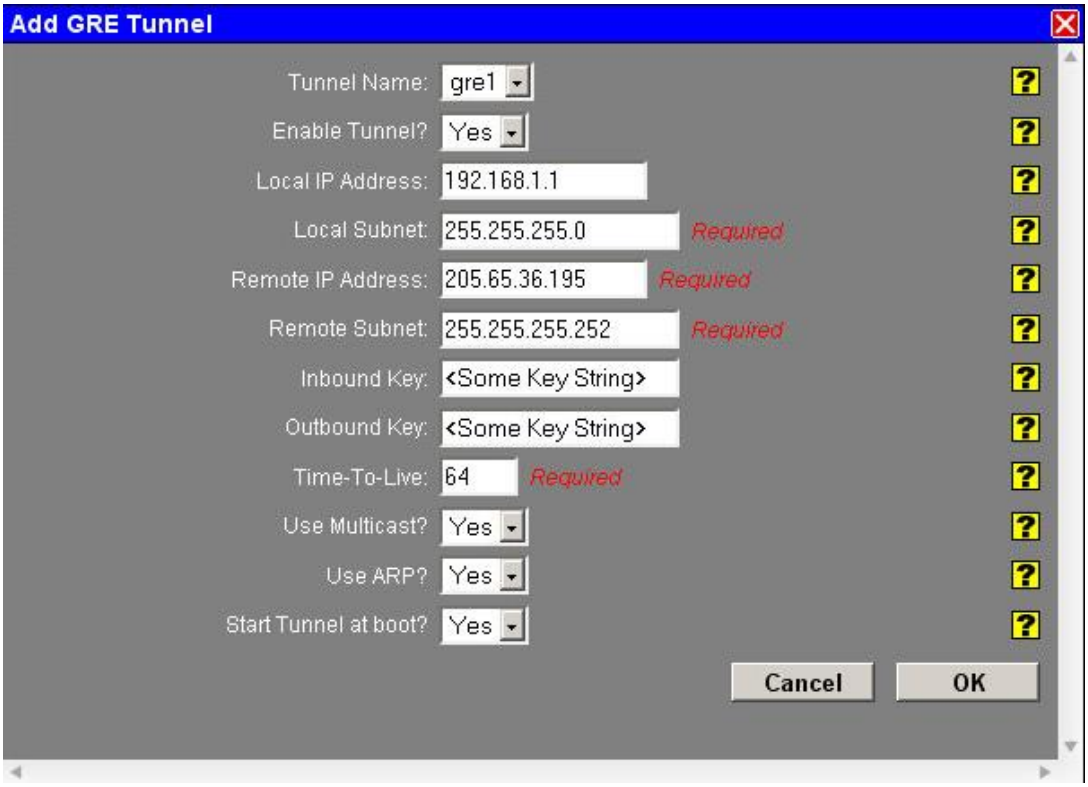

- Click on the "OK" button to populate the GRE Tunnels screen.

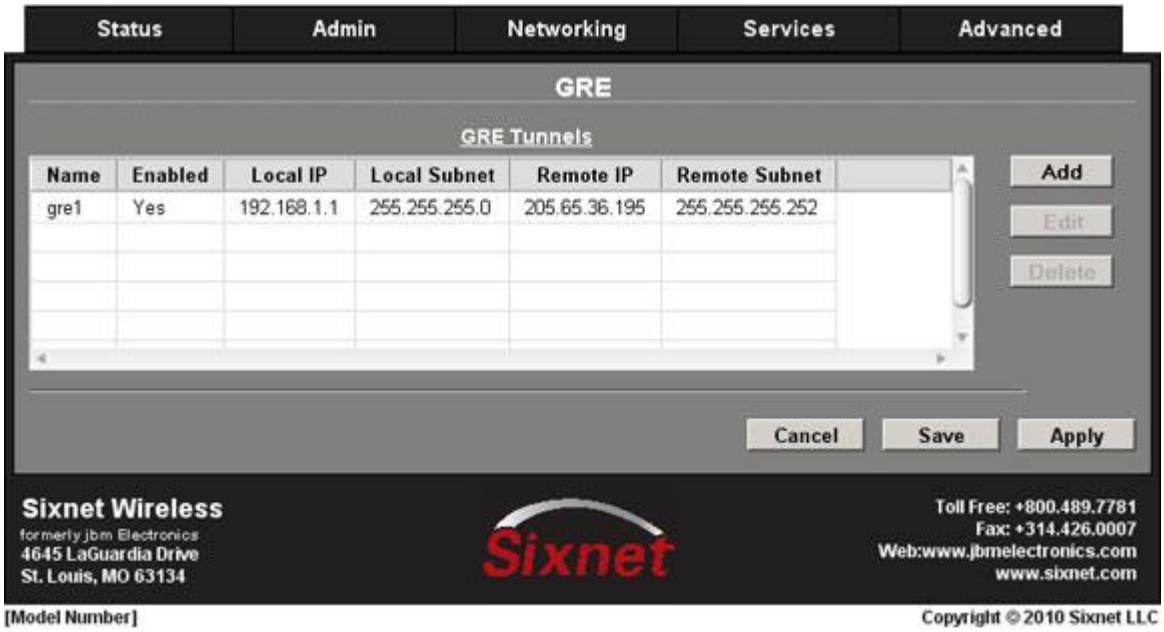

- Click on the “Save” button and the following pop-up window will appear:

- Click on the “OK” button to acknowledge the content.
- Click on the “Apply” button and the following pop-up window will appear:

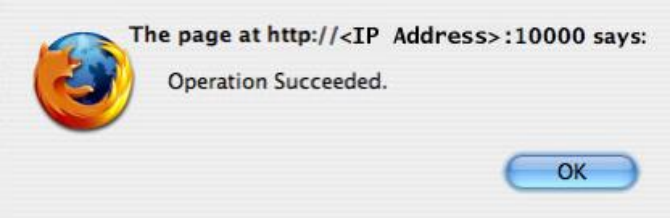

- Click on the “OK” button to acknowledge the content.

IP in IP Tunnels

The “IP in IP Tunnels” menu item allows you to configure a simple IP Tunnel. IP in IP Tunnels essentially encapsulates an IP packet into another packet with the same protocol as the transport protocol.

Click on the “IP in IP Tunnels” menu item and the following window will appear:

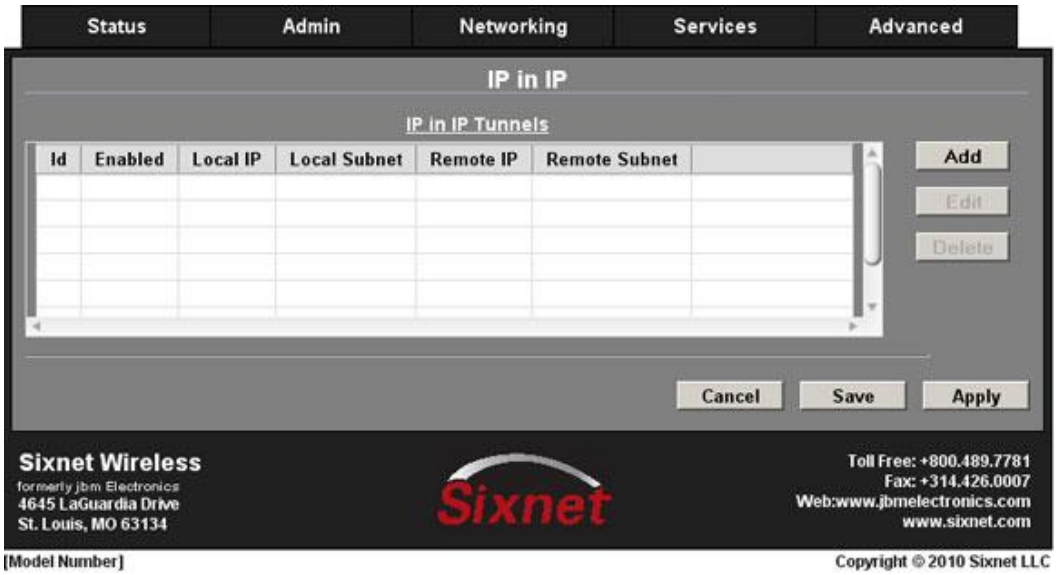

To add an IP in IP Tunnel:

- Click on the "Add" button and the following pop-up window will appear:

Tunnel ID: Enter a unique numerical identifier in this field. It will be used for naming the tunnel interface which will appear in the interface list as tunl1, tunl2, etc. depending on the IDs provided.

Enable Tunnel? Select "Yes" to enable the tunnel now. This will expand the display to reveal the configuration fields.

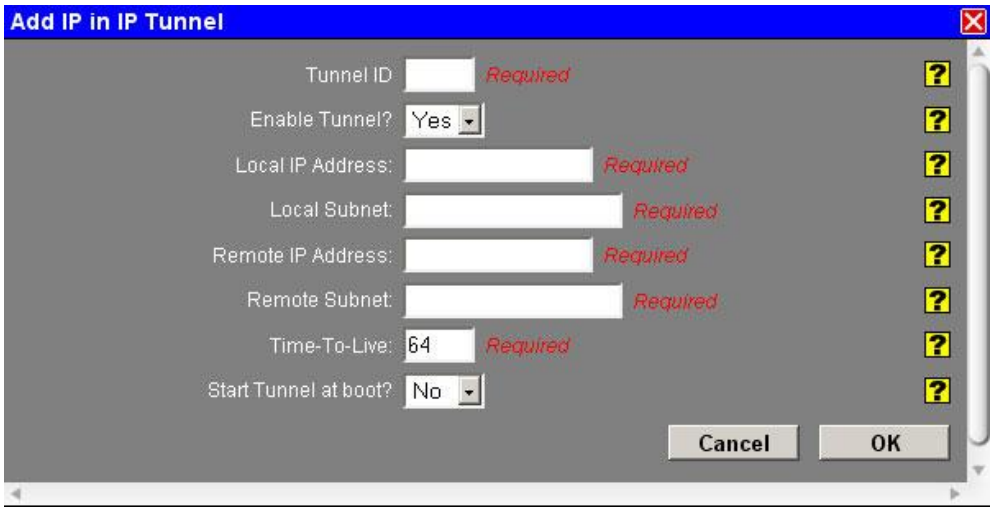

Local IP Address: Set the fixed local address for tunneled packets.
Note: If supplied, the Local IP Address must be an address on another interface of this host. If not supplied, tunneled packets can be received from any interface.

Local Subnet: Set the local, private IPIP network/mask.

Remote IP Address: Set the IP Address of the remote endpoint for this tunnel.

Remote Subnet: Set the remote, private IPIP network/mask.

Time-To-Live: Set a fixed Time-To-Live for tunneled packets. Recommended setting is 64.

Start Tunnel at boot? Select "Yes" to allow the interface to become active at system start.

- Click on the "Save" button and the following pop-up window will appear

- Click on the "OK" button to acknowledge the content
- Click on the "Apply" button and the following pop-up window will appear:

- Click on the “OK” button to acknowledge the content

IPSEC

The “IPSEC” menu item is organized into two sub sections, Configuration and Status.

IPSEC Configuration

The “Configuration” menu item allows you to configure an IPSEC Tunnel to establish secured communications between two or more networks across the Internet.

- Click on the “Configuration” menu item and the following window will appear:

- Click on the pull down menu at the "Enable IPSEC?" field
- Click on "Yes" and the display will expand to reveal the following screen:

Enable NAT Traversal: NAT Traversal makes it possible to communicate with networks that are located behind routers connected to the Internet. Select "**Yes**" if all tunnels will use NAT Traversal, and select "**No**" otherwise.

Coordinate IPSec with wireless PPP:
Coordinate IPSec with wireless PPPoE:

Coordinate IPSec Dial-up PPP:

You may select specific actions for above options to be performed either upon PPP connect, PPP disconnect, or both. The available actions include:

- **Do Nothing**

  Perform no action.

- **Restart**

  IPSEC is restarted.

- **Stop**

  IPSEC is stopped.

With these combinations, the connection management may be fine-tuned so that the tunnel(s) may be able to restart faster, rather than having to rely on Dead Peer detection or other timeout mechanisms alone.

To add an IPSEC tunnel:

- Click on the "Add" button and the following pop-up window will appear:

Tunnel Name: Enter some descriptive text in this field as an aid identifying it. The value must not contain spaces. (Required)

Enable Tunnel? Specify whether you want this tunnel to connect to its remote peer now, and after any reboot.

- Click on the pull down menu at the "Enable Tunnel" field
- Click on "Yes" to reveal the IPSEC Tunnel configuration fields

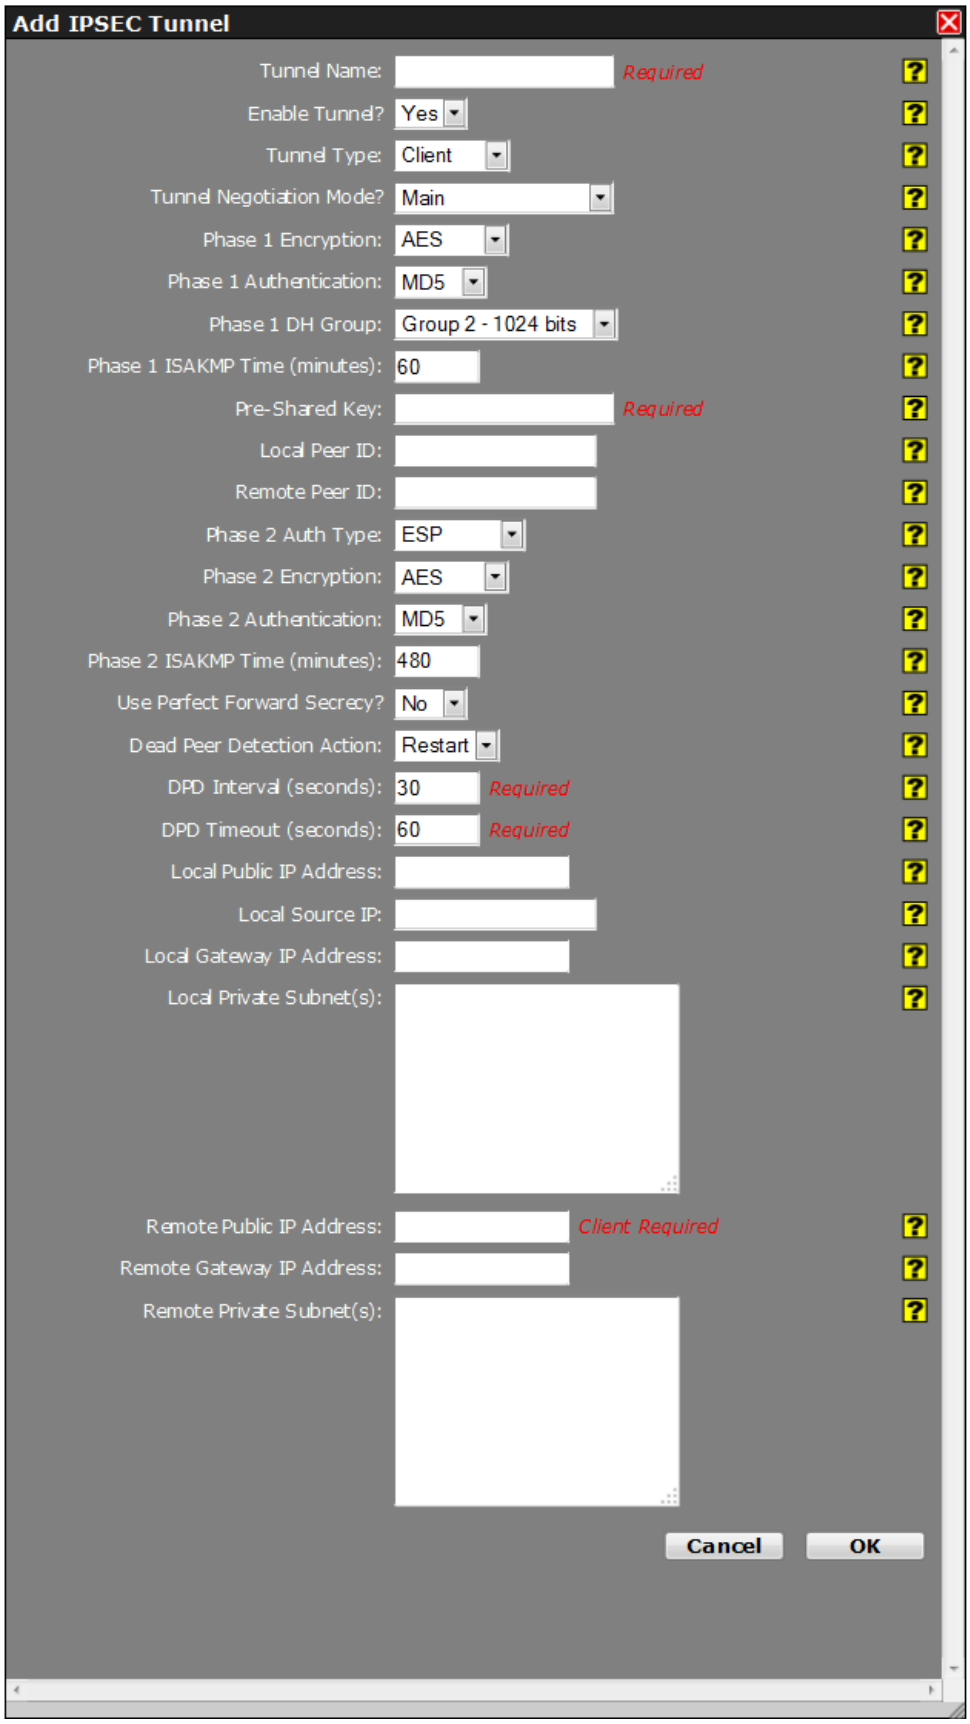
Add IPSEC Tunnel
Tunnel Name:
Required
Enable Tunnel?
Yes
Tunnel Type:
Client
Tunnel Negotiation Mode?
Main
Phase 1 Encryption:
AES
Phase 1 Authentication:
MD5
Phase 1 DH Group:
Group 2 - 1024 bits
Phase 1 ISAKMP Time (minutes):
60
Pre-Shared Key:
Required
Local Peer ID:
Remote Peer ID:
Phase 2 Auth Type:
ESP
Phase 2 Encryption:
AES
Phase 2 Authentication:
MD5
Phase 2 ISAKMP Time (minutes):
480
Use Perfect Forward Secrecy?
No
Dead Peer Detection Action:
Restart
DPD Interval (seconds):
30
Required
DPD Timeout (seconds):
60
Required
Local Public IP Address:
Local Source IP:
Local Gateway IP Address:
Local Private Subnet(s):
Remote Public IP Address:
Client Required
Remote Gateway IP Address:
Remote Private Subnet(s):
Cancel
OK

Tunnel Name: Enter some descriptive text in this field as an aid in identifying it. The value must not contain spaces.

Enable Tunnel?: Specify whether you want this tunnel to connect to its remote peer now, and after any reboot.

Tunnel Type: Tunnel Type controls the initial mode of the tunnel at startup. The options given to IPSec will be:

Client: auto=start

Server: auto=add

Dynamic: auto=route

For more information, please consult an IPSec user guide on aspects of these specific modes.

Tunnel Negotiation Mode: Your Sixnet router defaults to "**Main**" mode ISAKMP negotiation. When using dynamic, or DHCP issued IP addresses (for example with cellular cards), some remote devices may require the use of Aggressive Mode ISAKMP Negotiation. Should you encounter this situation, you can perform aggressive mode ISAKMP negotiation by changing this parameter from "**Main**" to "**Aggressive ISAKMP**".

NOTE: Aggressive Mode ISAKMP negotiation is considered less secure than Main Mode. Therefore, you would be well advised to only use Aggressive Mode negotiation if the remote device requires it. Otherwise, it is preferable to use Main mode where ever possible.

Phase 1 Encryption (IKE): Specifies the Phase 1, Internet Key Exchange (IKE) cryptographic algorithm to be used. Possible options are "**AES**", "**AES256**" or "**3DES**".

Phase 1 Authentication: Select the type of authentication you want to use for phase 1 (IKE). Possible options are "**MD5**" or "**SHA1**".

Phase 1 DH Group: Select the DH Group you want to use for phase 1 (IKE) by choosing one of the values from the drop-down list provided.

Options include:

- None/Auto
- Group 1 - 768 bits
- Group 2 - 1024 bits
- Group 5 - 1536 bits
- Group 14 - 2048 bits

This option selects the encryption level of the Diffie-Hellman keys, and these are Group 1 (768 bits), Group 2 (1024 bits), Group 5 (1536 bits) or Group 14 (2048 bits). Longer keys imply better security but at a cost of longer negotiation/set-up time during the initial connection establishment. These settings must match on both ends of the connection.

A value of None/Auto means that no DH Group will be selected for this end of the tunnel and it will adopt the settings of its peer during connection initiation.

Phase 1 ISAKMP Time (minutes): Select how long, in minutes, the keying channel of a connection (ISAKMP SA) should last before being renegotiated.

Pre-shared Key: Specify the key to be exchanged for encryption negotiation during phase 1 (IKE). Key must not contain a double-quote character. (Required) **Note:** The Pre-Shared Key must match on both ends of the tunnel in order to work.

Local Peer ID: Specify how the left participant should be identified for authentication. Can be an IP address or a fully-qualified domain name preceded by @ (which is used as a literal string and not resolved).

Remote Peer ID: Specify how the right participant should be identified for authentication. Can be an IP address or a fully-qualified domain name preceded by @ (which is used as a literal string and not resolved).

Phase 2 Auth Type (ESP): Specifies the Phase 2, Whether authentication should be done as part of **ESP** encryption, or separately using the **AH (none)** protocol.

Phase 2 Encryption: Select the ESP encryption algorithm to be used for the connection. Possible options are "**AES**", "**AES256**" or "**3DES**".

Phase 2 Authentication: Select the ESP authentication algorithm to be used for the connection. Possible options are "**MD5**" or "**SHA1**".

Phase 2 ISAKMP Time (minutes): Select how long, in minutes, a particular instance of a connection (a set of encryption/authentication keys for user packets) should last, from successful negotiation to expiration.

Use Perfect Forward Secrecy? Specifies whether or not the tunnel will use Perfect Forward Secrecy when negotiating cryptography parameters with the remote device.

NOTE: This parameter must be set the same on the devices on both sides of the tunnel in order for a Security Association (SA) to be established. This is one of the first things that should be checked when tunnel negotiation difficulties are encountered.

Dead Peer Detection Action: This feature can help detect when a remote end-point is no longer communicating properly. Once an error is detected, the "**Hold**" state will only renegotiate the tunnel after new traffic destined for the tunnel is detected. The "**Restart**" state will attempt to immediately reestablish the connection to the concentrator. For this reason, "**Restart**" may use more bandwidth and may not be the ideal choice for a limited data plan. However, if a host at the central site needs to initiate connections down to a local device through the tunnel, "**Restart**" may be necessary so that the tunnel is always up and waiting for new data from the concentrator.

DPD Interval (seconds): Set the delay (in seconds) between Dead Peer Detection keepalives that are sent for this connection.

- Unlimited Data Plans: 30-60 seconds
- Limited Data Plans: 1800 sec. (30 minutes)

NOTE: A low value will rapidly discover a broken tunnel; however, a great deal of bandwidth will be used. This is not ideal for a limited data plan such as a cellular telemetry plan.

DPD Timeout (seconds): Set the length of time (in seconds) that the connection should remain active without hearing either a poll from our peer, or a reply. After this period has elapsed with no response and no traffic, the peer will be considered "dead", and remove the SA. Recommended setting is 30 – 60 seconds.

Local Public IP Address: This parameter typically only needs to be specified when the Sixnet router is configured to use more than one external, untrusted interface. This parameter specifies the IP address of the left participant's public-network interface.

For example, if the Sixnet router has an external cellular interface (ppp0), and an external Ethernet interface that is connected to a cable or DSL modem, and you need to bind the tunnel's crypto endpoint to the Ethernet interface, you would specify the IP address of the appropriate Ethernet interface here.

Note: If this value is omitted, it will be filled in automatically with the local address of the default-route interface (as determined at IPSEC startup time). If this parameter is not needed it should be left blank.

Local Source IP: Specify the Local IP Address to source when transmitting.
The IP address for this host to use when transmitting a packet to the other side of this link. Relevant only locally, the other end need not agree. This option is used to make the gateway itself use its internal IP, which is part of the leftsubnet, to communicate to the rightsubnet or right. Otherwise, it will use its nearest IP address, which is its public IP address. This option is mostly used when defining subnet-subnet connections, so that the gateways can talk to each other and the subnet at the other end, without the need to build additional host-subnet, subnet-host and host-host tunnels.

Local Gateway IP Address: Specify the next-hop gateway IP address for the left participant's connection to the public network.
Note: If no value is provided, the tunnel will use the right participant as its next-hop.

Local Private Subnet(s): Specify the private subnet(s) behind the left participant, expressed in CIDR format (xxx.xxx.xxx.xxx/nn) as network/netmask. More than one can be specified by using "**;**" to separate each entry.

Remote Public IP Address: Specify the IP address or Hostname of the right participant's public-network interface.
(Required) if Client is selected as Tunnel Type.
If "Server" or "Dynamic" is selected as Tunnel Type, and this field is blank, then the value of "%any" will be used in configuration file.

Remote Gateway IP Address: Specify the next-hop gateway IP address for the right participant's connection to the public network.

Note: If no value is provided, the tunnel will use the left participant as its next-hop.

Remote Private Subnet(s): Specify the private subnet(s) behind the right participant, expressed in CIDR format (xx.xxx.xxx.xxx/nn) as network/netmask. More than one can be specified by using '**;**' to separate each entry.

The full display with common parameters included is shown below:

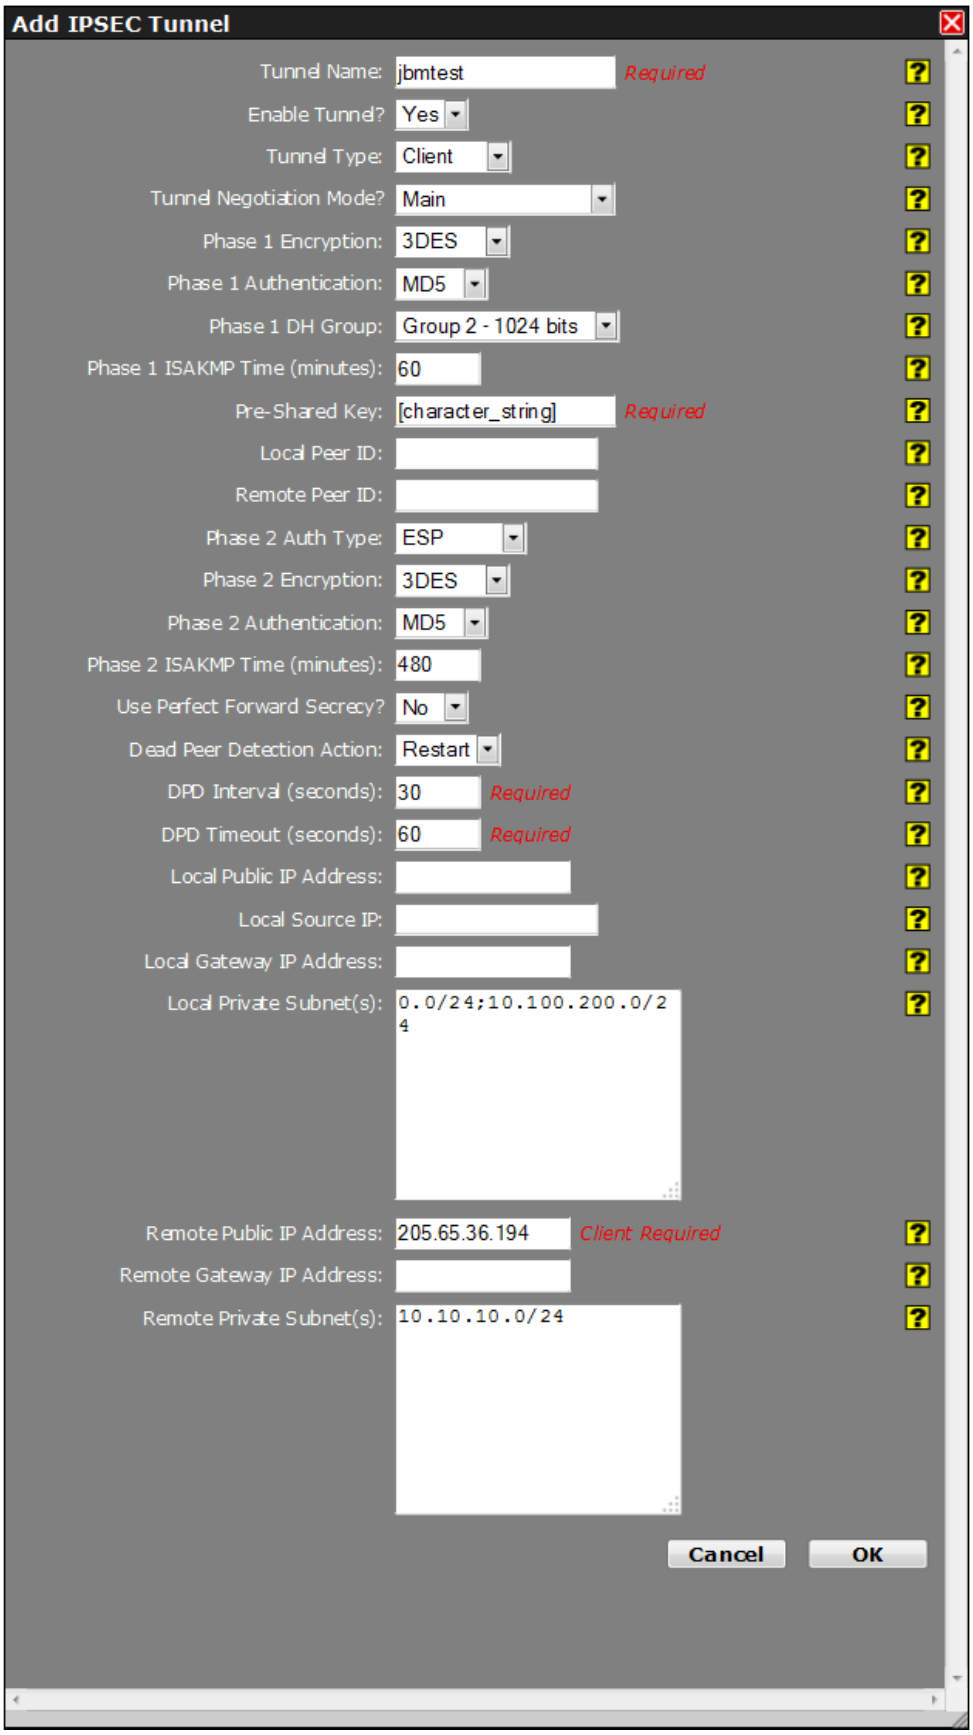
Add IPSEC Tunnel
Tunnel Name: jbmtest Required
Enable Tunnel? Yes
Tunnel Type: Client
Tunnel Negotiation Mode? Main
Phase 1 Encryption: 3DES
Phase 1 Authentication: MD5
Phase 1 DH Group: Group 2 - 1024 bits
Phase 1 ISAKMP Time (minutes): 60
Pre-Shared Key: [character_string] Required
Local Peer ID:
Remote Peer ID:
Phase 2 Auth Type: ESP
Phase 2 Encryption: 3DES
Phase 2 Authentication: MD5
Phase 2 ISAKMP Time (minutes): 480
Use Perfect Forward Secrecy? No
Dead Peer Detection Action: Restart
DPD Interval (seconds): 30 Required
DPD Timeout (seconds): 60 Required
Local Public IP Address:
Local Source IP:
Local Gateway IP Address:
Local Private Subnet(s): 0.0/24;10.100.200.0/24
Remote Public IP Address: 205.65.36.194 Client Required
Remote Gateway IP Address:
Remote Private Subnet(s): 10.10.10.0/24
Cancel
OK

- Click on the "OK" button to populate the IPSEC screen

- Click on the "Save" button and the following pop-up window will appear:

- Click on the "OK" button to acknowledge the content
- Click on the "Apply" button and the following pop-up window will appear:

- Click on the "OK" button to acknowledge the content

IPSEC Status

The "IPSEC Status" menu item allows you to display the current connection status of the VPN Tunnel by name and subnet.

- Click on the "Status" menu item and the following window will appear:

- Click on the "Refresh" button to rerun the status program at anytime. This is helpful when attempting to troubleshoot a VPN connection.

3.5 Services Tab

The Services Tab is where you can configure the various service offerings of the Sixnet router. These services include DHCP Server, DHCP Relay, Dynamic DNS, SixView Manager, GPS Server, SSH Server, SSL Client/Server, System Logging, TELNET Server, Ping Alive, SNMP Agent and Modbus Services.

3.5.1 DHCP Services

Used to configure one of the internal Ethernet interfaces to be a DHCP server and hand out IP Addresses to systems connected to the Sixnet router.
DHCP Services are divided into DHCP Server and DHCP Relay subsections.

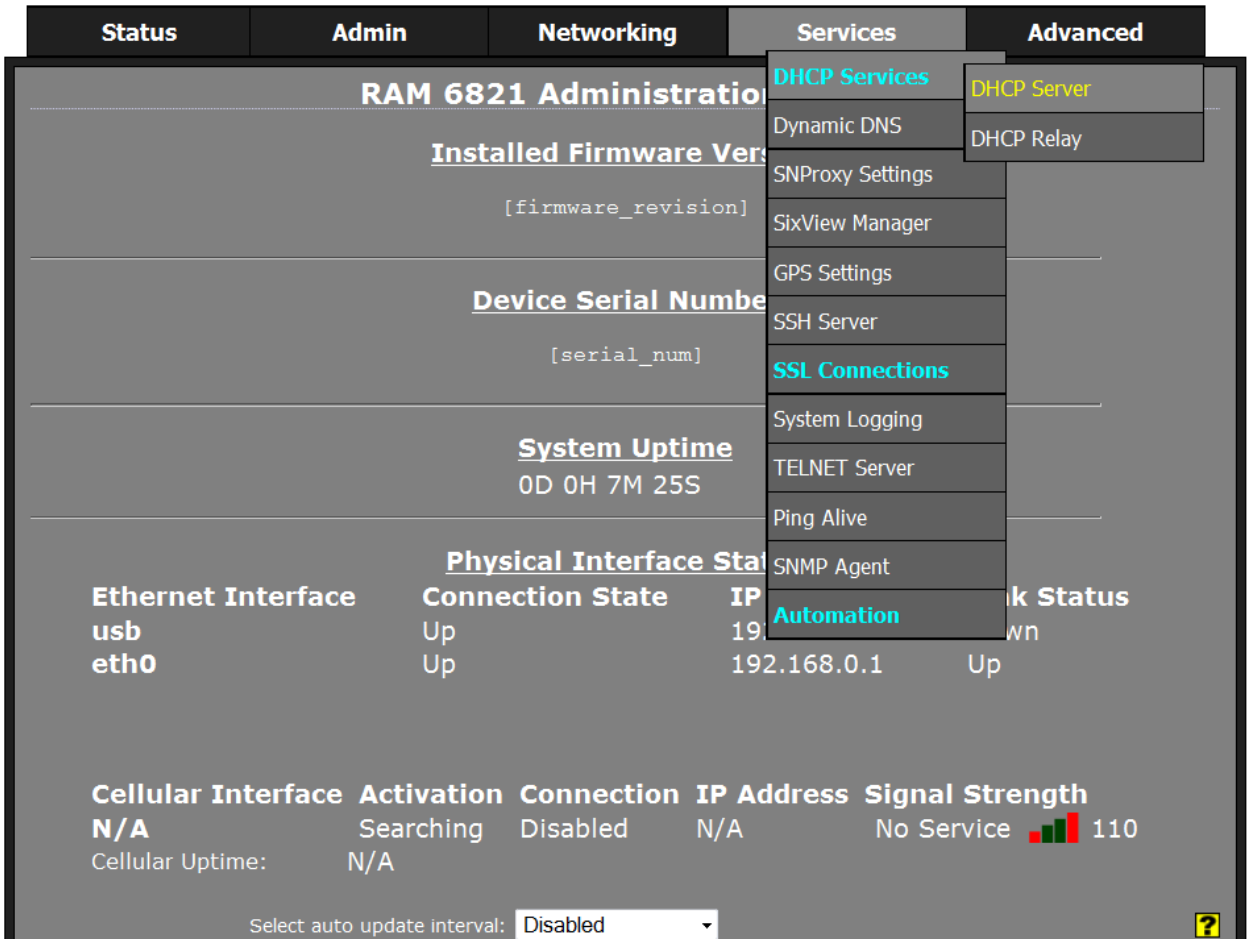

Click on the “DHCP Server” menu item and the following window will appear:

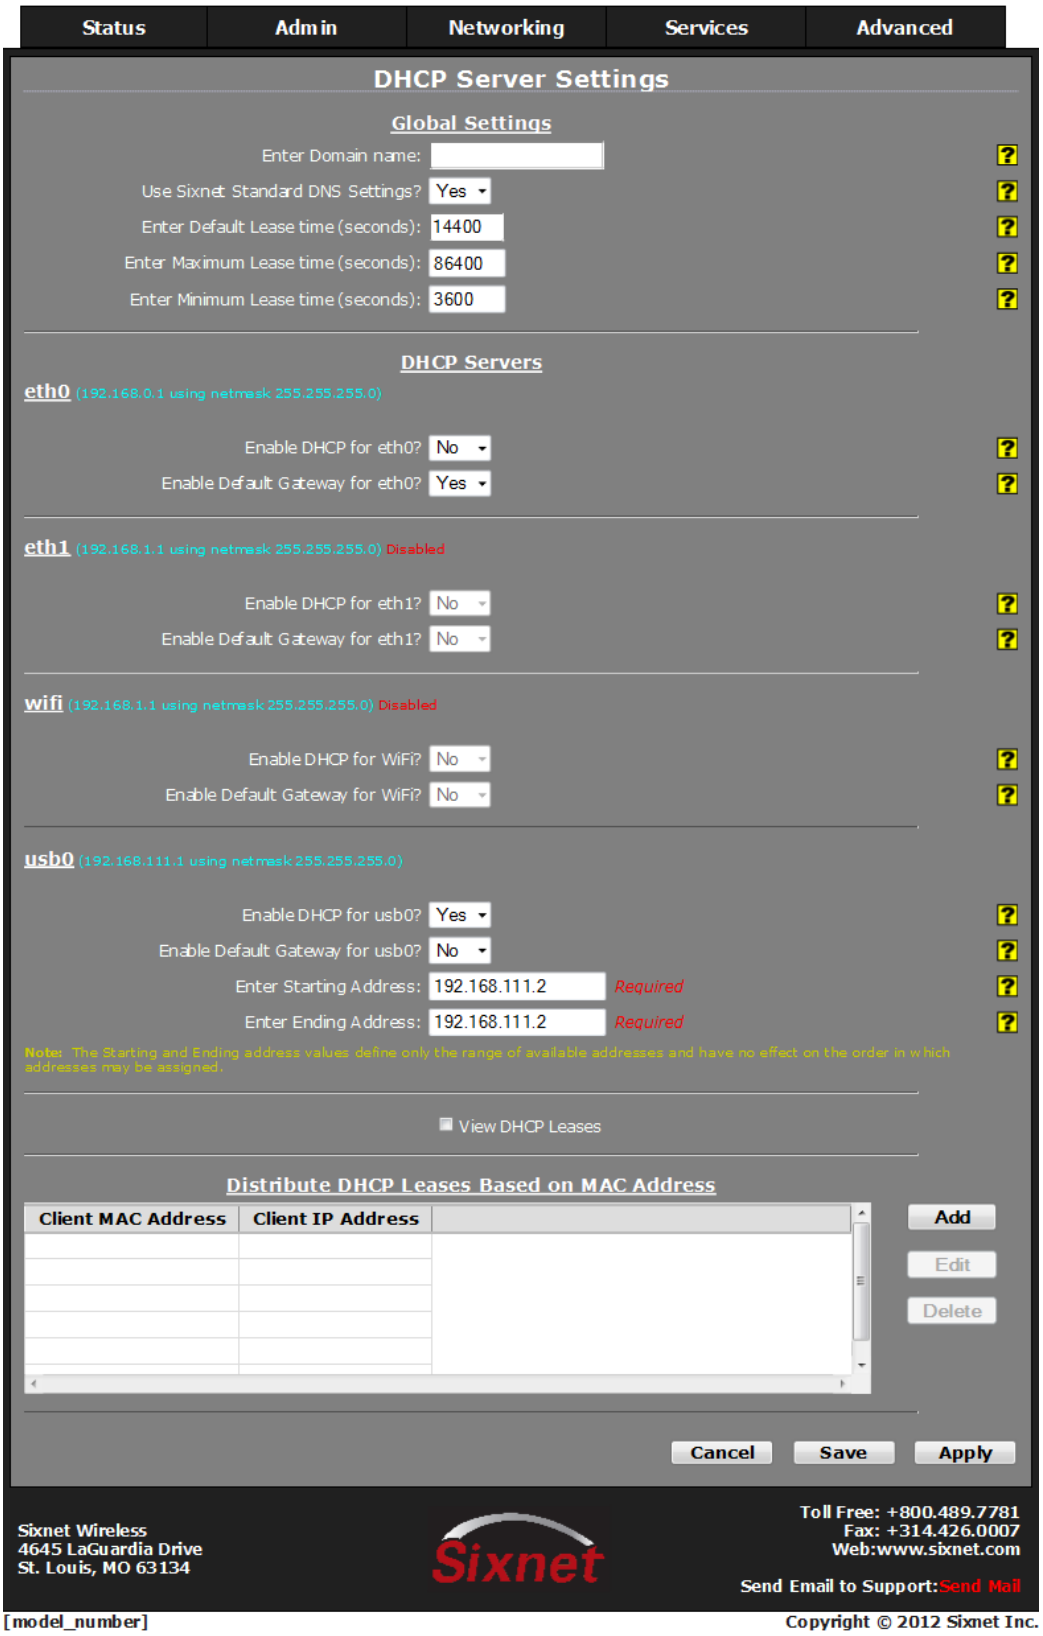
Status
Admin
Networking
Services
Advanced
DHCP Server Settings
Global Settings
Enter Domain name:
Use Sixnet Standard DNS Settings? Yes
Enter Default Lease time (seconds): 14400
Enter Maximum Lease time (seconds): 86400
Enter Minimum Lease time (seconds): 3600
DHCP Servers
eth0 (192.168.0.1 using netmask 255.255.255.0)
Enable DHCP for eth0? No
Enable Default Gateway for eth0? Yes
eth1 (192.168.1.1 using netmask 255.255.255.0) Disabled
Enable DHCP for eth1? No
Enable Default Gateway for eth1? No
wifi (192.168.1.1 using netmask 255.255.255.0) Disabled
Enable DHCP for WiFi? No
Enable Default Gateway for WiFi? No
usb0 (192.168.111.1 using netmask 255.255.255.0)
Enable DHCP for usb0? Yes
Enable Default Gateway for usb0? No
Enter Starting Address: 192.168.111.2 Required
Enter Ending Address: 192.168.111.2 Required
Note: The Starting and Ending address values define only the range of available addresses and have no effect on the order in which addresses may be assigned.
View DHCP Leases
Distribute DHCP Leases Based on MAC Address
Client MAC Address
Client IP Address
Add
Edit
Delete
Cancel
Save
Apply
Sixnet Wireless
4645 LaGuardia Drive
St. Louis, MO 63134
Sixnet
Toll Free: +800.489.7781
Fax: +314.426.0007
Web:www.sixnet.com
Send Email to Support:Send Mail
[model_number]
Copyright © 2012 Sixnet Inc.

Global Settings:

Enter Domain name: Enter the Domain Name that will be passed to DHCP Clients.

Use Sixnet Standard DNS Settings?

- Choosing "**Yes**" will automatically use the DNS Servers obtained by this unit's internet connection and/or entries specified in **Networking→DNS Settings**. This is the preferred method of operation.

- Choosing "**No**" will allow you to issue custom DNS servers to connected DHCP Clients. This will not affect any DNS Servers used by this unit for local domain resolution.

Enter Default Lease Time (seconds): Specify the amount of time, in seconds, that the DHCP Server will allow clients to maintain their leases. Default "**14400**" (4 hours).

Enter Maximum Lease Time (seconds): Specify the amount of time, in seconds, that the DHCP Server will allow clients to maintain their leases. Default "**86400**" (24 hours).

Enter Minimum Lease Time (seconds): Specify the amount of time, in seconds, that the DHCP Server will allow clients to maintain their leases. Default "**3600**" (1 hour).

DHCP Servers:

The DHCP Servers section allows you to configure one of the Ethernet ports to be a DHCP server and issue IP Addresses to systems connected to that network segment.

Since both the 'eth0' and 'eth1' are configured in the same manner, we will only cover the configuration of 'eth0'.

NOTE: If the interface is not enabled, or has been set to obtain its addressing parameters via DHCP, this option will be forced to "No', and disabled until the interface is both enabled and set to use a static IP address.

- Click on the pull down menu at the "**Enable DHCP for eth0?**"
- Click on "**Yes**" and the display will expand to reveal the configuration fields

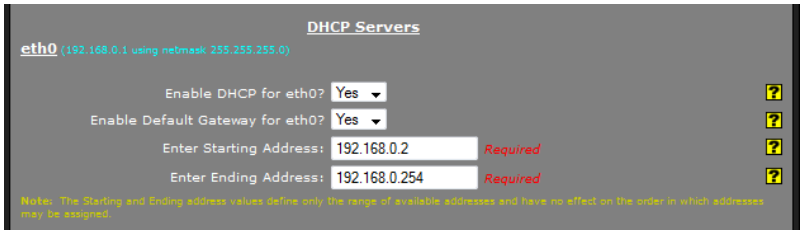
DHCP Servers
eth0 (192.168.0.1 using netmask 255.255.255.0)
Enable DHCP for eth0? Yes
Enable Default Gateway for eth0? Yes
Enter Starting Address: 192.168.0.2 Required
Enter Ending Address: 192.168.0.254 Required
Note: The Starting and Ending address values define only the range of available addresses and have no effect on the order in which addresses may be assigned.

Enable Default Gateway for eth0?:

Description: Provide Default Gateway IP Address to DHCP Client.

Recommended Setting:

No: If you wish to only gain access to this device's web interface and have another connection from your PC out to the internet.

Yes: If you wish to gain access to the internet through this device.

Enter Starting Address: Enter the Starting IP Address of a range you want the DHCP Server to provide for clients.

Enter Ending Address: Enter the Ending IP Address of a range you want the DHCP Server to provide for clients.

WARNING: Care should be used to ensure that there is no conflict with any pre-existing devices on that subnet which may have been already configured to use statically assigned IP addresses.

View DHCP Leases: Check this box to display the current DHCP leases logged on the unit.

The format of this file is documented in the dhcpd.leases(5) manual page.
This lease file was written by isc-dhcp-4.1.1a
server-duid "\000\001\000\001\027\354\016\002\352\214b\027\030\243";
View DHCP Leases

Distribute DHCP Leases Based on MAC Address: To assign IP to a device based on MAC address so that device obtains the same IP each time it requests a new IP from the DHCP server click Add to enter the MAC and IP information for that specific client.

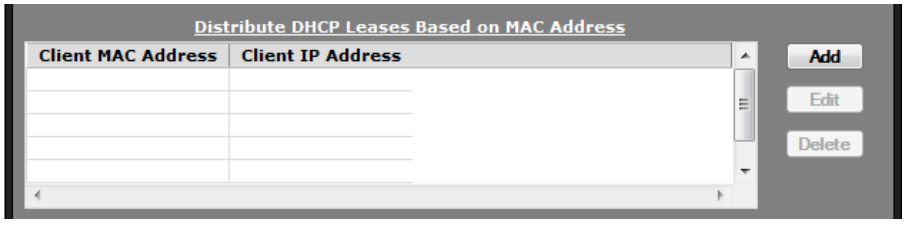

Enter Client MAC Address:

Description: Enter the Client's computer or device MAC address.

Client MAC Address: The Media Access Control (MAC) address is a unique number assigned by the manufacturer to any Ethernet networking device, such as a network adapter, that allows the network to identify it at the hardware level. For all practical purposes, this number is usually permanent. Unlike IP addresses, which can change every time a computer logs on to the network, the MAC address of a device stays the same, making it a valuable hardware identifier for the network.

When entering the MAC address information, type the 12-digit MAC address in the following format:
xx:xx:xx:xx:xx:xx including the hyphens.

Enter Client IP Address:

Description: Enter the IP address for which you wish to assign to a client's computer or device MAC address.

Client IP Address: An address valid for the subnet for which the interface is configured. Care should be used to ensure that there is no conflict with any pre-existing devices on that subnet which may have been already configured to use statically assigned IP addresses.
Recommended Setting

This address should have been provided by your Network Administrator.

- Click on the “Save” button and the following pop-up window will appear:

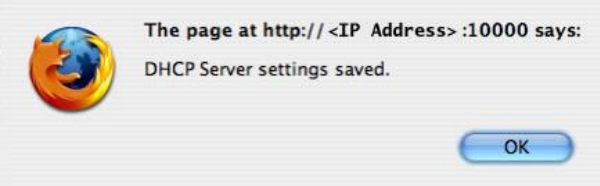

- Click on the “OK” button to acknowledge the content
- Click on the “Apply” button and the following pop-up window will appear:

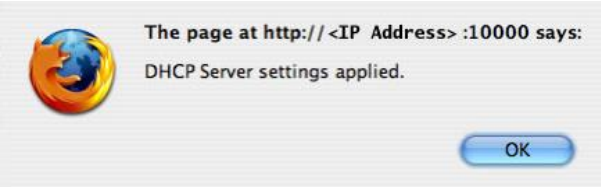

- Click on the “OK” button to acknowledge the content

DHCP Relay

Click on DHCP Relay and the following screen will appear:

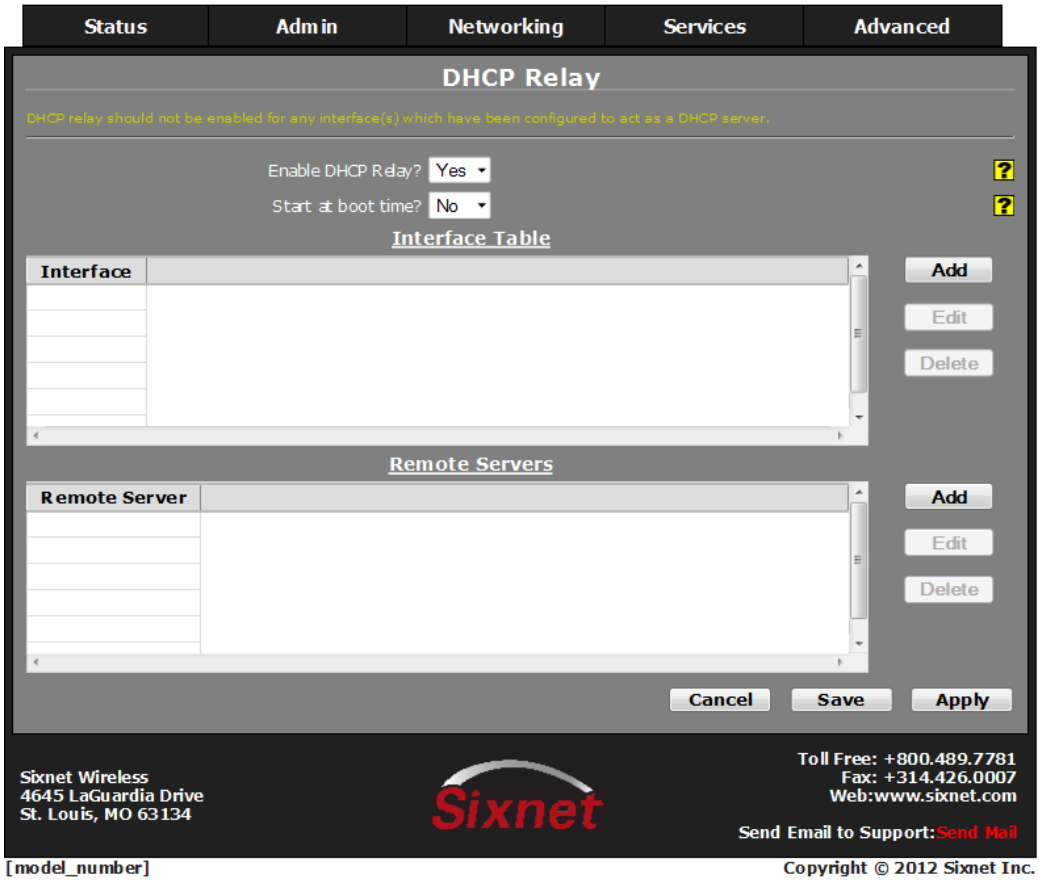

DHCP Relay will enable a service that will allow you to connect a local interface with a remote DHCP Server.

Enable DHCP Relay?: Select Yes to enable the DHCP Relay, or No to disable it. The service will start once the **Apply** button is clicked. If the **Save** button is clicked, the service will not be started until after the device is rebooted and then only if the **Start at boot time** option has been also set to Yes.

Start at Boot?: Select Yes to enable the DHCP Relay at boot time, or No for manual control.
If the DHCP Relay service is required to be operational at all times, then set to Yes.
If another process, such as VRRP, is going to dynamically enable/disable DHCP Relay service as needed, then set to No.

Adding the Interface: Click on the Add button and the following pop-up will appear.

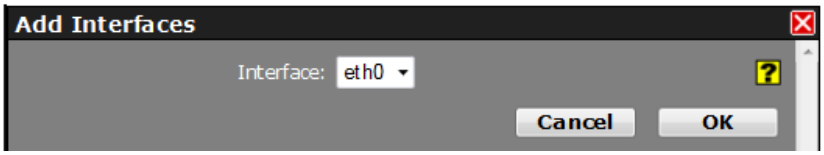

Select the interface you would like to receive its IP from the remote DHCP server from the drop down menu and click OK.

Adding the Remote DHCP Server: Click on the Add button and the following pop-up will appear.

Enter the IP Address or Fully Qualified Domain Name of all remote DHCP Servers available.
It is the responsibility of the remote DHCP Server to coordinate the issuing of DHCP addresses.

3.5.2 Dynamic DNS

The "Dynamic DNS" menu item allows you to configure a dynamic DNS name for the Sixnet router that does not have a static public IP Address and you are subscribed to a service providing Dynamic DNS, such as DYNDNS.ORG.

- Click on the "Dynamic DNS" menu item and the following window will appear:

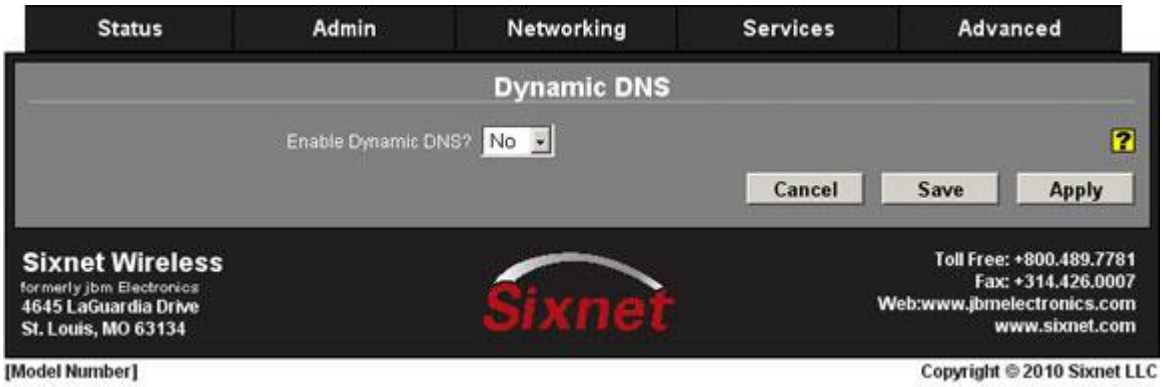

- Click on the pull down menu at the "Enable Dynamic DNS" and the display will expand to reveal the configuration fields shown below:

Select Service Type: Select the desired Dynamic DNS Service from the list provided.

Enter User Name: Enter the User Name used to access your Dynamic DNS service in this field.

Enter Password: Enter the Password used to access your Dynamic DNS Service in this field.
Confirm Password: Re-enter the Password used to access your Dynamic DNS Service in this field.

Select Interface: Specify the interface you want to access via Dynamic DNS. Changes made to the interface configuration after enabling Dynamic DNS will result in updates being sent to your Dynamic DNS service provider.

Host Name: Enter the host name and domain you wish to be assigned by the Dynamic DNS service.

Server Name/Address: Enter the host name or IP Address (along with port number, if needed) user to access the Dynamic DNS Server. Example: members.dyndns.com:80.

NOTE: A recommended value is automatically displayed when you select a Service provider. If you require a value other than the recommended value, your Network Administrator or Dynamic DNS Service Provider should be able to provide the appropriate value, which can be entered manually.

Server Request Path: Enter the Request URI required to connect to the Dynamic DNS Service in this field.

NOTE: A recommended value is provided automatically when a Service type is selected. If you require a value other than the recommended value, your Network Administrator or Dynamic DNS Service Provider should be able to provide the appropriate value, which can be entered manually.

- Click on the "Save" button and the following pop-up window will appear:

- Click on the "OK" button to acknowledge the content
- Click on the "Apply" button and the following pop-up window will appear:

- Click on the "OK" button to acknowledge the content

3.5.3 SN Proxy

SN Proxy is a web relay proxy service used to gain access to devices that are behind our Sixnet router providing additional security and access control to devices that may not offer such functionality. A Proxy based service provides a more robust connection than just using a port forward rule, including the ability to add an additional user log in for authentication, encryption via SSL as well as isolation via Access Control Lists.

To begin using SN Proxy:

Click on Services → SN Proxy Settings and the following window will appear:

Enable SN Proxy Settings: Enables or disables the SN Proxy feature.

When you click Yes to enable the feature the following window will appear:

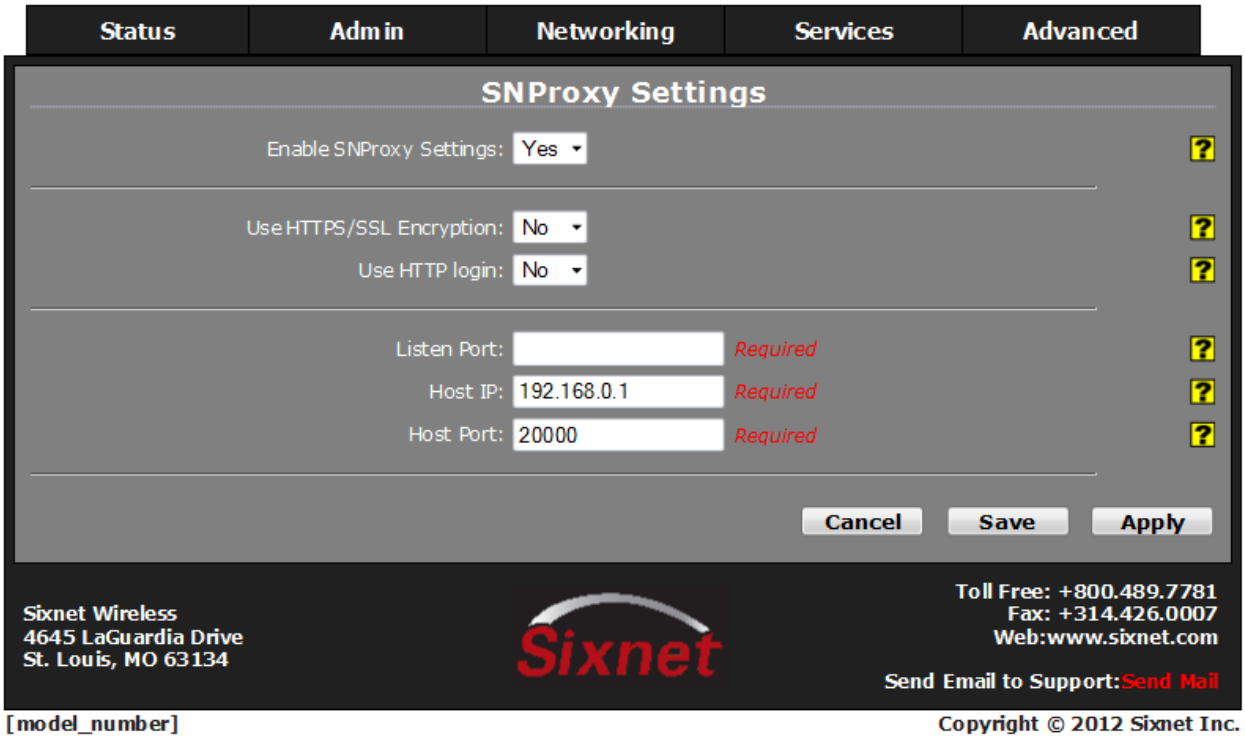

Use HTTPS/SSL Encryption: Specify whether you want to enable the SSL engine for a more secure connection.

Use HTTP login: Specify whether you want to enable HTTP login.
*Note: If you enable the HTTP login, you will be required to enter the username and password.

Listen Port: Enter the port number the SNProxy listens for requests on.

Host IP: Enter the proxy server host IP address that will be accepting this connection request.

Host Port: Enter the proxy server host port number.

- Click Save to store the settings for the next reboot, or click Apply for the settings to take effect immediately.

3.5.4 SixView Manager

The "SixView Manager" menu item allows you to configure various aspects of the SixView Manager Client to communicate with a SixView Manager hosted at Sixnet or at your location.

- Click on the "SixView Manager" menu item and the following window will appear:

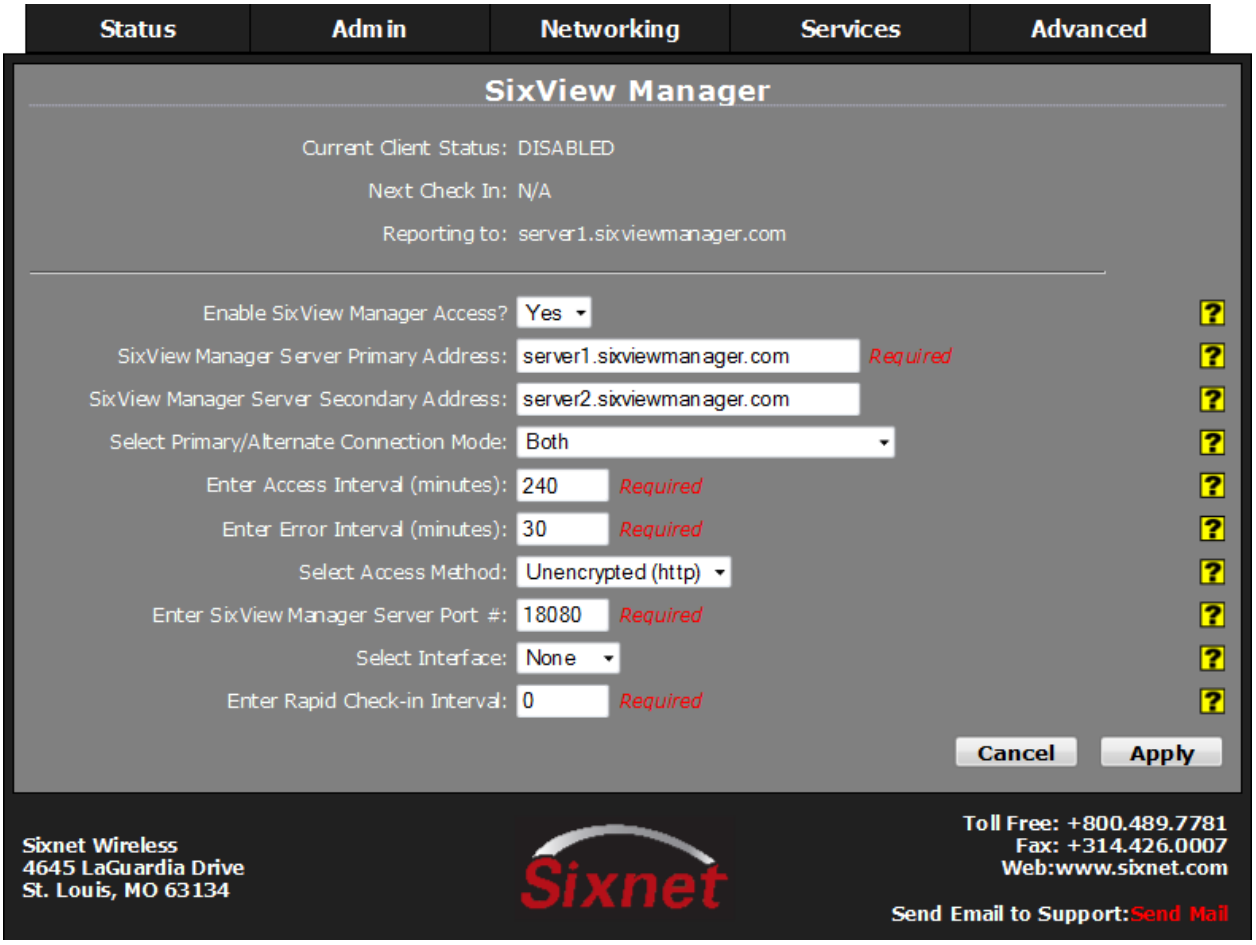

Enable SixView Manager Access? Select Yes to enable the SixView Manager Client, which will enable the device to communicate with the SixView Manager Server identified by the Host Address entered in the field below.
Note: A device managed by the SixView Manager Server may have its configuration altered at any time, without warning, so it is important to be aware of the actions the selected SixView Manager Server is configured to perform upon receiving a check-in from a new device before enabling this option. Recommended Setting = Yes

SixView Manager Server Primary Address: Enter the IP Address or host name of your SixView Manager primary server.

NOTE: When changing the Primary Address to your own private SixView Manager server, you may want to consider setting the Secondary Address to the Sixnet SixView Manager test server (server1.sixviewmanager.com) for trial and initial production rollouts. This will enable Sixnet support staff to monitor the progress and better assist in diagnosing potential problems.

SixView Manager Server Secondary Address: Enter the IP Address or host name of your SixView Manager secondary server.

NOTE: When changing the Primary Address to your own private SixView Manager server, you may want to consider setting the Secondary Address to the Sixnet SixView Manager test server (server2.sixviewmanager.com) for trial and initial production rollouts. This will enable Sixnet support staff to monitor the progress and better assist in diagnosing potential problems.

Select Primary/Alternate Connection Mode: Select the desired Connection Mode from the provided drop-down.

Primary Only	The SixView Manager client only connects to the Primary Server.
Secondary Only	The SixView Manager client only connects to the Secondary Server.
Both	The SixView Manager client connects to the Primary and Secondary Servers.
Secondary when Primary unavailable	The SixView Manager client preferentially connects to the Primary, using the Secondary as a backup.

NOTE: "Secondary when Primary unavailable" or "Both" are the preferred methods in configurations supporting redundant SixView Manager servers.

Enter Access Interval (minutes): Enter the number of minutes the SixView Manager Client process should wait before connecting to the SixView Manager server.

NOTE: While lower values can result in more timely status reports with the SixView Manager Server, it comes at an expense of increased data traffic, which may be an issue when the connection utilizes a cellular modem with a service plan where cost is based on bandwidth usage. A value of 220 is suggested for Cellular carriers that use an inactivity timeout of four hours.

Enter Error Interval (minutes): Enter the number of minutes the SixView Manager Client should wait before re-attempting a previously failed check-in attempt.

Select Access Method: Select the desired Access Method from the provided drop-down.

Unencrypted (http)	Faster, but less secure.
Encrypted (https)	Slower, but more secure.

NOTE: The encrypted method adds significant overhead which may be a consideration when using a cellular modem connection. For example, if an ipsec_restart is an option, then when selected, will be run whenever the fallback logic selects and activates this interface.

Enter SixView Manager Server Port #: If the SixView Manager Server has been configured to accept connections on a port other than its standard default, that custom port number should be entered in this field. The administrator of the SixView Manager Server will be able to provide you with the necessary information to properly set this parameter. Default 18080 for http, 18081 for https.

Select Interface: Select the name of the interface to which the SixView Manager Client will bind for communications with the SixView Manager Server.

NOTE: This option will only be necessary if the SixView Manager Client is required to communicate through a configured IPSEC, GRE or IPIP tunnel.

Enter Rapid Check-in Interval: Enables device to send Cell modem RF status information at very short intervals. This feature is only supported by SixView Manager Servers running 1.22 or later version server software.

NOTE: Each Rapid RF check-in will produce about 1300 bytes of data. Setting this value to 15 seconds will generate about 7.4MB of data a day (224.6MB every 30 days). This amount is addition to any other data the unit might be transmitting/receiving. Enter 0 if you are not using this feature on a Sixnet SixView Manage server.

Disable SixView Manager Client

- Click on the pull down menu at the “Enable SixView Manager Access”
- Click on “No” and the display will retract

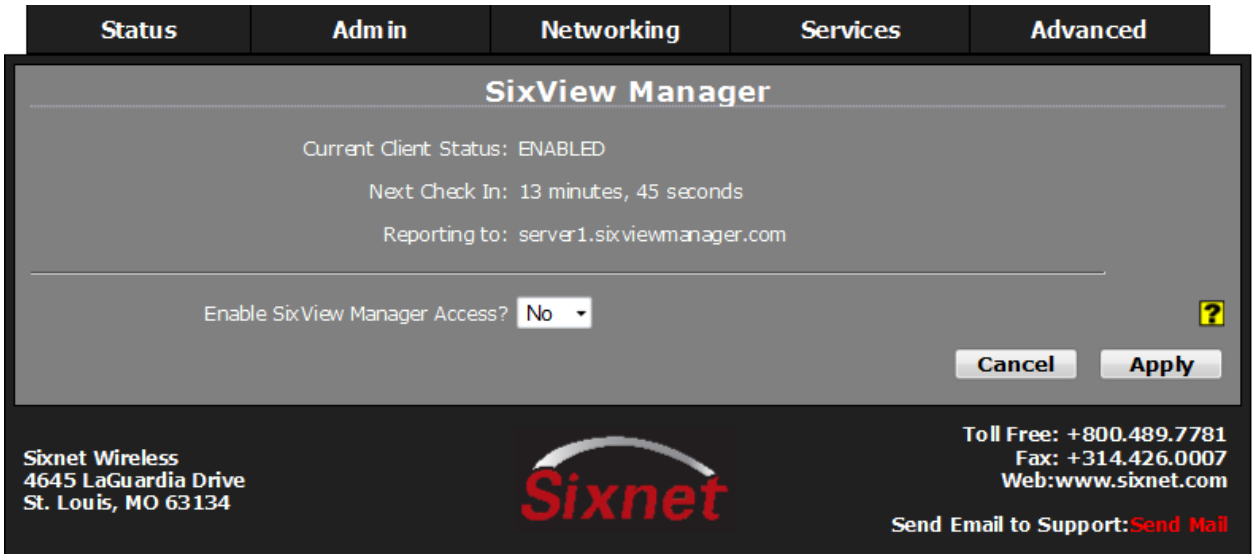

- Click on the “Apply” button and the following pop-up window will appear:

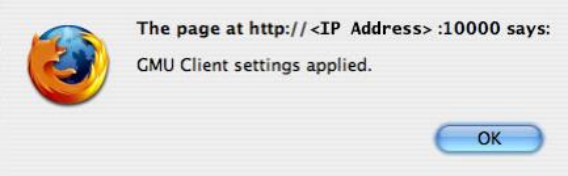

- Click on the “OK” button to acknowledge the content

3.5.5 SSH Server

The “SSH Server” menu item allows you to configure whether the Sixnet router will communicate with the network via Secure Shell (SSH).

Click on the “SSH Server” menu item and the following window will appear:

Click on the pull down at the "Enable SSH Server?" and the display will expand to reveal the configuration fields shown below:

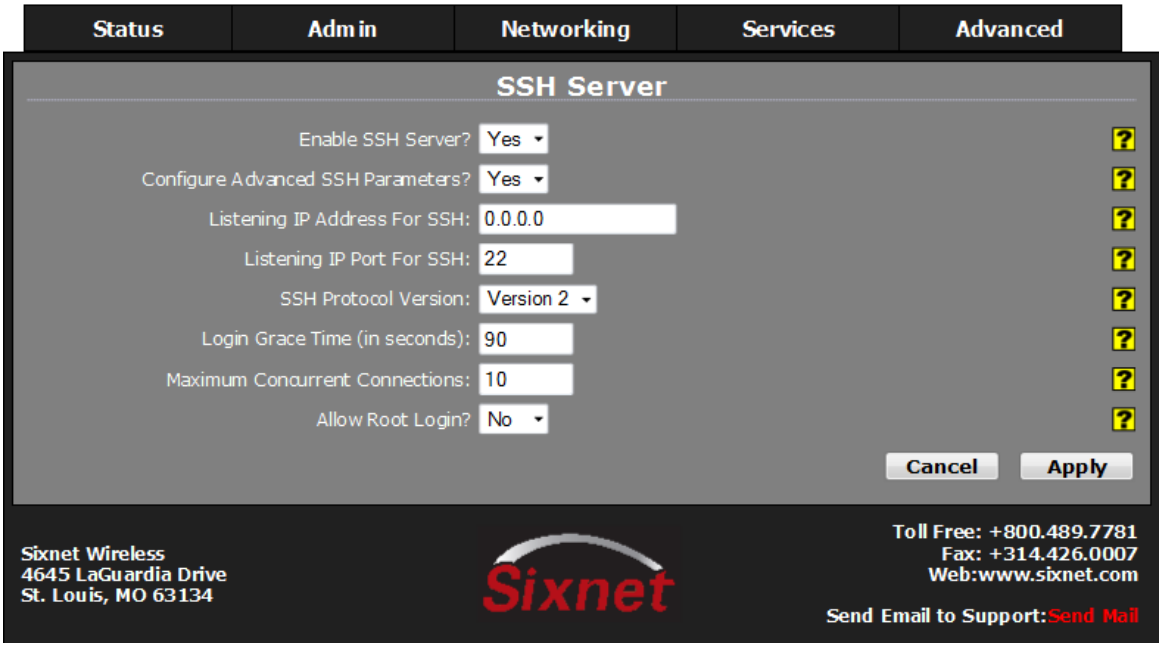

Configure Advanced SSH Parameters? Select "Yes" to configure advanced options for the SSH Server.

Listening IP Address For SSH: Specifies the local IP Address on which the SSH server will accept connections.

NOTE: Specifying a value of 0.0.0.0 allows the SSH server to accept connections on any interface. Firewall rules must be present, however to allow SSH connection on untrusted interfaces.

Listening IP Port For SSH: Specifies the local IP port on which the SSH server will accept connections.

NOTE: Specifying a value other than 22 will require proper firewall rules in order to allow connections to the given port.

SSH Protocol Version: Specifies the protocol version for SSH Server to use.

NOTE: Security flaws have been found in SSH protocol version 1. For that reason, we recommend using protocol version 2 where possible.

Login Grace Time (in seconds): Specifies the amount of time, in seconds, after which the SSH server will disconnect, if the user has not successfully logged in. Recommended value is 30.

Maximum Concurrent Connections: Specifies the maximum number of concurrent unauthenticated connections to the SSH server. Additional connections will be dropped until authentication succeeds, or the Login Grace Time expires for a connection. Recommended value is 10.

Allow Root Login? Specifies whether root can log in directly to the SSH server. Recommended setting is "No".

- Click on the "Apply" button and the following pop-up window will appear:

- Click on the "OK" button to acknowledge the content

3.5.6 SSL Connections

The "SSL Connections" menu item allows you to configure the Sixnet router to either act as a Secure Socket Layer (SSL) Client to receive certificates or as an SSL Server to issue certificates. The SSL Connections tab is sub sectioned into the SSL Client, and the SSL Server.

SSL Client

The "SSL Client" menu item allows you to configure the Sixnet router to be a SSL client and receive a certificate of authorization from an SSL server to authenticate connections for secure communications.

Click on the "SSL Client" menu item and the following window will appear:

- Click on the pull down menu at the "Enable SSL?"
- Click on "Yes" and the display will expand to reveal the configuration fields

Activity Log Level: This controls the logging level for SSL Connection activity. Recommended setting is "Summary" for a production, and "Full" for test environment.

Wait for Connection (sec.): Time (in seconds) allowed after sending SYN packets, to wait for SYN-ACK. Default is '20'.

Idle Timeout (min.): Time (in minutes) allowed for no traffic over an SSL connection, before closing down the link. Default is '720'.

Advance Setup? Select "Yes" to modify advanced SSL options. The display will expand to reveal the advance setup fields.

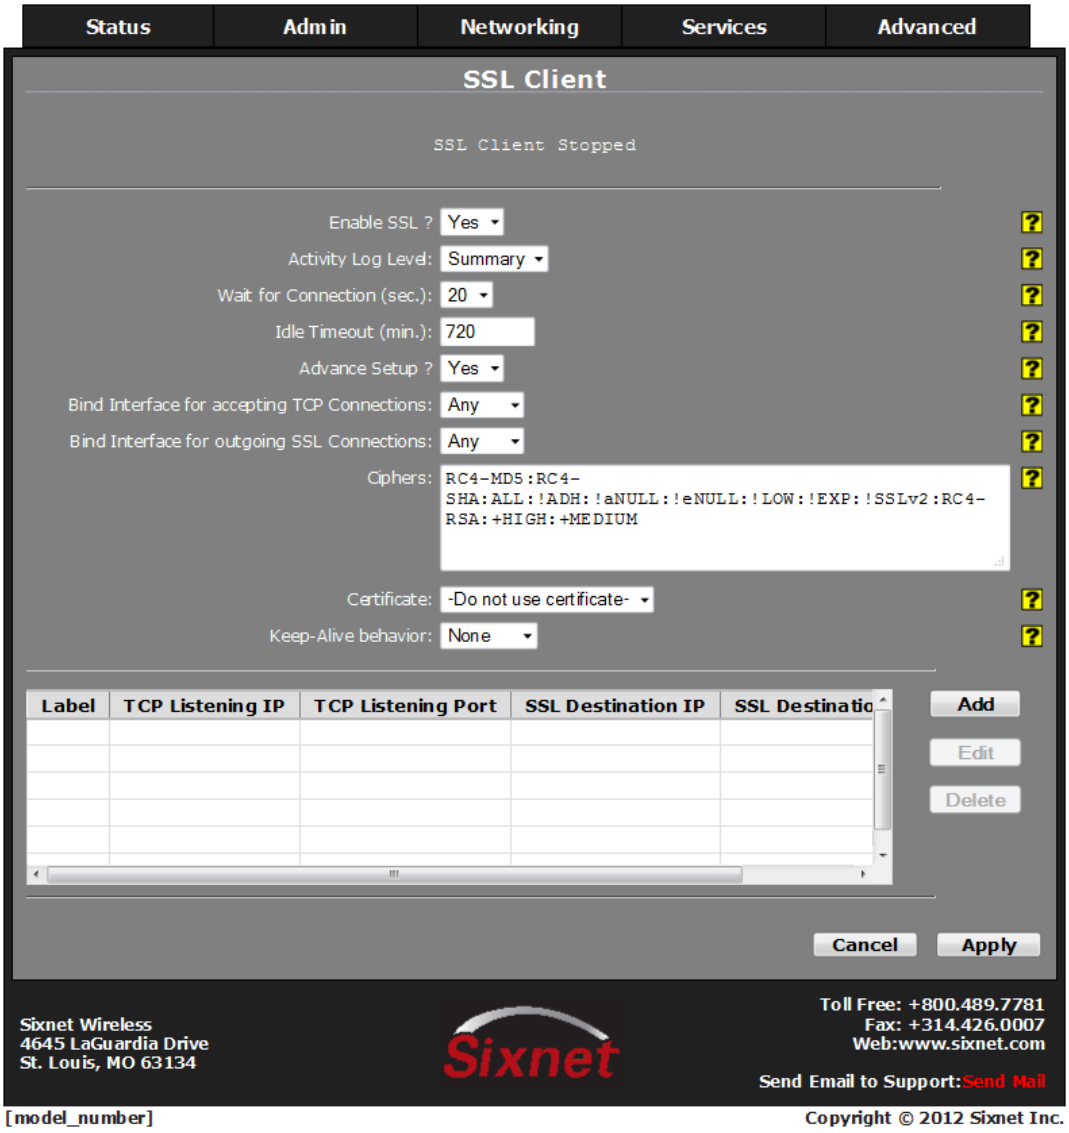

Bind Interface for accepting TCP Connections: This will restrict the unencrypted listening socket to allow connections coming into the specified interface only. Recommended setting is "Any".

Bind Interface for outgoing SSL Connections: This will restrict the encrypted socket to initiate connections out the specified interface only. Specifying an interface here may conflict with policy routing, however it may be required in a GRE/VPN or other tunneled environment. Please consult with a network architect for additional assistance. Recommended setting is "Any".

Ciphers: This field is a list of openssl ciphers supported. Please consult support staff before attempting to change. Reference Google: "openssl cipher list" for more information. Recommended setting is "RC4-MD5:RC4-SHA:SSLv3".

Certificate: Specifying a certificate in client mode will use this certificate chain as a client side certificate chain. Using client side certs is optional. The certificates must be in PEM format, with an unencrypted key (not password protected when generated). Use **Admin→Certificate Manager** to install/update certs.

Keep-Alive Behavior: This option enables TCP Keep-alives on the underlying sockets. The following options are supported:

None: Keep-alives not used.

All: Keep-alives enabled for all sockets.

Accept: Keep-alives enabled for listening server socket side connections only. This applies to the clear text server for Client mode sockets, or the SSL Encrypted server for Server mode sockets.

Remote: Keep-alives enabled for client initiated sockets.

Local: Keep-alives enabled for client connections bound to a local IP address.

You may need to adjust the master Keep-alive timer via **Networking→TCP Global Settings**.

NOTE: Enabling TCP Keep-alives may, dramatically, increase the total amount of traffic for the affected socket(s) depending on the master interval, probe and timeout settings, which should be considered for connections using a wireless (cellular) connection with respect to total data usage for the subscripted plan.

Add SSL Client Interface

- Click on the "Add" button and the following pop-up window will appear:

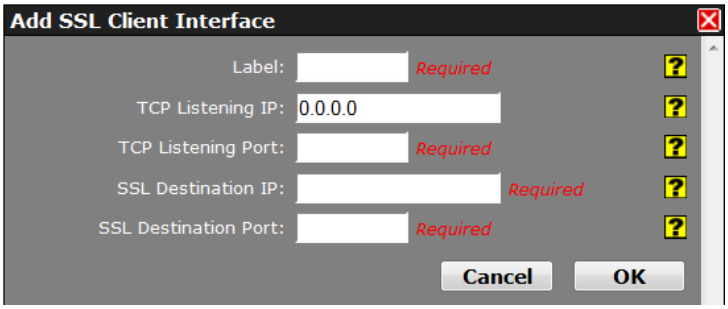

Label: Enter a unique name to describe this connection.

TCP Listening IP: Enter the IP to listen on for incoming connections. If not using static IP addresses, it is recommended to use the Advanced Setup option "Bind Interface for accepting TCP Connections" instead.

Leave blank (0.0.0.0) to allow connections from any interface. Use 127.0.0.1 for internal connection use only (gwlnx Protocol Converter).

TCP Listening Port: Enter the listening port for this connection. Please note that this port must be allowed in the Firewall access rules for any external/untrusted interface.
It may be helpful to review the results of **Status→Socket Statuses→TCP Only** to confirm that your choice of listening port is not already in use. (Ports under "Local Address" with a state of "LISTEN" are in use.)

SSL Destination IP: Enter the IP or Domain Name of the SSL server to which you would like to connect.

SSL Destination Port: Enter the Port number of the SSL server to which you would like to connect.

Click on the "OK" button to populate the SSL Client screen.

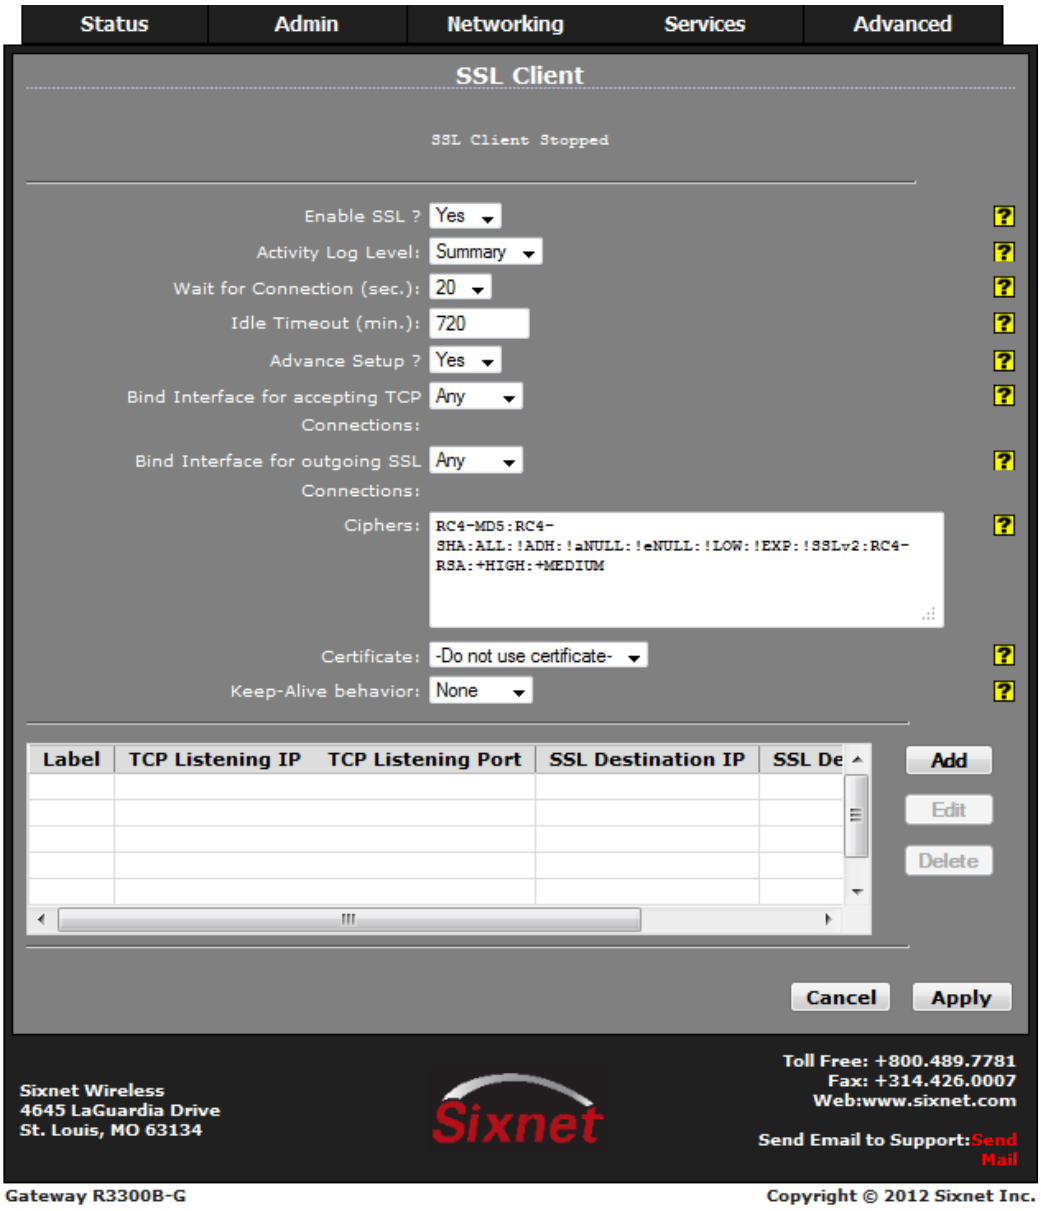

- Click on the “Apply” button and the following pop-up window will appear:

- Click on the “OK” button to acknowledge the content

SSL Server

The "SSL Server" menu item allows you to configure the Sixnet router to issue SSL certificates to requesting SSL clients.

- Click on the "SSL Server" menu item and the following window will appear:

- Click on the pull down menu at the "Enable SSL?"
- Click on "Yes" and the display will expand to reveal the configuration fields.

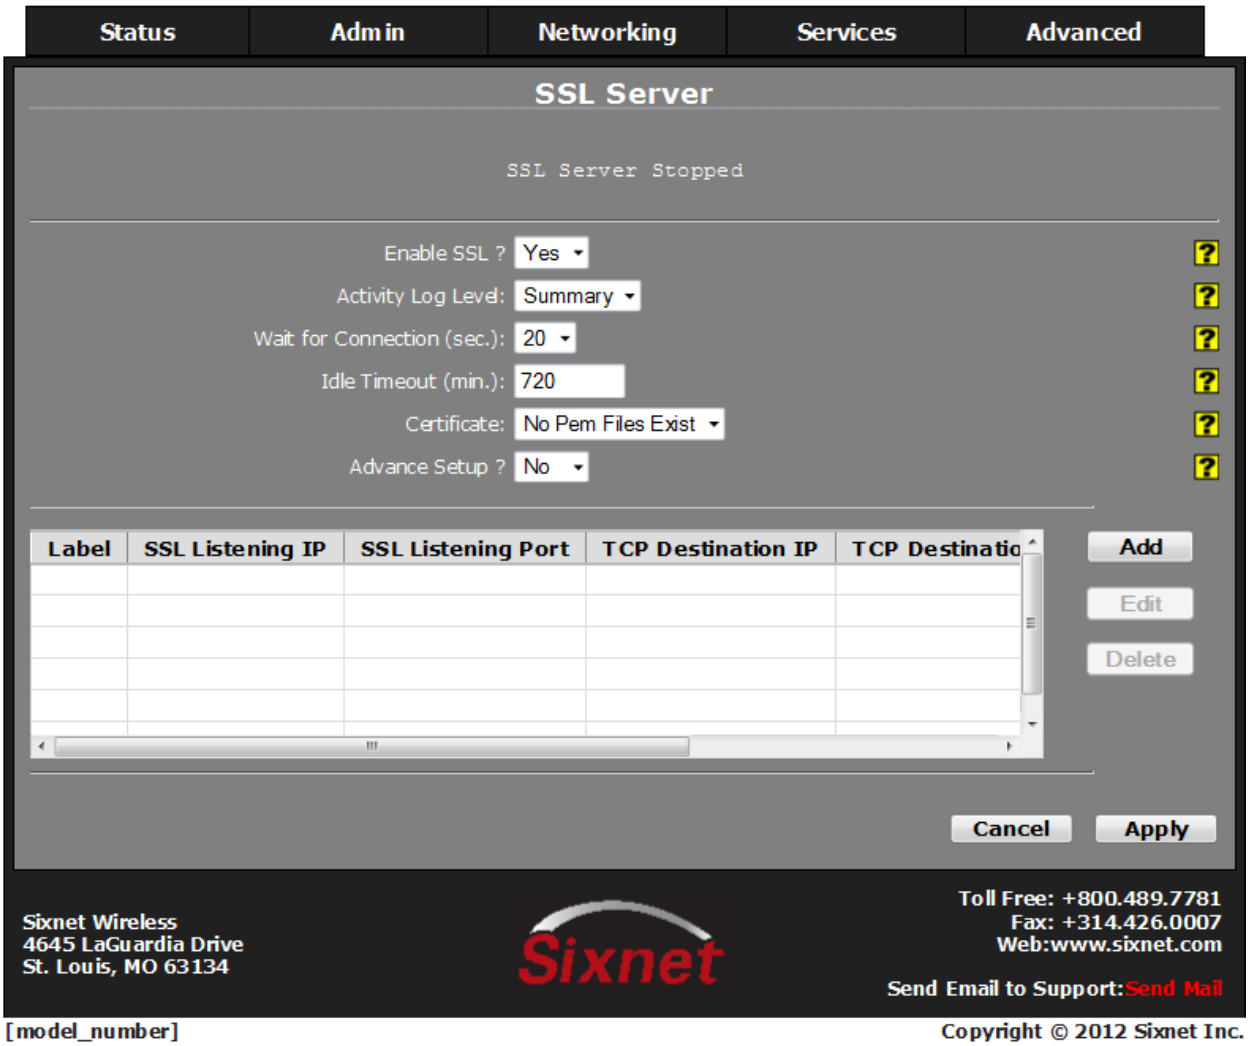

Activity Log Level: This controls the logging level for SSL Connection activity. Recommended setting is "Summary" for a production, and "Full" for test environment.

Wait for Connection (sec.): Time (in seconds) allowed after sending SYN packets, to wait for SYN-ACK. Default is '20'.

Idle Timeout (min.): Time (in minutes) allowed for no traffic over an SSL connection, before closing down the link. Default is '720'.

Certificate: A server certificate must be provided. This will be used to encrypt communication with all clients. The certificates must be in PEM format, with an unencrypted key (not password protected when generated). Self signed certificates are highly recommended. Use **Admin→Certificate Manager** to install/update certs.

Advance Setup? Select "Yes" to modify advanced SSL options. The display will expand to reveal the advance setup fields.

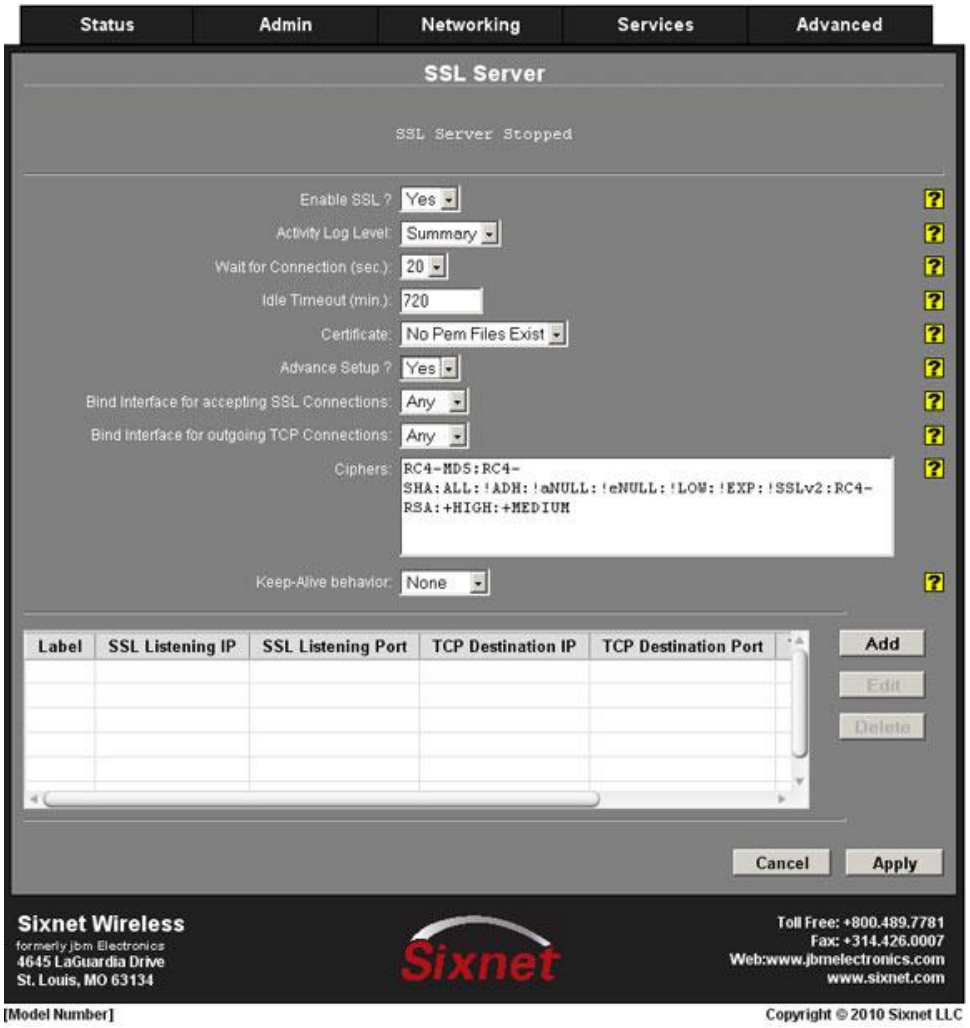

Bind Interface for accepting TCP Connections: This will restrict the unencrypted listening socket to allow connections coming into the specified interface only. Recommended setting is “Any”.

Bind Interface for outgoing SSL Connections: This will restrict the encrypted socket to initiate connections out the specified interface only. Specifying an interface here may conflict with policy routing, however it may be required in a GRE/VPN or other tunneled environment. Please consult with a network architect for additional assistance. Recommended setting is “Any”.

Ciphers: This field is a list of openssl ciphers supported. Please consult support staff before attempting to change. Reference Google: "openssl cipher list" for more information. Recommended setting is “RC4-MD5:RC4-SHA:SSLv3”.

Keep-Alive Behavior: This option enables TCP Keep-alives on the underlying sockets. The following options are supported:

None: Keep-alives not used.

All: Keep-alives enabled for all sockets.

Accept: Keep-alives enabled for listening server socket side connections only. This applies to the clear text server for Client mode sockets, or the SSL Encrypted server for Server mode sockets.

Remote: Keep-alives enabled for client initiated sockets.

Local: Keep-alives enabled for client connections bound to a local IP address.

You may need to adjust the master Keep-alive timer via **Networking→TCP Keep-alives**.

NOTE: Enabling TCP Keep-alives may, dramatically, increase the total amount of traffic for the affected socket(s) depending on the master interval, probe and timeout settings, which should be considered for connections using a wireless (cellular) connection with respect to total data usage for the subscripted plan.

Server Configuration

- Click on the “Add” button and the following pop-up window will appear:

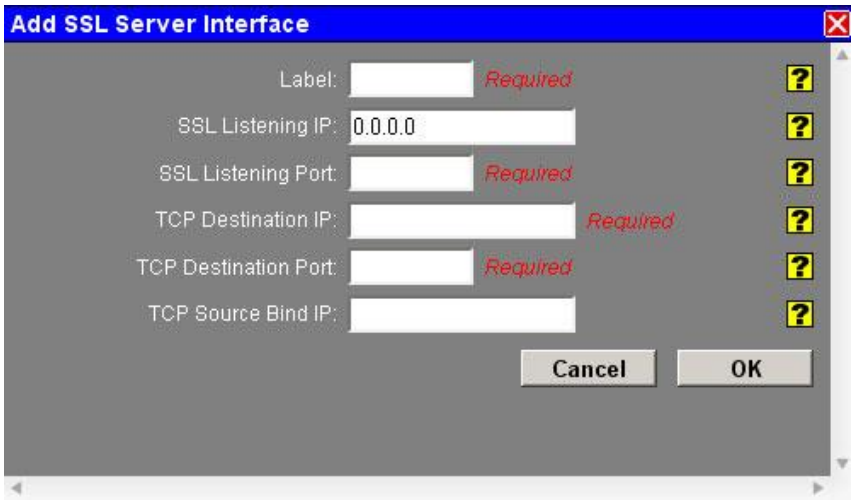

Label: Enter a unique name to describe this connection.

SSL Listening IP: Enter the IP to listen on for incoming SSL connections. If not using static IP addresses, it is recommended to use the Advanced Setup option "Bind Interface for accepting TCP Connections" instead.

Leave blank (0.0.0.0) to allow connections from any interface.

SSL Listening Port: Enter the listening port for SSL connections. Please note that this port must be allowed in the Firewall access rules for any external/untrusted interface.

NOTE: It may be helpful to review the results of Status→Socket Statuses→TCP Only to confirm that your choice of listening port is not already in use. (Ports under "Local Address" with a state of "LISTEN" are in use.)

TCP Destination IP: Enter the IP or Domain Name of the standard TCP server to which you would like to connect. Use 127.0.0.1 for internal connection use only (gwlnx Protocol Converter, or OOB Encryption Setup)

TCP Destination Port: Enter the Port number of the standard TCP server to which you would like to connect.

TCP Source Bind IP: Enter the IP to bind to for outgoing TCP connections. If not using static IP addresses, it is recommended to use the Advanced option "Bind Interface for outgoing TCP Connections".

Leave blank for normal operation (no binding).

- Click on the “OK” button to populate the SSL Server screen

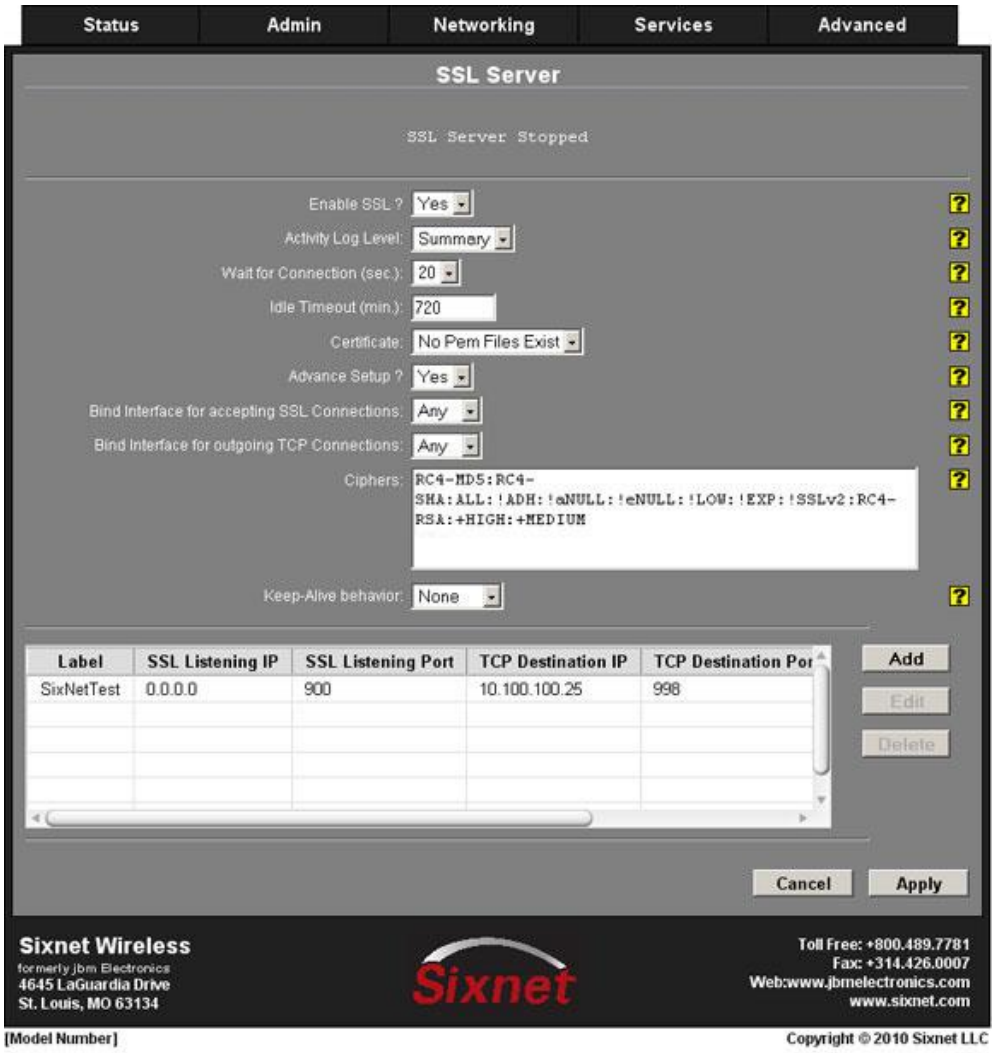

Click on the “Apply” button and the following pop-up window will appear:

Click on the “OK” button to acknowledge the content

3.5.7 System Logging

The "System Logging" menu item allows you to configure the Sixnet router to send the system logs to a different syslog server designated by IP Address or URL.

- Click on the "System Logging" menu item and the following window will appear:

- Click on the pull down menu for "Forward syslog to remote host?" and choose "Yes" to reveal the system logging configuration fields

IP Address / Name of remote host: Enter the IP address of the remote syslog server to which you want to forward messages.

- Click on the "Apply" button and the following pop-up window will appear:

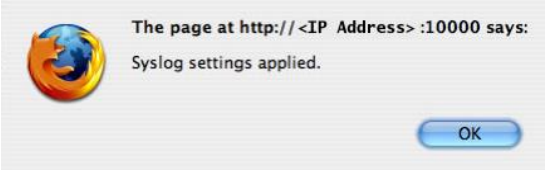

- Click on the "OK" button to acknowledge the content

3.5.8 TELNET Server

The “TELNET Server” menu item allows you to enable or disable TELNET on the Sixnet router.

- Click on the “TELNET Server” menu item and the following window will appear:

- Click on the pull down menu at the “Enable TELNET Server?” field
- Click on “Yes”

- Click on the “Apply” button and the following pop-up window will appear:

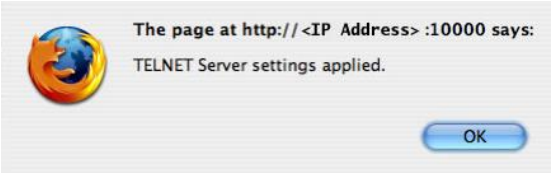

- Click on the “OK” button to acknowledge the content

3.5.9 Ping Alive

Ping is a diagnostic tool used for verifying connectivity between two hosts on a network. It sends Internet Control Message Protocol (ICMP) echo request packets to a remote IP address and watches for ICMP responses. Click on "Ping Alive" tab to enable Ping Alive option.

- Click on "Ping Alive" tab as shown above to enable Ping Alive option

- Select "Yes" to "Enable Ping Alive?" option and the following window will appear:

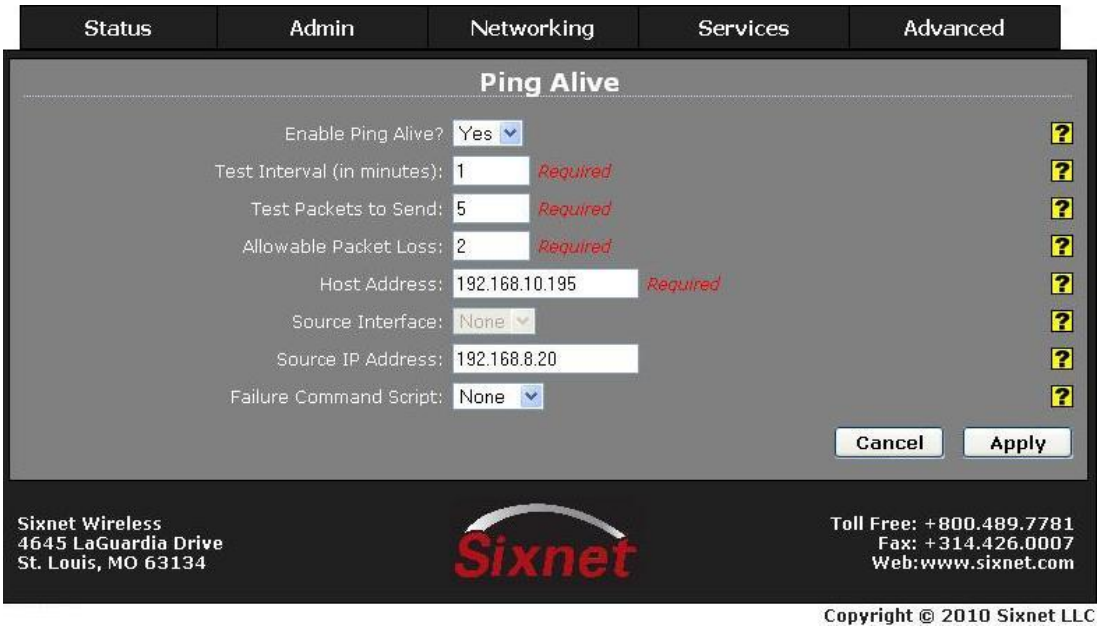

Test Interval (in minutes): Enter the time interval (in minutes) to which the ping packets would be sent. Recommended setting is 50.

Test Packets to Send: Specify the number of ping packets to send out to test connectivity. The minimum is 1, maximum is 10.

Allowable Packet Loss: Specify the number of lost packets that are acceptable before the link is considered unavailable. Note: The value must be less than the number of test packets set via **Test Packets to Send**.

Host Address: Enter the IP Address of the destination host to which the ping packet would be sent. Default setting is "1.0.0.1".

Source Interface: Select the name of the interface to which the service will bind for communications tests. Recommended setting is "None".

Source IP Address: Enter the IP address to use as a source for communications tests. Note: This will be the source IP address of the PING packets, but does not necessarily reflect the interface from which packets will traverse the unit.

Failure Command Script: Choose the name of the command script to be executed when the PING test fails. For example, if "Reboot" is an option, then when selected, the wireless interface will be restarted.

Note: Recommended setting is "None" for standard operation with no special behaviors. The "Reboot" is useful when using the wireless (cellular) interface.

- Click "Apply" button for the changes to take effect and the following window will appear:

- Click on the "OK" button to acknowledge the content.

3.5.10 SNMP Agent

SNMP, Simple Network Management Protocol, is a standard way of querying networking devices to obtain statuses, updates, alerts and behaviors.

To retrieve SNMP data from the Sixnet device you must have a SNMP manager or Server at the head end.
The Sixnet Router will only act as an SNMP client, providing data it is polled for. It will not act as a manager to poll other devices.

The SNMP Agent allows you to query the unit for information via SNMP using what is called a MIB, Management Information Base. Standard MIB-II queries are supported, as well as a custom JBMELECTRONICS MIB. A great deal of useful information about the unit, including cellular signal strength, interface status, etc. can be queried. When configuring firewalls to allow SNMP traffic be sure to allow access to port 161 so that the device may return its results. This is the industry standard port # for SNMP traffic.

You may obtain the JBMELECTRONICS.MIB by contacting Sixnet support.

A complete listing of the OIDs found in the JBMELECTRONICS.MIB can be found in Appendix at the end of this manual.
* The community string is “public” (Do not enter the quotes).

- Click on the “SNMP Agent” menu item and the following window will appear:

- Select “Yes” to “Enable SNMP Agent?” option and the following window will appear:

Community String for SNMP Agent Access: Specify the community string to use for authentication between the SNMP Agent and Manager. Alpha-numeric strings are supported.
Note: The community string must match on both ends of the connection in order to work.
Our default community string for the JBMELECTRONICS MIB is “public”.

Allow Serial Number OID: Select Yes to allow users and management systems to retrieve the unit serial number from the SNMP Agent. If No is selected, a query of the serial number OID will return "UNKNOWN".

- Click “Apply” button for the changes to take effect and the following window will appear:

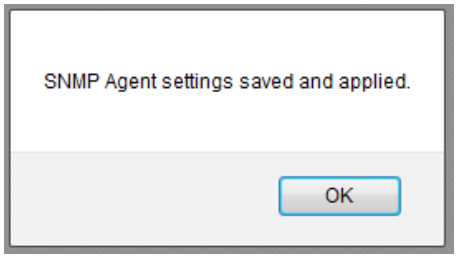

- Click on the “OK” button to acknowledge the content.

You should now see your MIB Manager be able to poll and display data collected from the Sixnet device.
If you are behind a firewall you will need to configure it to allow external SNMP connections to the IP address of the device on port 161.

3.5.11 Serial IP

Sixnet Cellular Routers in the IndustrialPro and EnterprisePro series support Serial IP via the **Services→Serial IP** configuration menu screen.

The “Serial IP” menu item allows you to configure serial communication such as POS device, serial data logging, or serial transmitter via serial cable on the Sixnet router and third party UDP or TCP/IP Client/Server application.

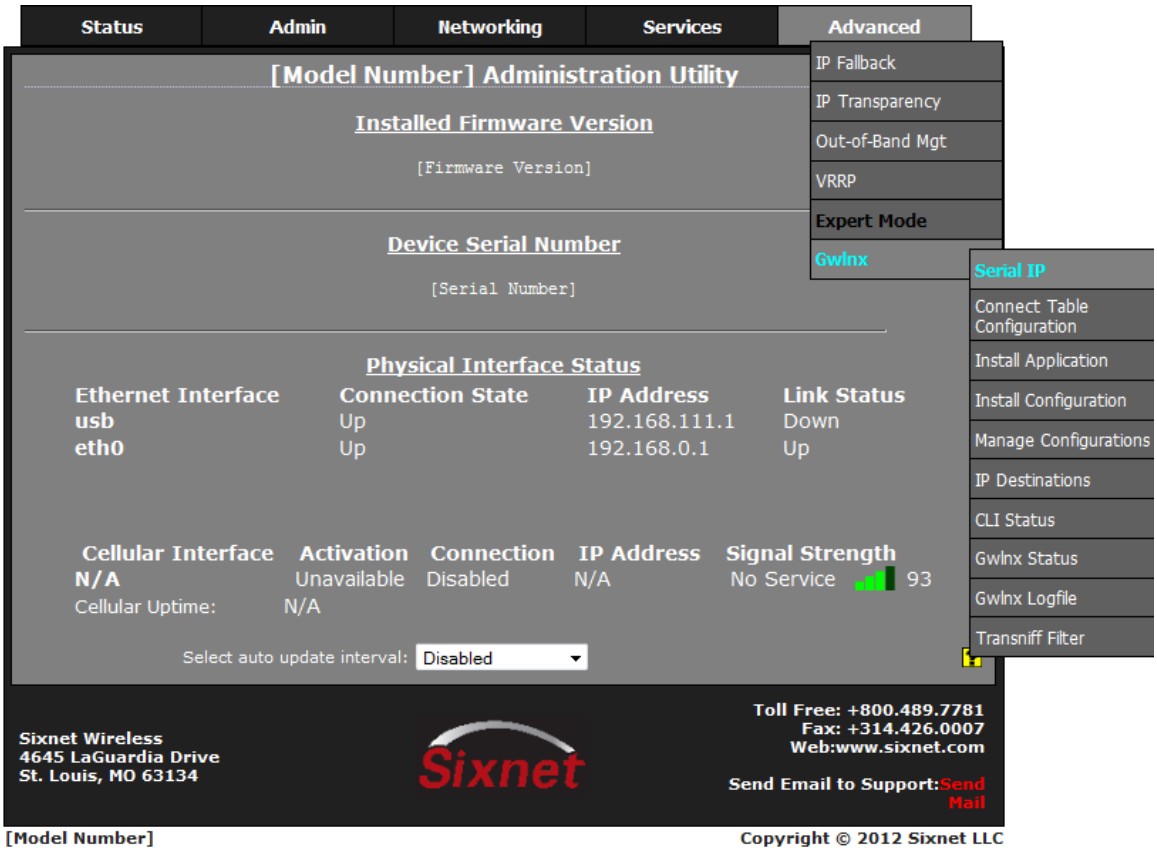

NOTE: Please refer to the third-party device user manual and/or technical support to determine what type of connection is required to connect with the Sixnet router from the RS232 serial port.

Click on the "Services→Serial IP" menu item and the following window will appear:

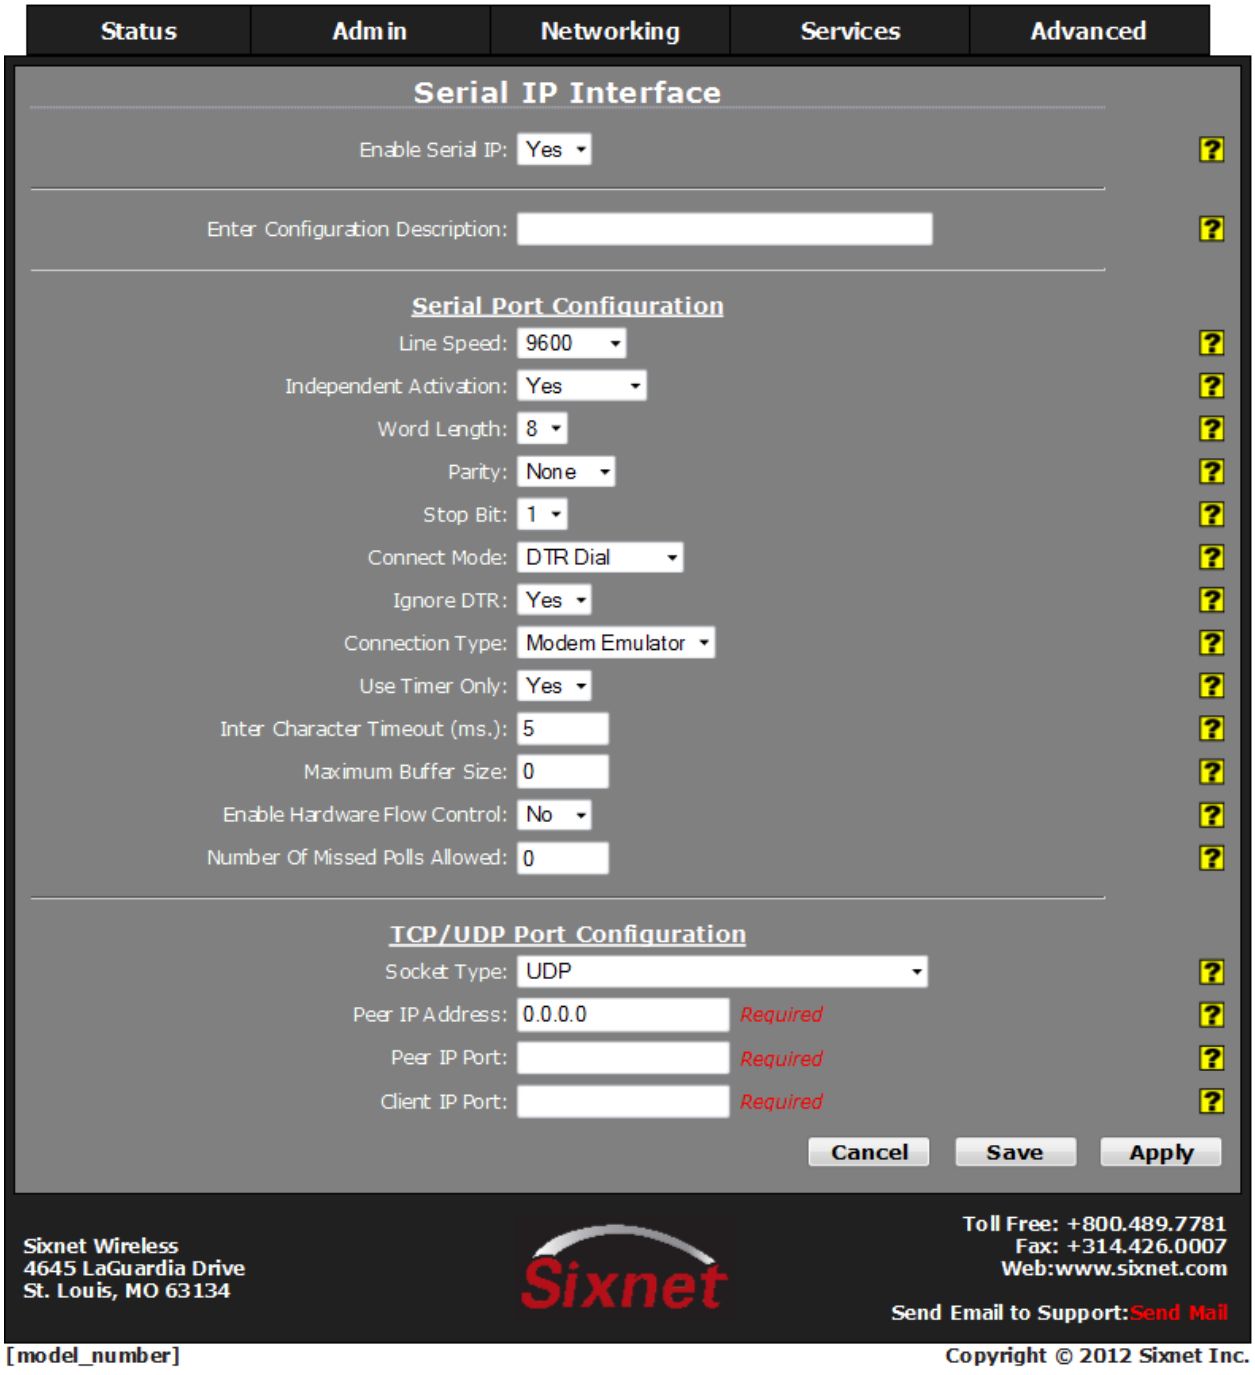

Enter Configuration Description: Enter a description to describe this connection.

Serial Port Configuration

Line Speed: Select the desired interface speed to be used via the provided drop-down.

Independent Activation: This option determines if the Serial Port of the device will accept data **before** the remote side is active. At least one of the two sides in the configuration must be set for Independent Activation. If neither side is set, then the device will not accept data. This function provides integrity for the device by preventing data from being accepted until it can be delivered successfully.

Recommended Setting:

Yes: For standard usage.

No: For serial to TCP Server configuration to insure there is a TCP Server socket available before marking the serial port active.

Word Length: Select the word length (bits per character) to be used via the provided drop-down.

Parity: Select the parity to be used via the provided drop-down.

Stop Bit: Select the number of stop bits to be used via the provided drop-down.

Connect Mode: If this option is set to **No**, the device will expect to receive AT Commands in order to go to active state. Some DTE (Data Terminal Equipment) devices required to go active if they provide DTR (Data Terminal Ready) signal.

Recommended Setting: Yes, if DTR is the connect signal.

Dial IP: This option appears only, if the Connect Mode is set to "**AT Command**" and then if the Dial IP option is set to "**Yes**", the Industrial Pro router expects to receive AT commands to initialize the serial port, and also expects to receive **ATDT<IP/Port>** in one of the following formats as a destination IP/Port address for connectivity to the host processing server.

Recommended Setting: No

ATDT192.168.0.1,5000
ATDT192.168.0.1[5000]
ATDT1921680000015000
ATDTdns.com,5000

Disable Sending Ring: This option appears only, if the Connect Mode is set to AT Command. This option eliminates the serial port from sending the RING and CONNECT message out the serial port once the server connection is available.

Recommended Setting: No, if you want the RING to go out serial port, and Yes otherwise.

Ignore DTR: This option needs to be set to **Yes**, if the serial port is connected to a DTE device that only provides 3 wires (Transmit, Receive, and Ground) for communication or the DTE device could drop DTR signal while sending AT commands.

Recommended Setting: Yes, if a 3 wire connection is expected.

Connection Type: Select the connection type you desire from the drop-down list.

Modem Emulator: Provides direct connection between the device serial port and the DTE terminal via straight RS232 cable.

Via Modem: This option is only used, if the device provides **TELCO/BPX** or RJ11 **To Terminal** port for communication.
Recommended Setting: Modem Emulator for direct connection

Use Timer Only: This option needs to be set to **Yes** in order to use the Inter Character Timeout value configured on this device.
Recommended Setting: Yes

Inter Character Timeout (ms.): When the timer expires on the serial port, the device will forward the message received to the remote device. This option is used when there is no consistent character to signal the end of a received message. This timer will be reset to the configured value on each received character.
Recommended Setting: 5 milliseconds at 9600 baud.

Maximum Buffer Size: This option allow you to set the maximum buffer size to be used for receiving serial data before forwarding to the remote device. A value of ZERO will allocate 8192 bytes of buffer by default and the data could be sent to the remote application based on TCP stack window size.
Recommended Setting: 292, For DNP3 type connections and 0, otherwise.

Enable Hardware Flow Control: Select Yes to set hardware flow control using RTS and CTS signals.
Recommended Setting:
No - if dealing with 3 wire port (Transmit, Receive, and Ground pins).
Yes - if dealing with a port that has all signal pins present.

Number Of Missed Polls Allowed: This option allows you to set the maximum number of missed RTU polls before reinitializing all the internal memory and buffer conditions. If a packet is transmitted out the serial port and no response packet is received, this is counted as a missed poll and data content is not evaluated.
Recommended Setting: 0, To disable this action and any other value is upon your environment requirements.

TCP/UDP Port Configuration

Socket Type: Select the Socket Type you desire to have for Serial IP communication from the drop-down list.
Recommended Setting: Socket Type you desire to have for this communication.

UDP: If this option is selected, the device will act as a UDP (Connectionless) and listening on the configured **Listening IP Port** for connection from the client.

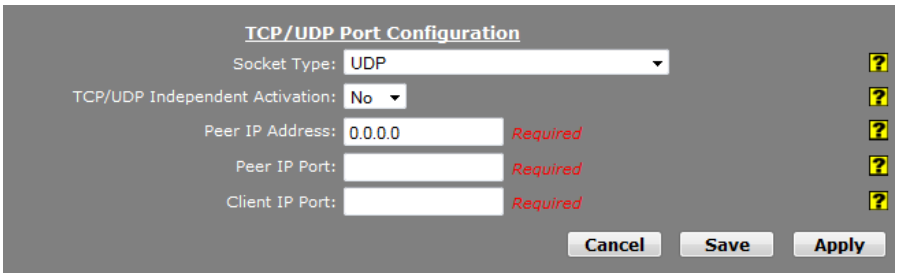

TCP Client: If this option is selected, the device will act as a TCP Client and connects to the host processor once the serial port becomes active.

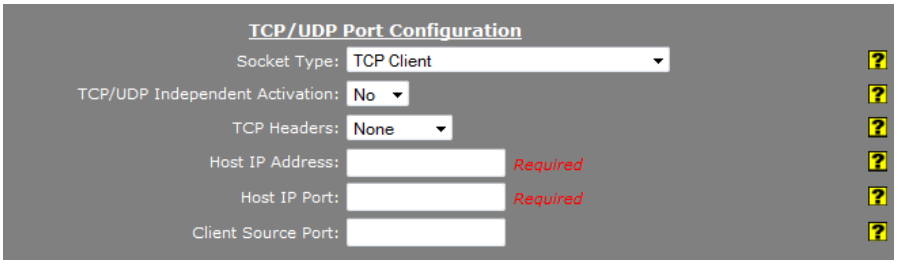

TCP Server: If this option is selected, the device will act as a TCP Server and listening on the configured **Listening IP Port** for connection from the client.

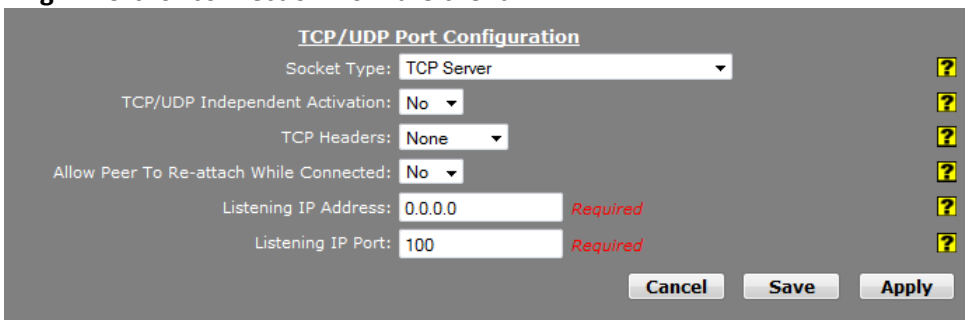

TCP Client/Server 2Way: If this option is selected, the device will listen on configured **Listening IP Port** for client connection to communicate with serial device and once the client is disconnected, and the serial device connected to the ttyS1 port needs to report its status, the device will connect to the host destination to report the device's status.

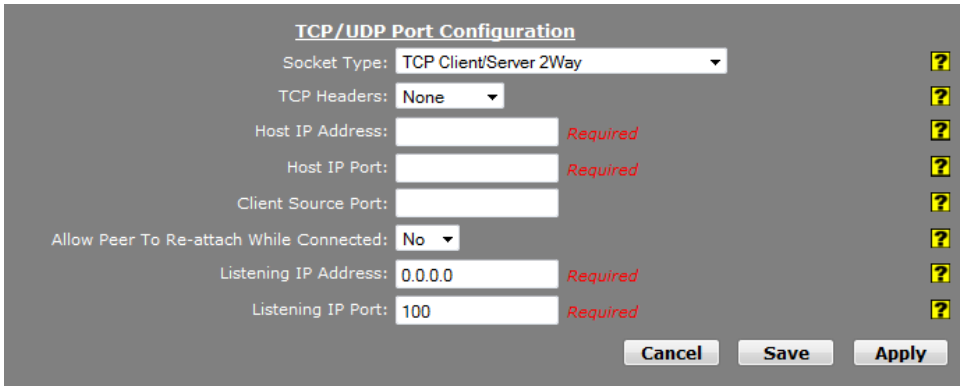

UDP Broadcaster: If this option is selected, the device will support up to 5 UDP broadcast addresses.

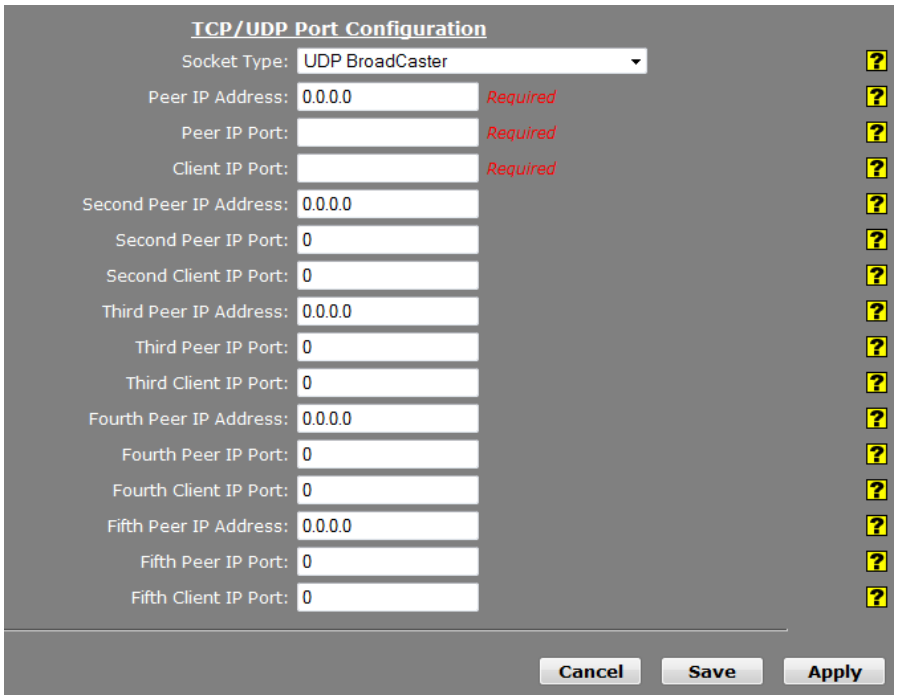
TCP/UDP Port Configuration
Socket Type: UDP BroadCaster
Peer IP Address: 0.0.0.0 Required
Peer IP Port: Required
Client IP Port: Required
Second Peer IP Address: 0.0.0.0
Second Peer IP Port: 0
Second Client IP Port: 0
Third Peer IP Address: 0.0.0.0
Third Peer IP Port: 0
Third Client IP Port: 0
Fourth Peer IP Address: 0.0.0.0
Fourth Peer IP Port: 0
Fourth Client IP Port: 0
Fifth Peer IP Address: 0.0.0.0
Fifth Peer IP Port: 0
Fifth Client IP Port: 0
Cancel
Save
Apply

TCP Client BroadCaster: If this option is selected, the device will support 10 TCP Client broadcast socket using IP Destination configuration for connectivity.

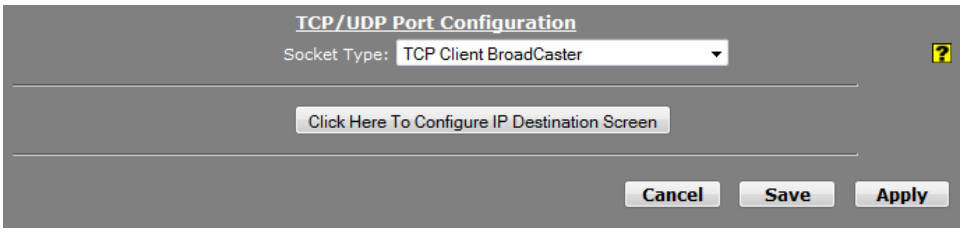

TCP Client BroadCaster Traffic Activator: If this option is selected, the device will support 10 TCP Client broadcast socket using IP Destination configuration for connectivity and would connect only if the serial data is available to broadcast.

For the Broadcaster socket types you must click on “Click Here to Configure IP Destination Screen” to configure the host processor IP/Port addresses. See screen shot below for necessary information.

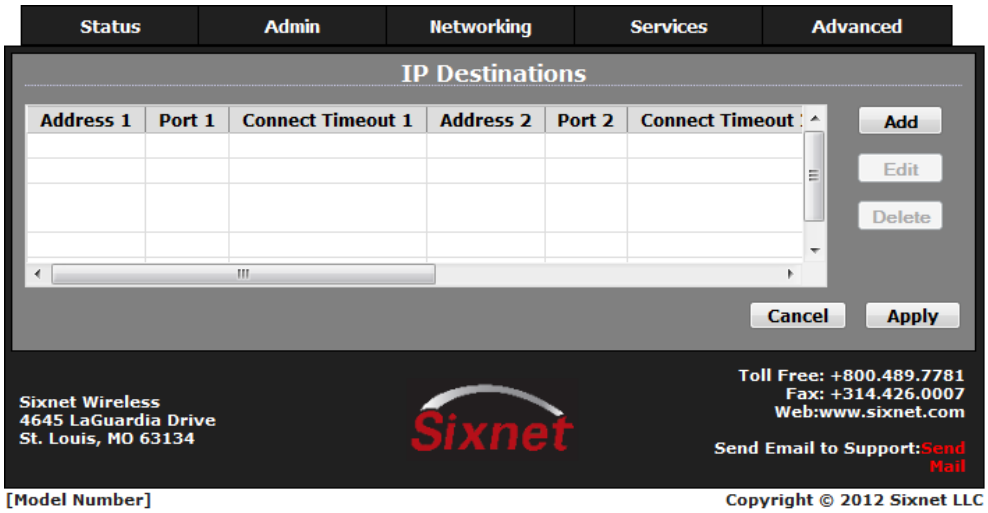

TCP/UDP Independent Activation: This option determines if the TCP/IP port of the device will accept data **before** the remote side (Serial Port) is active. At least one of the two sides in the configuration must be set for Independent Activation. If neither side is set, then the device will not accept data. This function provides integrity for the device by preventing data from being accepted until it can be delivered successfully. A TCP Server set to Yes, will listen even if the serial side is not considered connected. If set to No, it will not listen for a connection until the serial side is considered connected. A TCP Client set to Yes will always attempt to connect to the configured destination IP, even if the serial side is not connected or active. If set to No, it will attempt a connection only when the serial side is first considered connected.

Recommended Setting: Yes for Servers, **No** for Clients

Peer IP Address: Enter the peer IP Address into this field. This is **Required** for UDP communication. This specifies the Peer IP address and if set to 0.0.0.0 any remote IP can send UDP packets to our peer port, and return packets will be sent back to the IP of the last host that sent us a message. Packets cannot be sent until one is received first (to learn the remote peer's IP). If set to a specific IP, then packets will be sent to this IP only.

Recommended Setting: <0.0.0.0> to allow any IP to send packets to the peer port number.

Peer IP Port: Enter the peer Port number into this field. This is **Required** for UDP communication.

Recommended Setting: Consult your network administrator for UDP application destination port number.

Client IP Port: Enter the client IP port number into this field. This is **Required** if the peer ip address is set to a specific IP, then packets will be sent to specific IP at this client IP port number only.

Recommended Setting: <0.0.0.0> to allow any IP to send packets to the peer port number.

TCP Headers: Select the TCP/IP Header Type (Message Length Field) required for TCP/IP communication from the drop-down list.

None: If this option is selected, the device will not add or remove any bytes as the length field from the data packets received or transmitted.

Standard: If this option is selected, the device will add 2 bytes of binary exclusive network order to all transmitted TCP packets, and will remove the 2 bytes from the received TCP packets.

Extended: If this option is selected, the device will add 4 bytes of binary exclusive network order to all transmitted TCP packets, and will remove the 4 bytes from the received TCP packets. Extended header normally is used as an indicator **First, Mid, and Last** when dealing with the large TCP messages and possibility of TCP/IP packet fragmentation.

Recommended Setting: None, if TCP headers are not used.

Host IP Address: Enter the host destination IP Address into this field.
This is **Required** if the device is acting as a TCP/IP Client.

Recommended Setting: Consult your network administrator.

Host IP Port: Enter the host destination Port Address into this field.
This is **Required** if the device is acting as a TCP/IP Client.

Recommended Setting: Consult your network administrator.

Client Source Port: Enter the Source Port Address into this field. This is **Required** if the device is acting as a TCP/IP client and using specific source port for TCP socket connection.

Recommended Setting: Leave blank to use dynamic source port from TCP stack for socket connection.

Allow Peer To Re-attach While Connected: Select whether or not to allow TCP peer to re-attach to our server while the socket is connected. If enabled, a new connection attempt from the same peer will be accepted, and the previous TCP connection will be closed. This can be useful to re-establish a connection if the link is not closed gracefully.

Recommended Setting: No, do not allow, if there is an active socket connection.

Listening IP Address: Enter the listening IP Address into this field. This is **Required** if the device is acting as a TCP/IP Server. If set to 0.0.0.0 any remote client can connect to our listening port, and if set to a specific IP, only client with configured specific IP can connect to our listening port.

Recommended Setting: <0.0.0.0> to allow any client to connect to the listening port.

Listening IP Port: Enter the listening Port number into this field.
This is **Required** if the device is acting as a TCP/IP Server.

Recommended Setting: Consult your network administrator for client application destination port number.

Note: Take care to choose a port number not already used by other system services.
Consult **Status→Socket Statuses→TCP Only** for a list of ports currently in use.
Please note that a Firewall Allow rule will need to be added for remote access (**Networking→Firewall→Service Access Rules**).

Click on the "Apply" button and the following pop-up window will appear:

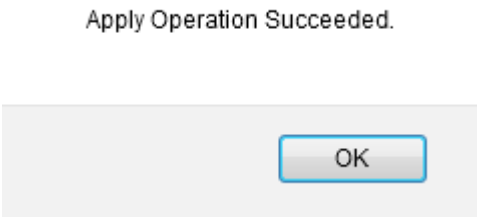

Click on the “OK” button to acknowledge the content has been updated.

3.6 Automation Tab

3.6.1 Automation

The Automation sub-menu contains all aspects of managing your Modbus and DNP3 based I/O.

This option is only supported if the IndustrialPro router has been upgraded from an SN prefix to IndustrialPro RAM. The IndustrialPro RAM firmware MODBUS application allows it to act as a MODBUS Master acting as an I/O concentrator for MODBUS / DNP3 devices. I/O for these devices can be read or written using MODBUS / DNP3 I/O transfers with the IndustrialPro acting as a MODBUS / DNP3 master. I/O data is stored in a local I/O database.
**This feature is not available on the R-Series Enterprise Routers.*

The IndustrialPro RAM will support:

- I/O transfers using MODBUS / DNP3
- Slave Station Status
- Forwarding of MODBUS / DNP3 messages
- Developing of third party applications using our SDK based on ELDK4.2 and the SIXNET IODB API.

Additionally, the IndustrialPro will act as a MODBUS slave. This allows MODBUS masters to request or update I/O points in the IndustrialPro's I/O database.

Modbus Configuration:

User interfaces will be provided to configure I/O transfers, the MODBUS forwarding table and serial interfaces. MODBUS configuration data will be stored in an XML based file named modbus.xml. This file will contain the following sections:

- serials: xml section to define the parameters used for serial ports for both MODBUS and DNP3
- localStation: xml section to define the local station number and name for both MODBUS and DNP3
- remoteStations: defines remote stations and the I/O transfers associated with them
- regAllocation: defines the number of registers for each I/O type
- forwards: defines the list of remote stations to forward MODBUS requests

There are two methods to configure these sections.

- CLI: The command line interface for the cellular modbus gateway (IndustrialPro) provides a Cisco-style telnet command line interface. It writes an XML configuration file, which is used to drive the backend daemons.

- GUI Interface: This method is a WEB based interface which is the focus of this documentation.

The user interfaces will have the ability to:

- Configure/Display local station information such as station name and station number
- Configure/Display serial ports
- Configure/Display remote stations
- Configure/Display I/O transfers
- Configure/Display MODBUS forward stations
- Configure/Display MODBUS registers allocation

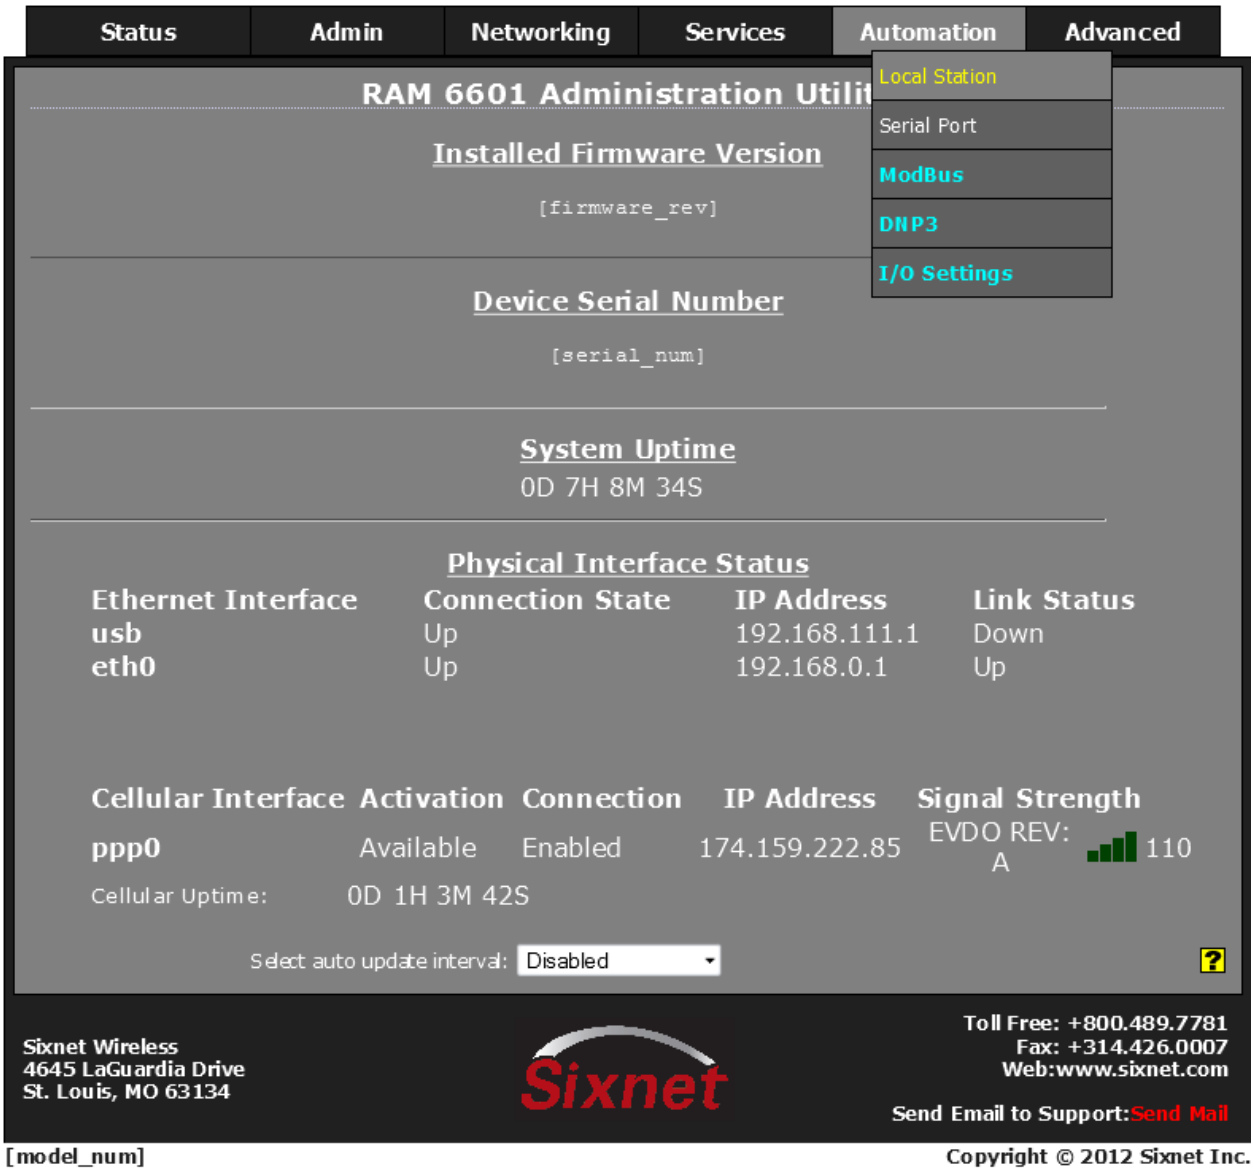

3.6.2 Local Station

Click on the Local Station sub menu item and the following menu will appear:

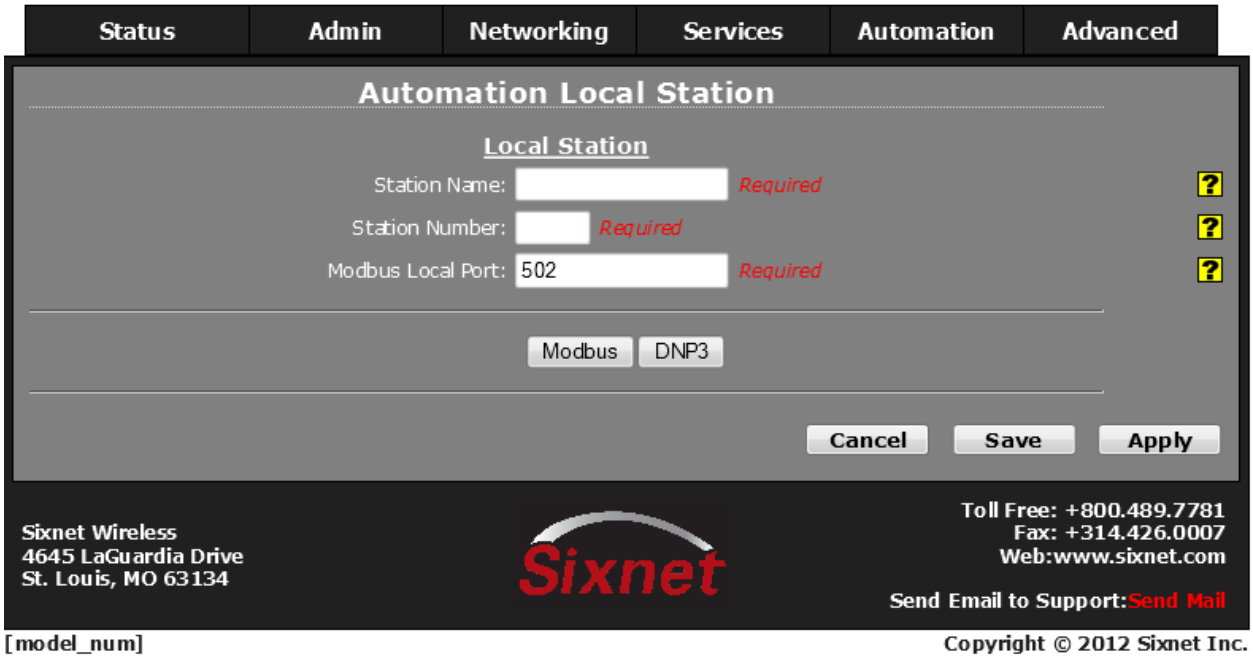

Station Name: Enter the name of the local station.
The station name must be less than or equal to 32 characters.

Station Number: Enter the local station number. The station number must be in range of 1 – 247.

Local Port: Enter the local port number. The port must be within the range of 1 – 65535 and the recommended default port is set to 502.

3.6.3 Serial Port

This section is used to configure the RS-232 port that is facing the front of the Sixnet device to integrate into your Modbus/DNP3 schema.

- Click on the "Serial Port" menu item and the following window will appear:

- Click on the “Add” button and the following pop-up window will appear:

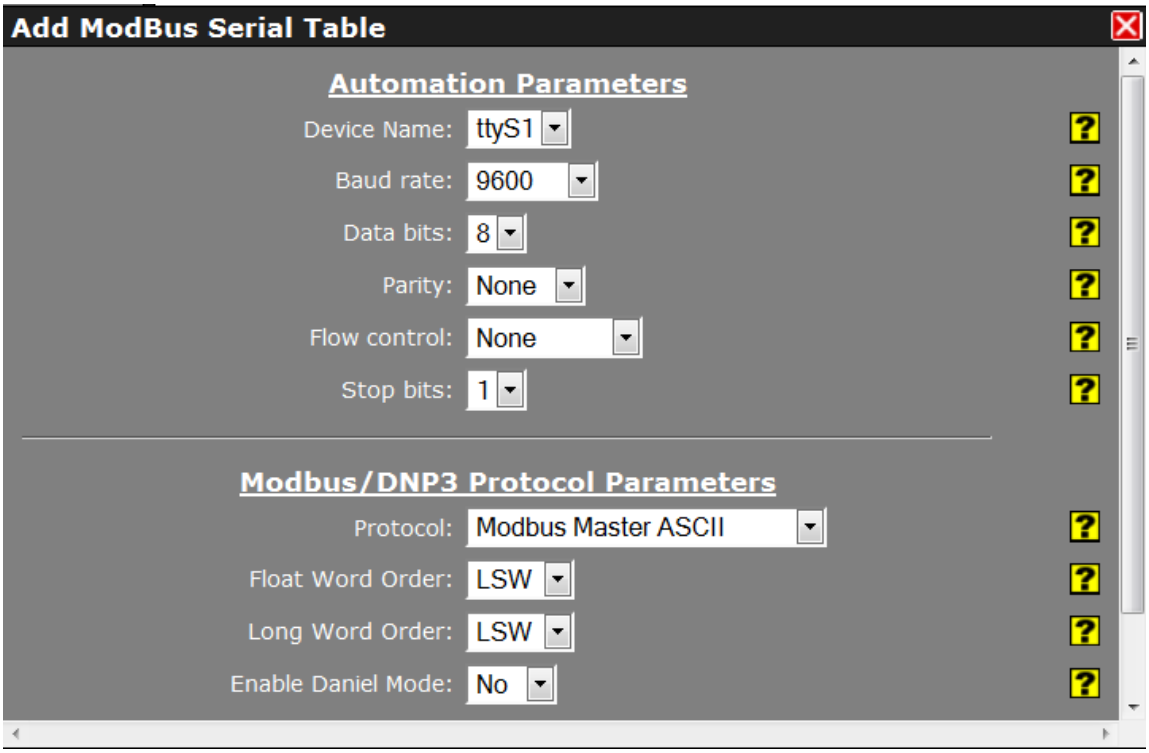

Device Name: Name of the serial device.

Baud rate: Baud rate for the serial device.
Supported baud rates are: 300, 600, 1200, 2400, 9600, 19200 and 38400.

Data bits: Number of data bits. Supported data bits are: 7 and 8.

Parity: Parity for serial device. Supported parities are: none, even, odd, mark and space.

Flow control: Flow control for serial device.
Supported flow controls are: none, hardware, xon/xoff, half duplex, full duplex.

Stop bits: Stop bits for serial device. Supported stop bits are: 1 and 2.

Protocol: Protocol being used on serial device. Supported protocols are: DNP3, Modbus Master Ascii, Modbus Master RTU, Modbus Slave ASCII, Modbus Slave RTU, Modbus Master RTU Fwd and Modbus Master ASCII Fwd.

Float Word Order: Controls the swapping of words within floats. Ignored if using Daniel mode. This is needed for configuring the serial slave application. Supported orders are: LSW and MSW.

Long Word Order: Controls the swapping of words within longs. Ignored if using Daniel mode. This is needed for configuring the serial slave application. Supported orders are: LSW and MSW.

Enable Daniel Mode: Used Daniel mode extensions when dealing with longs and floats. This is needed for configuring the serial slave application.

- Click on the "OK" button to populate the Serial Table screen.
- Click on the "Save" button to save the Serial configuration in the modbus.xml file.

3.6.4 Modbus

Remote Station:

- Click on the "Remote Station" menu item and the following window will appear:

- Click on the "Add" button to configure the remote station parameters and the following pop-up window will appear:

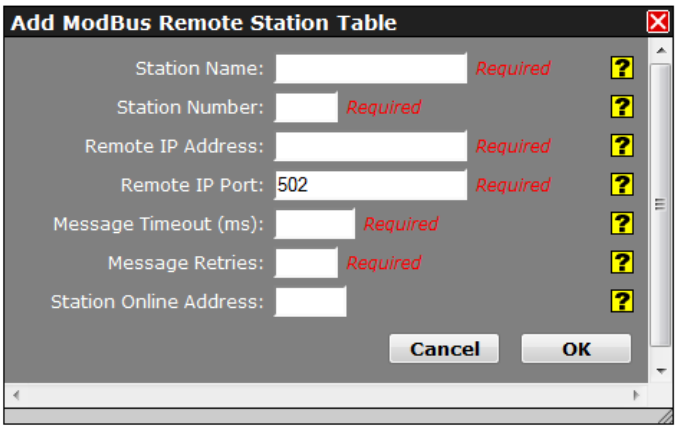

Station Name: Enter the name of the remote station. The remote station name must be less than or equal to 32 characters. All the defined remote station names will be populated in the I/O Transfer screen as a selection for assigning I/O transfer for selected remote station name.

Station Number: Enter the remote station number. The station number must be in range of 1 – 247.

Remote IP Address: Enter the remote station IP address in a valid IPv4 unicast address format, or may be blank if I/O transfers to this remote station only use the serial port.

Remote IP Port: Enter a valid IP port number (1-65535) that the remote station listens on for MODBUS requests.

Message Timeout (ms): Enter the Timeout period, in milliseconds, to wait for an I/O transfer to complete. The valid range is 10ms – 60000ms.

Message Retries: Enter the number of times to retry an I/O transfer before giving up. If a station status bit is provided, it would be marked off line when this occurs. The recommended value is 3.

Station Online Address: Discrete input address is used as a station status indicator. If provided, it is set to **True** when any I/O transfer to a remote station complete successfully, and false otherwise. Enter the Address of a local discrete input or blank if not used.

- Click on the "OK" button to populate the Remote Station Table screen. If more than one remote station is needed, click and repeat the 'Add" button.

- Click on the "Save" button to save the remote station configuration in the modbus.xml file.

I/O Transfer:

Click on the "I/O Transfer" menu item and the following window will appear:

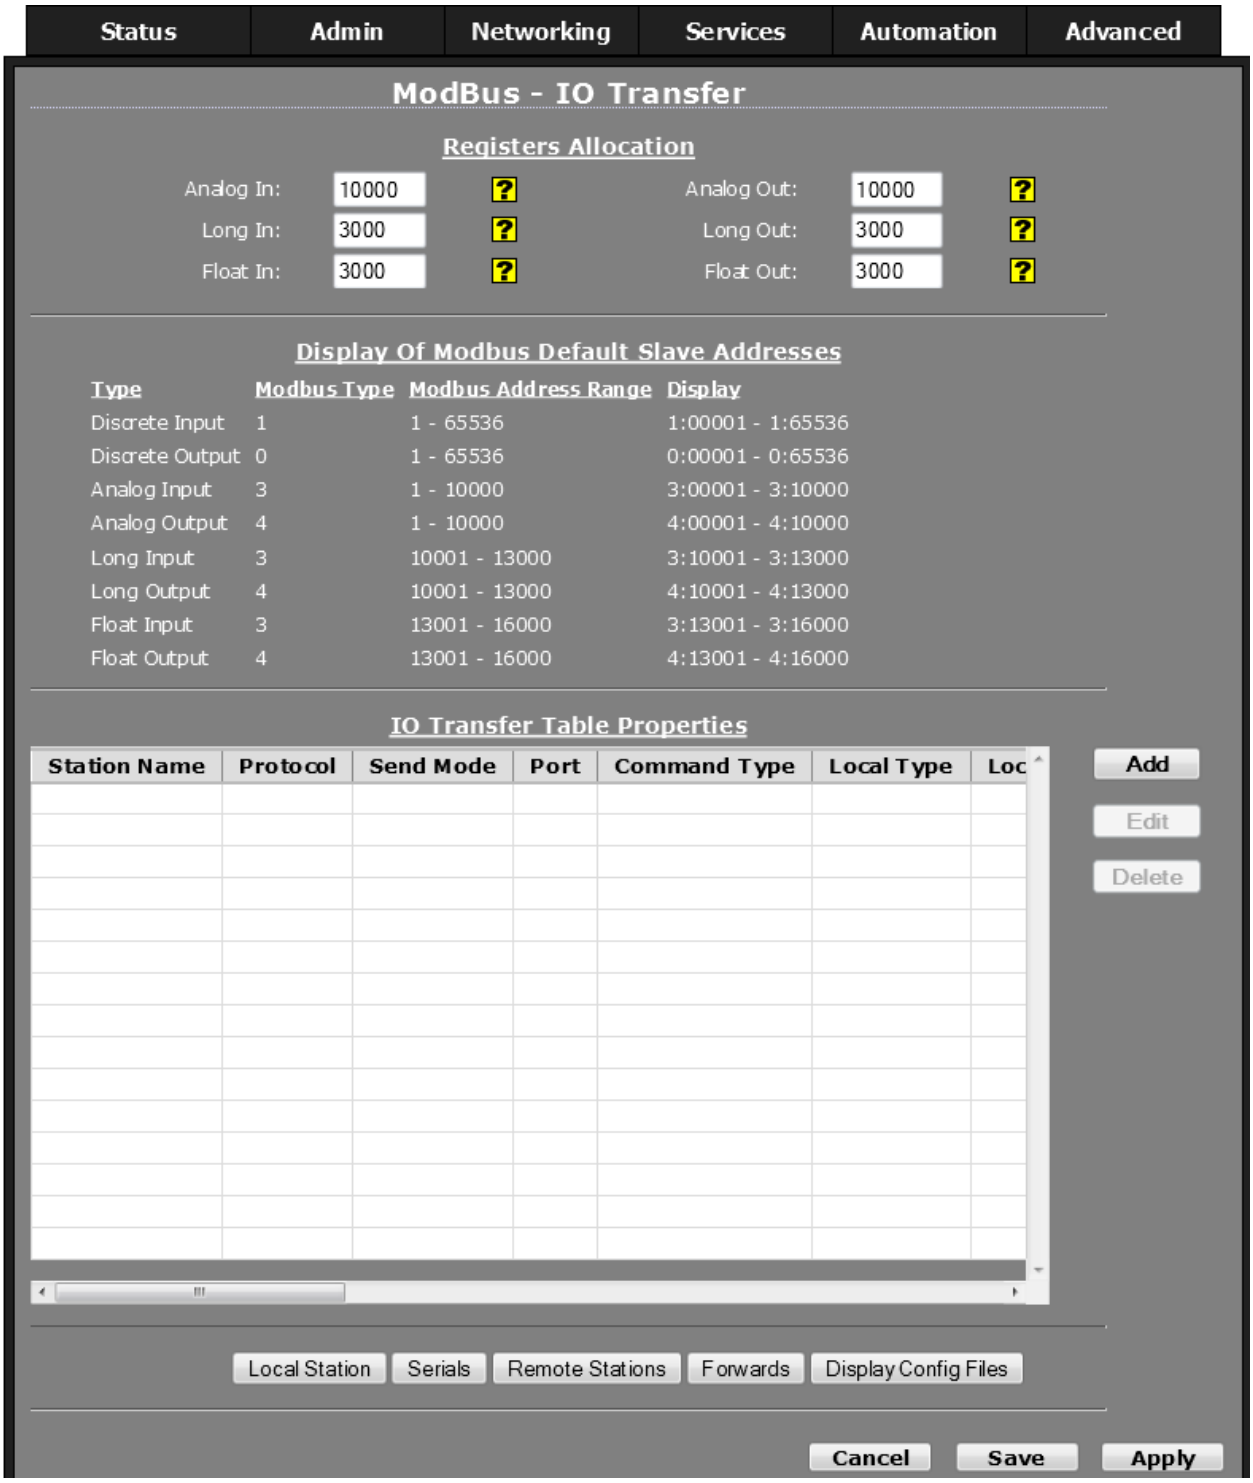
Status
Admin
Networking
Services
Automation
Advanced
ModBus - IO Transfer
Registers Allocation
Analog In: 10000
Long In: 3000
Float In: 3000
Analog Out: 10000
Long Out: 3000
Float Out: 3000
Display Of Modbus Default Slave Addresses
Type | Modbus Type | Modbus Address Range | Display
Discrete Input | 1 | 1 - 65536 | 1:00001 - 1:65536
Discrete Output | 0 | 1 - 65536 | 0:00001 - 0:65536
Analog Input | 3 | 1 - 10000 | 3:00001 - 3:10000
Analog Output | 4 | 1 - 10000 | 4:00001 - 4:10000
Long Input | 3 | 10001 - 13000 | 3:10001 - 3:13000
Long Output | 4 | 10001 - 13000 | 4:10001 - 4:13000
Float Input | 3 | 13001 - 16000 | 3:13001 - 3:16000
Float Output | 4 | 13001 - 16000 | 4:13001 - 4:16000
IO Transfer Table Properties
Station Name
Protocol
Send Mode
Port
Command Type
Local Type
Loc
Add
Edit
Delete
Local Station
Serials
Remote Stations
Forwards
Display Config Files
Cancel
Save
Apply

Register Allocation: This page is displaying the default values for Analog In, Analog Out, Discrete In, Discrete Out, Float In, Float Out, Long In and Long Out. The range of Modbus slave addresses are displayed based on default register

allocation. You can change the registers allocation values to your required register values and the range of Modbus slave addresses will be changed based on the new values.

By default, we support 8192 DI registers, 8192 DO registers, 10000 AI registers, 10000 AO registers, 3000 LI registers, 3000 LO registers, 3000 FI registers and 3000 FO registers.

- Click on the "Add" button to configure the I/O Transfer for the remote station and the following pop-up window will appear:

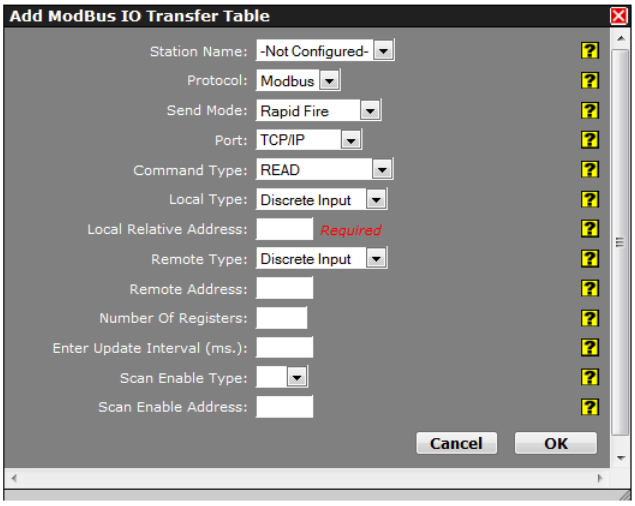

Station Name: Name of the remote station for this I/O transfer. This option lists the name of all the remote stations that you have already defined and configured in remote station table entry. Select the remote station name that you want for this I/O transfer.

Protocol: Modbus is currently the only supported protocol used for I/O transfers.

Send Mode: Mode used to send an I/O transfer.

Wait For Reply – The MODBUS master must wait for an I/O request that it has sent to complete before sending another request to the remote station.

Rapid Fire - The MODBUS master may send many I/O requests to a remote station before waiting for responses from the remote station.

Valid Values: Wait For Reply or Rapid Fire

Port: The port that the I/O request is being sent across. The supported ports are **UDP/IP**, **TCP/IP** and RS-232. If UDP/IP or TCP/IP port is used, the remote station selected for this I/O transfer should have its IP address defined.

Command Type: The commands used for I/O transfers are:

- **READ:** Used for reading MODBUS registers from the remote station.
- **WRITE:** Write MODBUS output registers to the remote station.
- **WRITE_SINGLE:** Write a single MODBUS discrete or analog output register to the remote station. Note: Only an option when writing a single discrete output or single analog output.

Local Type: I/O type on the local station. See Table2 – I/O Types and Limits.

Local Relative Address: First address of the local I/O used for the I/O transfer. Valid values are 0 through number of registers configured for specified I/O type.

Remote Type: I/O type on the remote station. See **Table 2, 3, 4, 5 – I/O Types and Limits**.

Remote Address: First register address for the remote I/O used for the I/O transfer.
Valid values are 1 – 65536.

Number of Registers: Number of registers requested in the I/O transfer. This must be 1, if the WRITE_SINGLE command is selected. See **Table 2, 3, 4, 5 – I/O Types and Limits**.

Enter Update Interval (ms): Time interval, in milliseconds, for the I/O transfer.

Scan Enable Type: I/O Type used for controlling an I/O transfer using either a discrete input or discrete output register. Valid options are **DI** or **DO** or **Blank** if not used.

Scan Enable Address: The address of the discrete register used to control an I/O transfer. Valid values are 0 through number of registers configured for specified I/O type. **Blank** if not used.

- Click on the "OK" button to populate the I/O transfer Table screen. If more than one I/O transfer for remote station is needed, click and repeat the 'Add" button.

- Click on the "Save" button to save the I/O transfer configuration in the modbus.xml file.

Table 1 – I/O Types and Limits for read commands

I/O TYPE		**Number of regs supported in I/O transfer**
Discrete Input	DI	2000
Discrete Output	DO	2000
Analog Input	AI	125
Analog Output	AO	125
Float Input	FI	62
Float Output	FO	62
Long Input	LI	62
Long Output	LO	62

Table 2 – I/O Types and limits for write commands

I/O TYPE		Number of regs supported in I/O transfer
Discrete Input	DI	1968
Discrete Output	DO	1968
Analog Input	AI	123
Analog Output	AO	123
Float Input	FI	61
Float Output	FO	61
Long Input	LI	61
Long Output	LO	61

Table 3 – Valid Type Combinations for READ I/O Xfers

Local Type	Valid Remote Type
DI	DI | DO
DO	DI | DO
AI	AI | AO
AO	AI | AO
FI	FI | FO
FO	FI | FO
LI	LI | LO
LO	LI | LO

Table 4 – Valid Type Combinations for WRITE I/O Xfers

Local Type	Valid Remote Type
DI	DO
DO	DO
AI	AO
AO	AO
FI	FO

FI	FO
LI	LO
LO	LO

Forwarding:

- Click on the “Forwarding” menu item and the following window will appear:

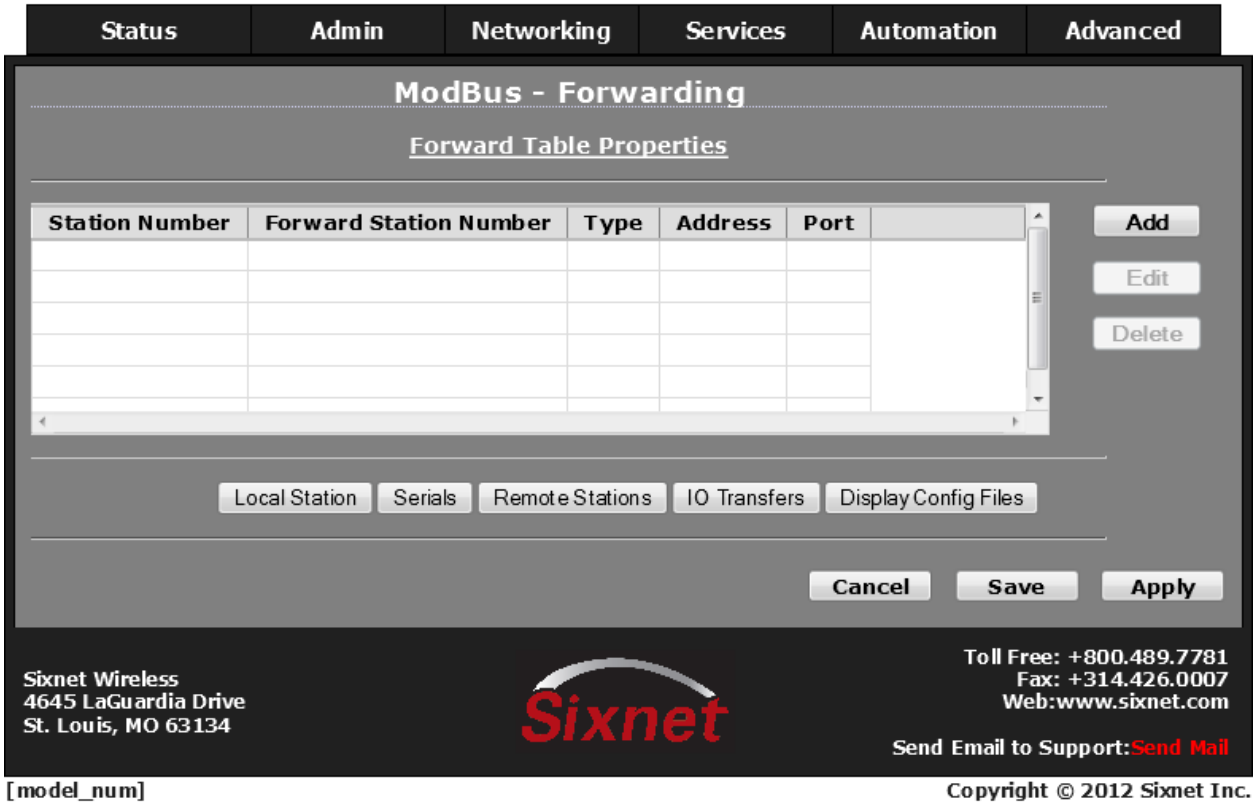

- Click on the “Add” button to configure the Forwarding and the following pop-up window will appear:

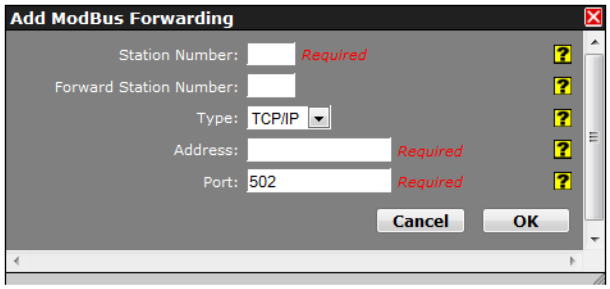

Station Number: Station number to be forwarded. Valid values are 1 – 247.

Forward Station Number: If supplied, replaces the station number in the request with this value. Valid values are 1 -247.

Type: Select the forwarding method. Valid options are **TCP/IP**, **UDP/IP** and **RS-232**.

Address: Valid IP address, if the selected type is TCP/IP or UDP/IP, or the Serial device name if the selected type is RS-232.

Port: IP port number to forward the request to on the remote station. The default port is 502.

- Click on the "OK" button to populate the Forwarding Table screen. If more than one forward is needed, click and repeat the 'Add" button.
- Click on the "Save" button to save the Forwarding configuration in the modbus.xml file.

Display Config File:

- Click on the "Display Config File" menu item and the following window will appear:

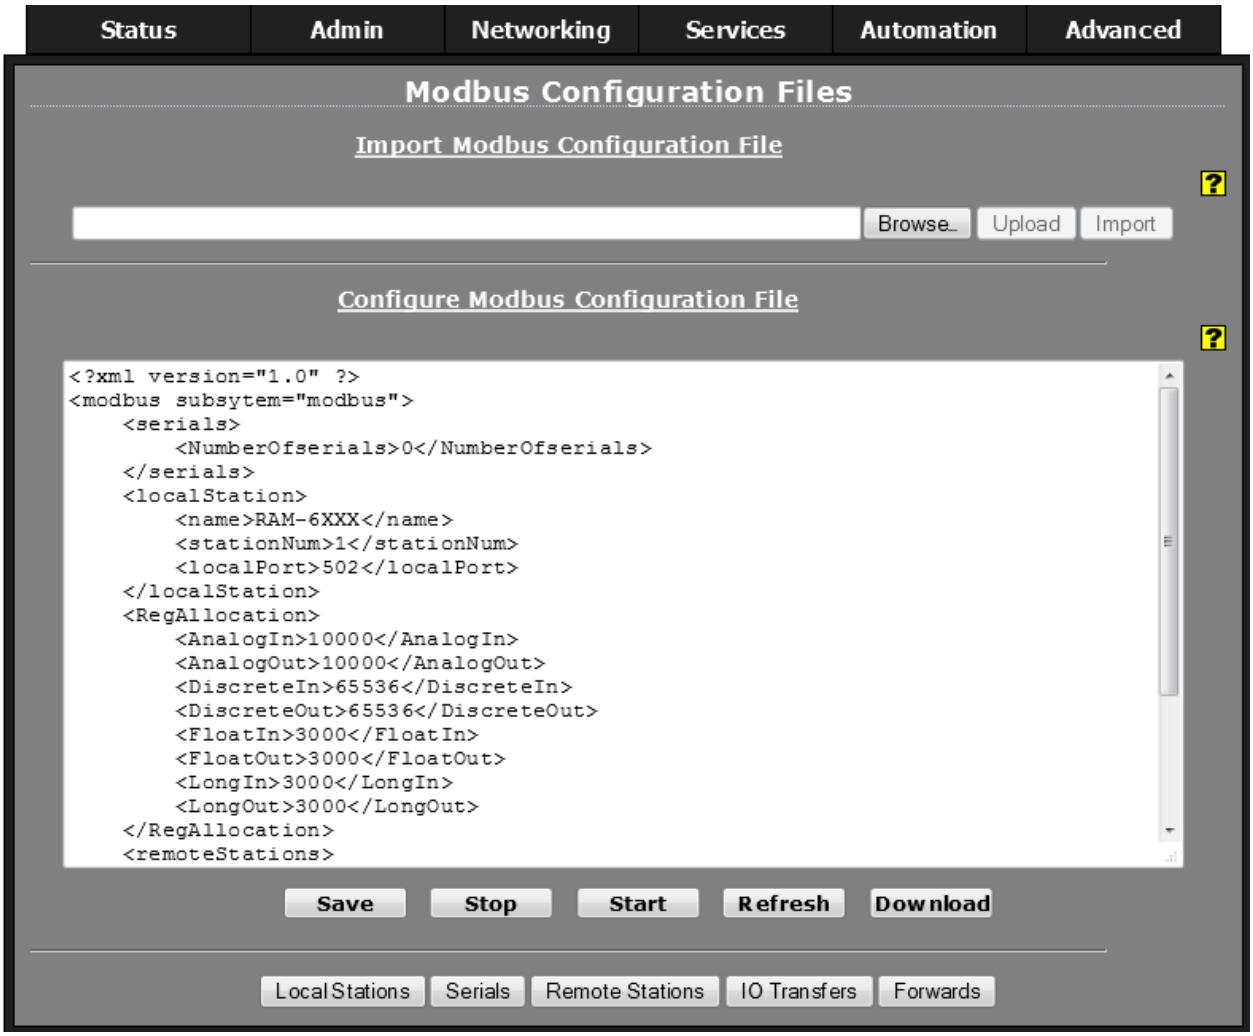

Import Modbus Configuration File: This option will allow you to import a configuration file to replace your existing Modbus configuration file. Simply click on Browse button to select your Modbus.xml configuration file on your PC, then click on the Upload button and once the upload is successful, click on the Import button to replace your existing Modbus.xml configuration file.

Configure Modbus Configuration File: This option will load the Modbus configuration file into the text box for editing. The following controls (buttons) are available:

- Save - Save the contents of the text box in to the Modbus configuration file.
- Stop - Stop the Modbus service, if it is currently running.
- Start - Stop the Modbus service, if it is currently running and start them back up.
- Refresh - Reload the Modbus configuration file into the text box.
- Download - Download the current Modbus configuration file to your PC as "modbus.xml.txt".

3.6.5 DNP3

DNP3 (Distributed Network Protocol) is a set of communications protocols used between components in process automation systems. Its main use is in utilities such as electric and water companies. Usage in other industries is not common. It was developed for communications between various types of data acquisition and control equipment.

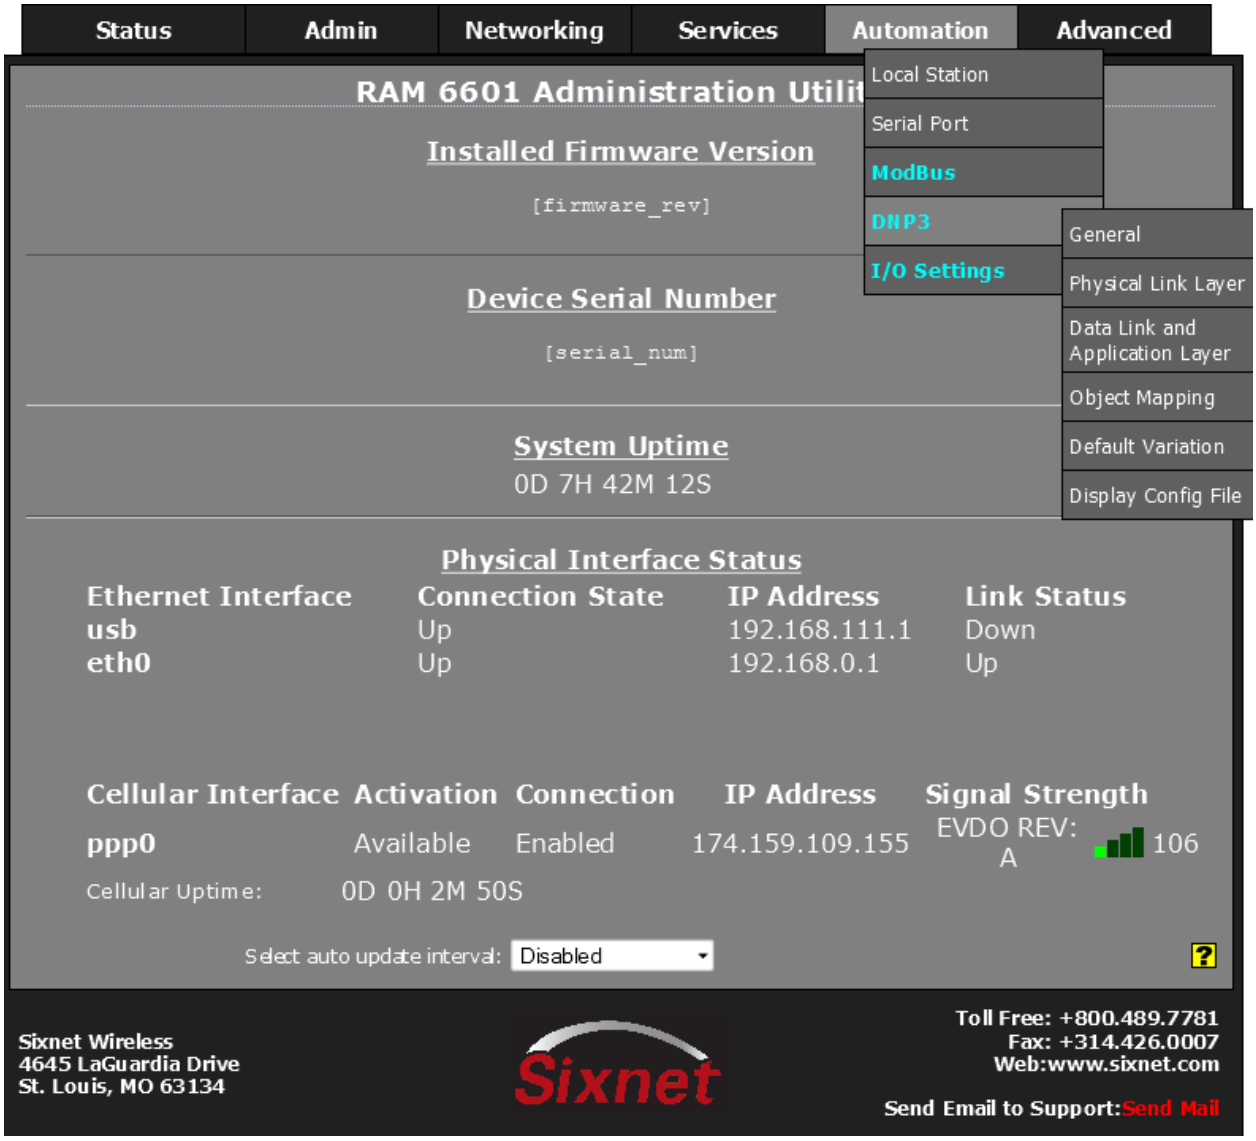

DNP3 General Configuration:

Click on the DNP3 → General menu option and the following screen will appear:

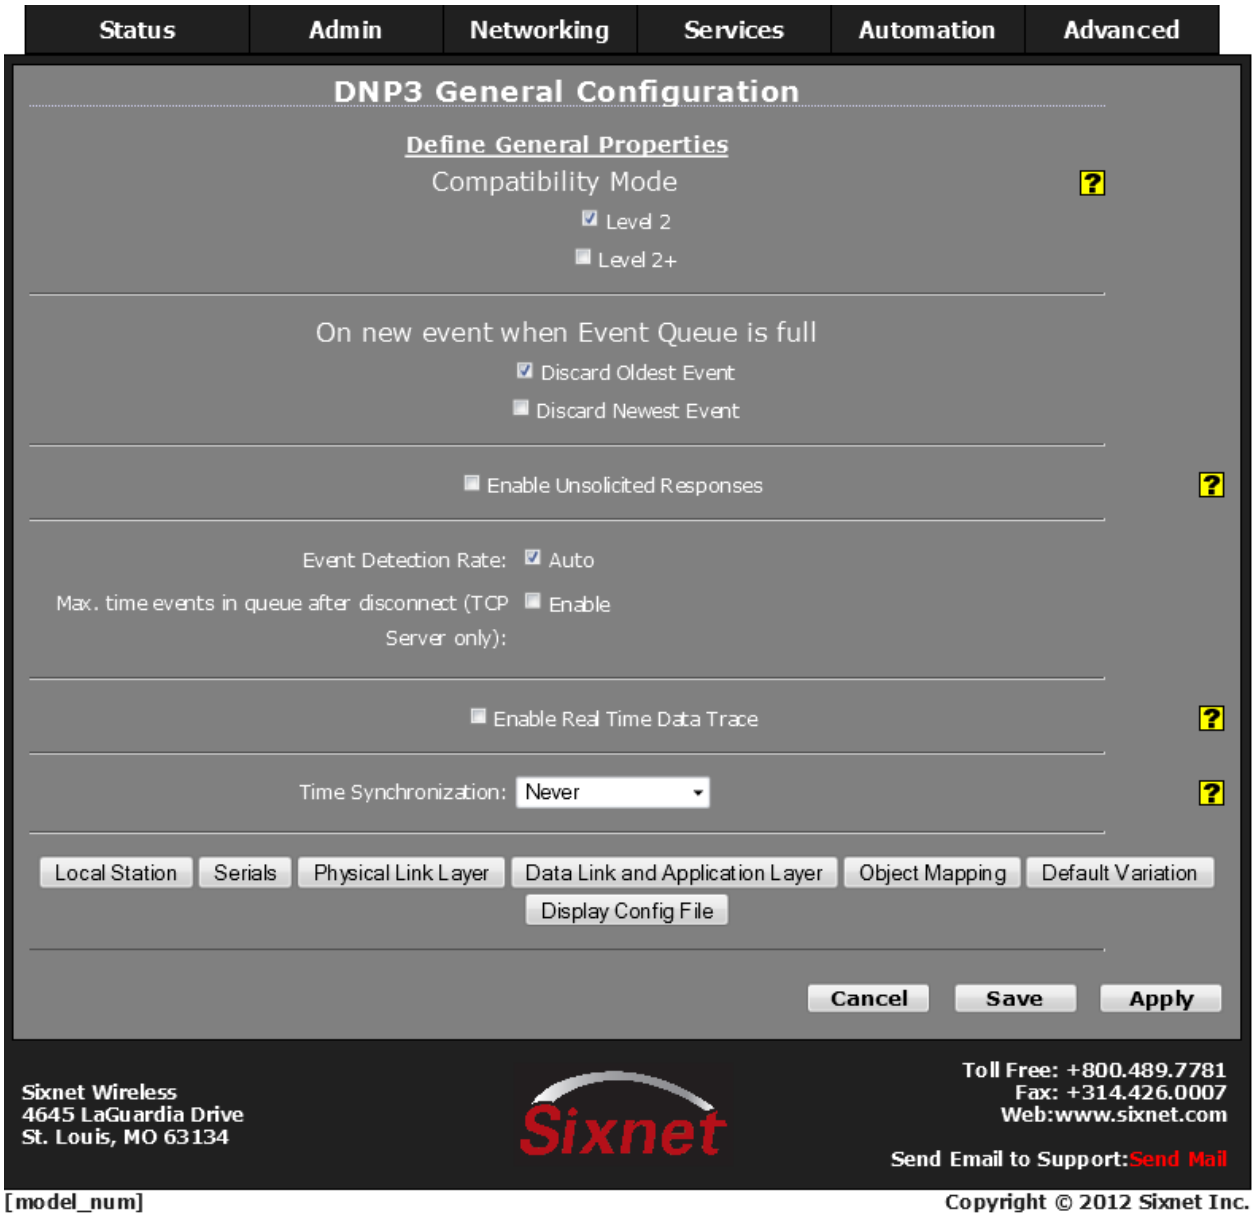

Define General Properties:

Compatibility Mode: The DNP V3.00 Slave driver can work under two compatibility modes: Level 2 or Level 2+.

On new event when Event Queue is full: Select whether to discard Oldest or Newest message when log is full.

Enable Unsolicited Responses: Select if the DNP Slave should send unsolicited messages to the DNP Master.
If this selection is checked, then the user should also configure the following:

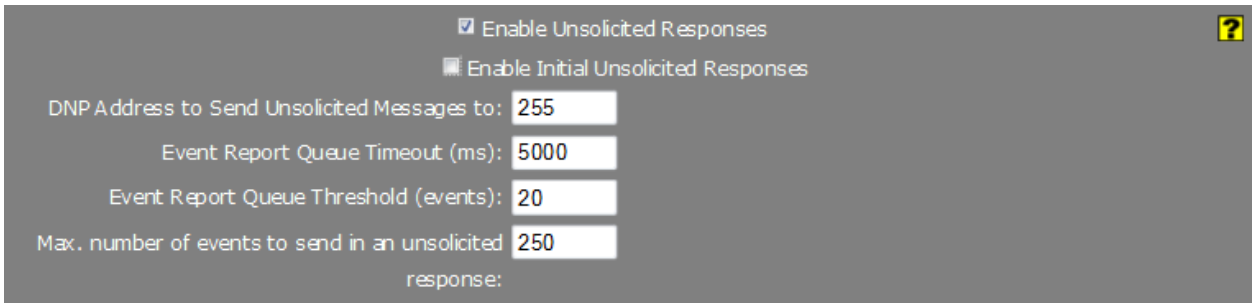
Enable Unsolicited Responses
Enable Initial Unsolicited Responses
DNP Address to Send Unsolicited Messages to: 255
Event Report Queue Timeout (ms): 5000
Event Report Queue Threshold (events): 20
Max. number of events to send in an unsolicited response: 250

DNP Address to Send Unsolicited Messages to: The address of the station to which DNP Slave will send unsolicited messages in the

Event Report Queue Timeout (ms): The amount of time in milliseconds any events will be allowed to remain in the event queue before being reported. Minimum value: 1,000 ms (1 second), maximum value: 3,600,000 ms (1 hour).

Event Report Queue Threshold (events): The minimum number of events in the event queue required to trigger the generation of an unsolicited event report message.

Max. number of events to send in an unsolicited response: The maximum number of events to send in every unsolicited message.

Note: When planning on using unsolicited responses, there must be at least one DNP object configured to generate events on any of the three DNP event classes, or else no events will be generated and thus no unsolicited responses will be generated by the station.

Event Detection Rate: Select box to automatically set the detection rate

Max. time events in queue after disconnect (TCP Server only): Click to enable.

Enable Real Time Data Trace: The DNP V3.00 Slave Driver can be configured to generate real time traces of every Master-Slave DNP V3.00 transaction for diagnosis and debugging purposes. The real time communication data traces can be enabled/disabled at any time from the DNP configuration Add-On and its ASCII output can be redirected either to a text file within the file system for later upload, to a dumb terminal attached to an unassigned serial port of the station, or even to a remote Telnet terminal session over the TCP/IP network by entering the corresponding /dev/ttyp (/dev/ttyp0 to /dev/ttyp3) telnet device.

Time Synchronization: The station can be configured to request Time Synchronization from the DNP V3.00 Master. Requests can be configured to be made at intervals of once per minute, once per hour, once per day or never.

Click Save to save your configuration and move on to the next tab, **Physical Link Layer**.
Navigation buttons across the bottom of the DNP3 screen match the selections made from the drop down tab menu.

Physical Link Layer

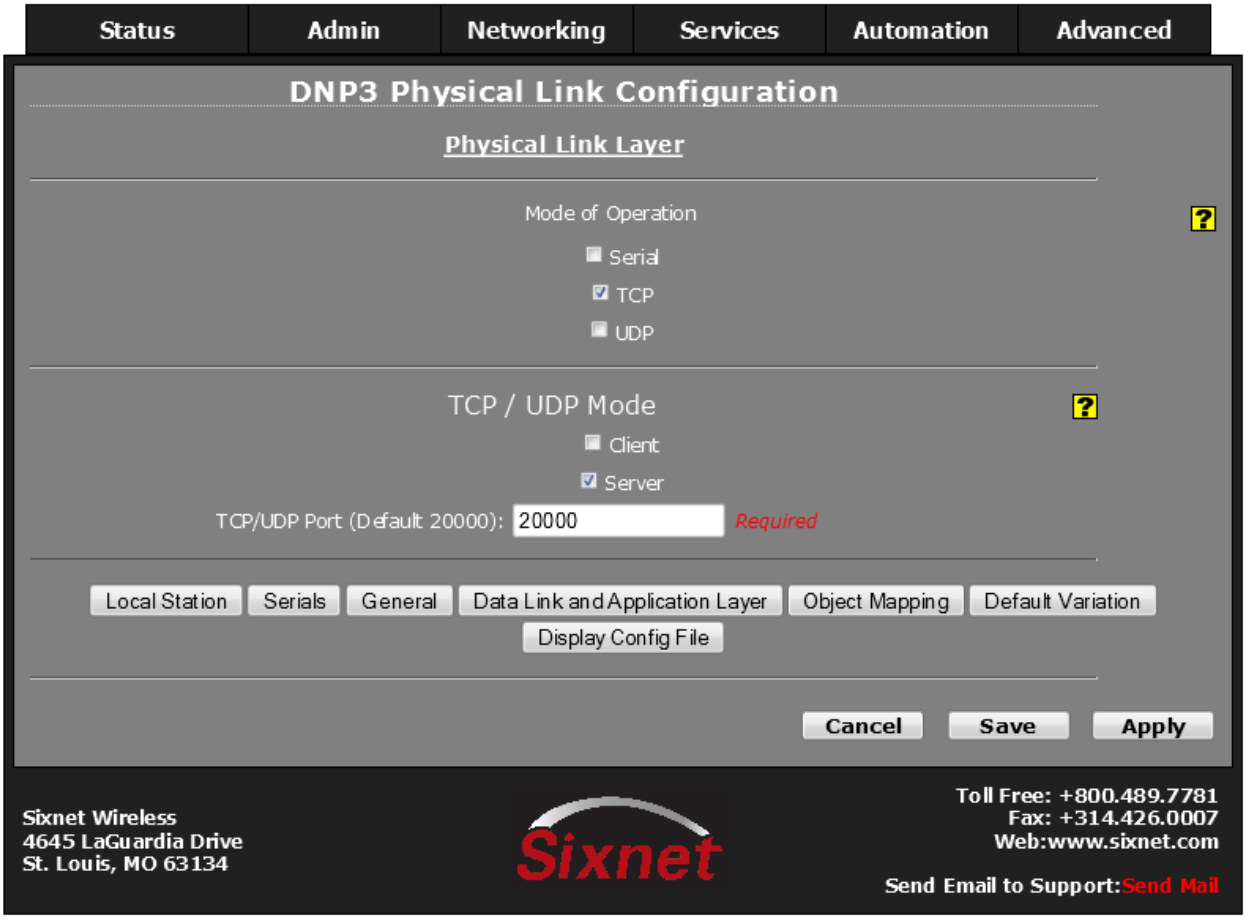

Mode of Operation: The DNP V3.00 Slave Driver implementation supports RS-232 and RS-485 (two and four wires) over serial port communications as well as TCP/IP and UDP/IP over LAN/WAN communications. When the user selects the Serial Mode, the **TCP/UDP** section is disabled. The same happens to the **Serial** section if the Mode of Operation selected is TCP or UDP.

Serial:
This section groups all the parameters needed to establish serial communication. The parameters to be configured are:

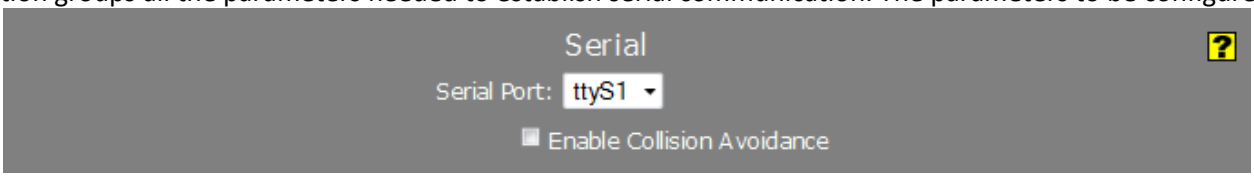

Serial Port: Serial port device name

Enable Collision Avoidance: The DNP V3.00 Slave Driver can be configured to enable or disable collision avoidance. The collision avoidance method implemented is Detection of Transmitted Data with a random pre-transmission back-off time, as recommended by the DNP V3.00 Technical Bulletin 9804-007.

TCP/UDP: This section is enabled when the Mode of Operation selected is TCP or UDP.
The parameters to be configured are:

TCP Mode:

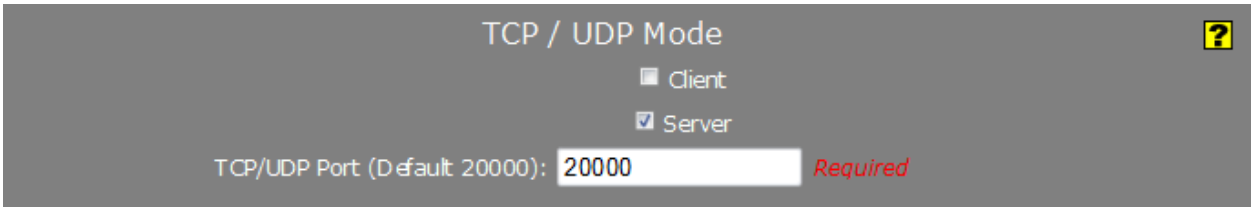

UDP Mode:

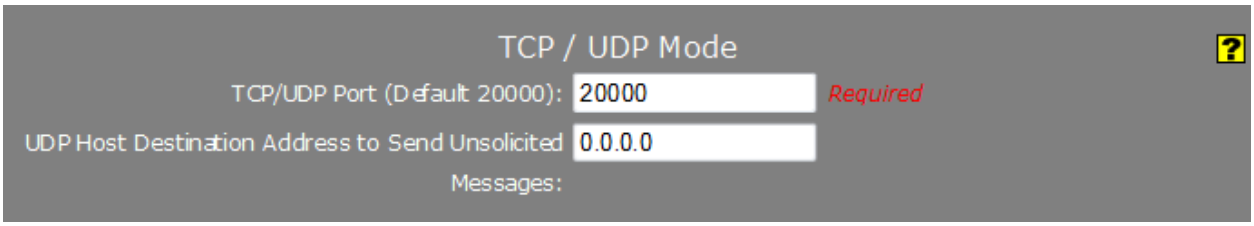

TCP Mode: DNP slave driver can operate as Server or Client Mode. In Client Mode the user has to set TCP Host field, it is used to enter the name of the Host to dial to if the TCP operation mode is selected.

TCP/UDP Port: Port number where the communication will be established. By default this value is 20,000. This parameter is used in both TCP and UDP

UDP Host Destination Address to Send Unsolicited Messages: Host Address to which unsolicited messages will be sent when working in UDP Mode.

Click Save to store your configuration and move on to the next tab, Data Link and Application Layer.

Data Link and Application Layer

Data Link Layer

This Station DNP Address: DNP address for the slave. This value can be set by the user or automatically assigned by the Add-On. If the checkbox **Same As station Number** is selected, then the DNP Address will be equal to the Station Number.

Enter Station DNP Address: Enter the address for this Station if not being automatically assigned.

Min Response Delay (ms): This is the time delay in milliseconds (from 0 to 65535 mSec) before sending the response from the slave.

Enable Self Address: The DNP V3.00 Slave Driver can be configured to send its own DNP Address when a DNP Master asks for it. When this box is checked, if a message is sent with the **Self Address** (65532) in the destination address field, the will respond with its unique individual address. This feature simplifies the commissioning, troubleshooting and

maintenance of devices with an unknown address. If this feature is not enabled, the station will ignore the messages sent to the **Self Address**.

Enable Data Link Confirmation: The DNP V3.00 Slave Driver can be configured to retry unconfirmed data link primary frames. The number of retries the driver sends and the retry timeout are configurable.
This service is disabled unless Data Link Confirmation checkbox is selected.

- The number of **Retries** is configurable between 0 (Data Link Retries disabled) and 255.
- The **Retry Timeout** is configurable between 0 (Data Link Retries disabled) and 5000ms

Note: The Driver's Data Link Layer will attempt to retry (will resend) an unconfirmed data link primary frame when the confirmation has not been received within the configured timeout. If the confirmation fails to arrive after the configured number of retries, the communications link is considered failed and a reset sequence is required before a new primary frame could be sent.

Define Application Layer Properties

Application Layer

Enable Application Link Confirmation: The DNP V3.00 Slave Driver can be configured to retry unconfirmed application link primary frames. The number of retries the driver sends and the retry timeout are configurable. This service is disabled unless Application Link Confirmations checkbox is selected.

- The number of Retries is configurable between 0 (Application Link Retries disabled) and 255.
- The Retry Timeout is configurable between 0 (Application Link Retries disabled) and 5000ms

Use different SEQ numbers for CONFIRM and RESPONSE: Check to enable

Click Save to store your configuration and move on to the next tab, Object Mapping.

DNP3 Object Mapping Configuration

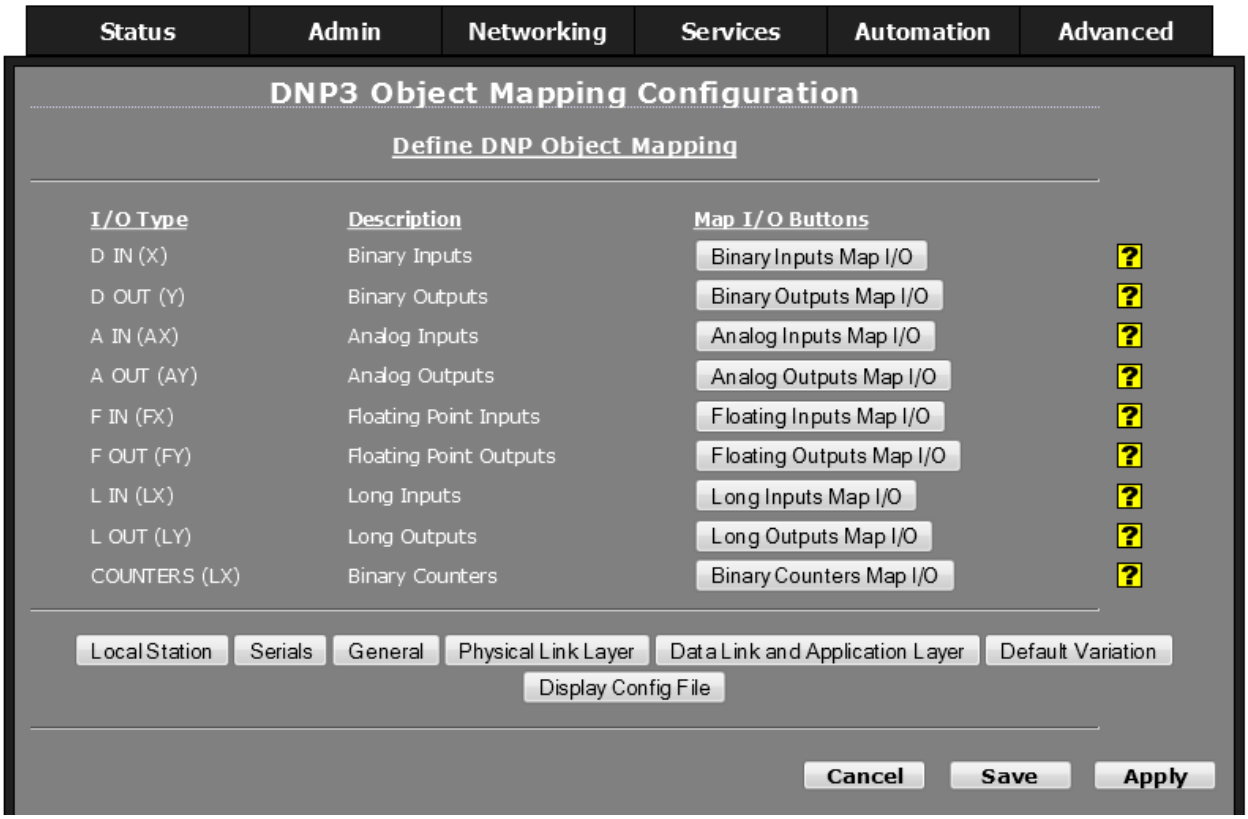

Define DNP Object Mapping

Map I/O Button: When clicking on this button a new window appears. This new window is used to configure and map every DNP point to a specific I/O.

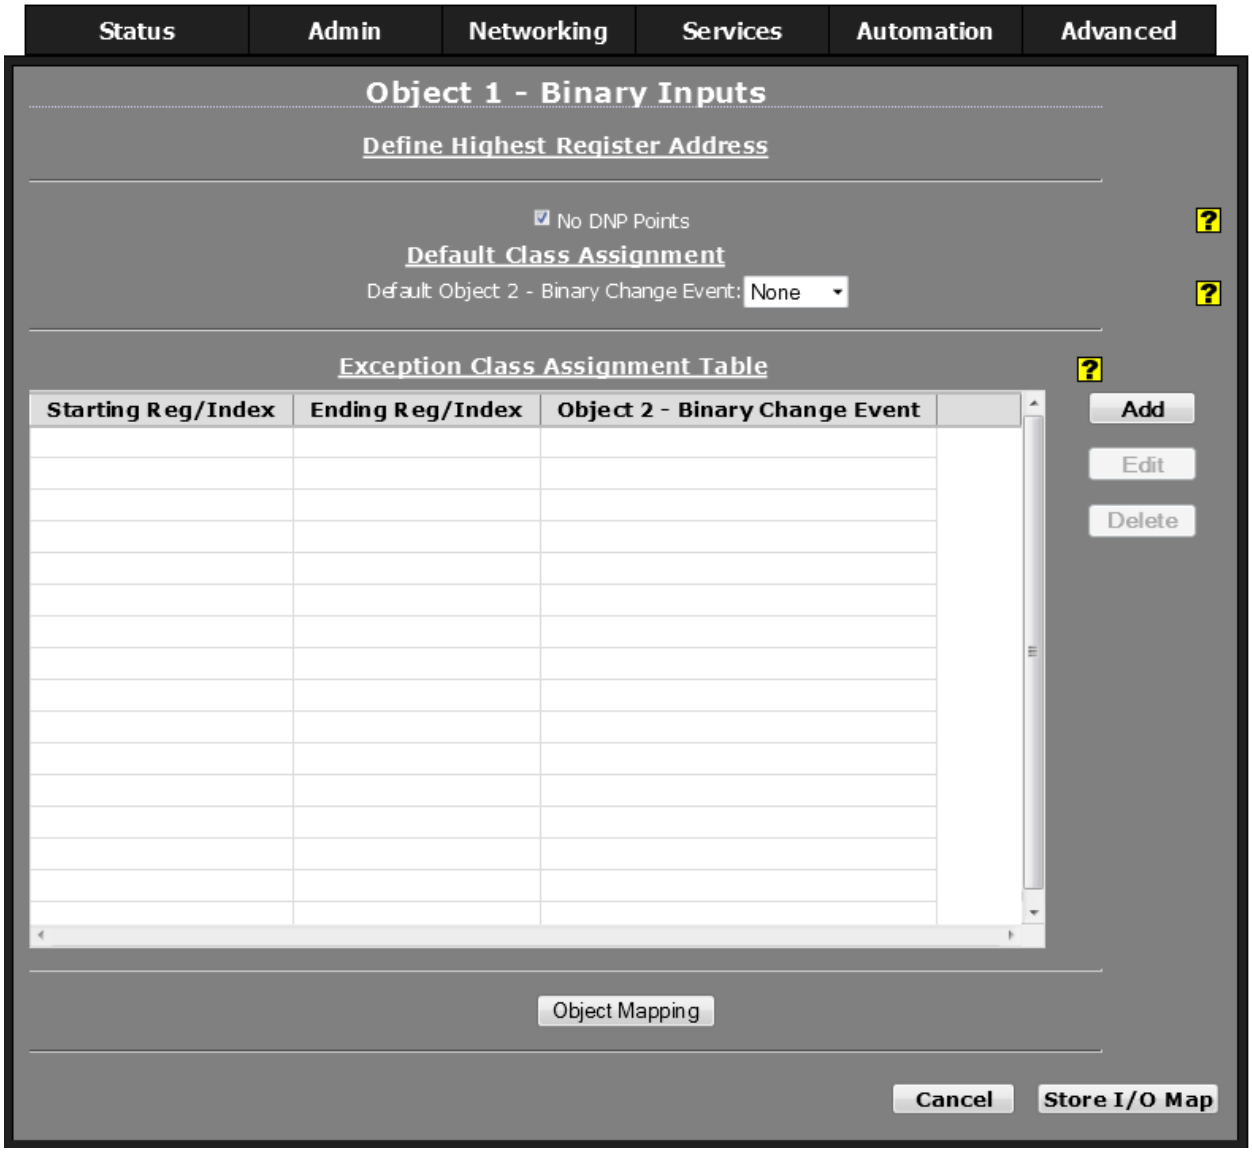

Important Note: Each type of I/O must have its corresponding Object Mapping Window opened at least once, or else the I/O won't be mapped.

Be Sure to click on Store I/O Map on each I/O Mapping to save your configuration **BEFORE** moving to the next object.

No DNP Points: Check this box if no DNP points of this type will be declared. Otherwise, uncheck the box and begin declaring the Class assignments.

Class Assignments: This field is activated on both Levels 2 and 2+. It's used to determine if a DNP point will generate events. In case a DNP point generates events (Object2 Binary Change Events) then it should be associated to a class (Class 1, Class2 or Class 3), otherwise it should be associated to None. By default all DNP Points do not generate events, this feature should be modified by the user.

Exception Class Assignment Table: The **Exception** table provides you with the ability to define Reg/Index ranges that are needed to be configured different than Default Class Assignments.

Example: If the Highest Register Address is set to **10** and Reg/Index **2**, **4**, **6-7** are needed to be set for different Class Assignments than Default, then the final result for all 10 registers would be as follows:
Reg/Index **0-1**, **3**, **5** and **8-10** will be set to **Default** Class Assignments.
Reg/Index **2**, **4**, and **6-7** will be set to **Exception** Class Assignments.

Important Note: The order of table entry ranges **MUST** be entered from lowest Reg/Index to highest Reg/Index, otherwise the GAU will Alert the end user for incorrect range entries. The Starting Reg/Index and Ending Reg/Index of Exception table entries for a single Reg/Index such as Reg/Index **2** and **4** in aove example has to be the same address. The **Maximum** suggested entries for Exception table are **10-15** entries.

Click the Add Button to define an Exclusion range.

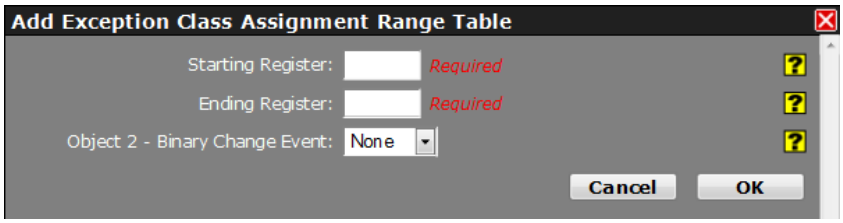

Starting Register: Enter the **Starting Register** for exception class assignments. The valid ranges are (0-8201) and must be less than or equal to **Ending Register**.

Ending Register: Enter the **Ending Register** for exception class assignments. The valid ranges are (0-8201) and must be greater than or equal to **Starting Register**.

Object 2 - Binary Change Event: Select the Class Assignment for your excluded range.

NOTE: Exclusions are not used on output object maps.

Click OK to enter your exclusion into the table.

Object 30 - Analog Inputs

Click on Analog Inputs Map IO to setup the analog inputs.

DeadBand: Values outside this deadband generate events.

Note: The deadband parameter sets how event data is generated by your module as a DNP slave device. For Example: The Analog Input deadband being set to a value of 1000 will report all of the points as being class 3 data (as set by the "Analog Input class" parameter being set to 3) and it will generate an event every time an analog input changes by a value of 1000 or more. This Analog Input deadband can be set to any value between 0 to 32767 (generate an event when the value changes by 32767).

Once all of your I/O objects have been mapped move on to the next tab, **Default Variation.**

DNP3 Default Variation Configuration

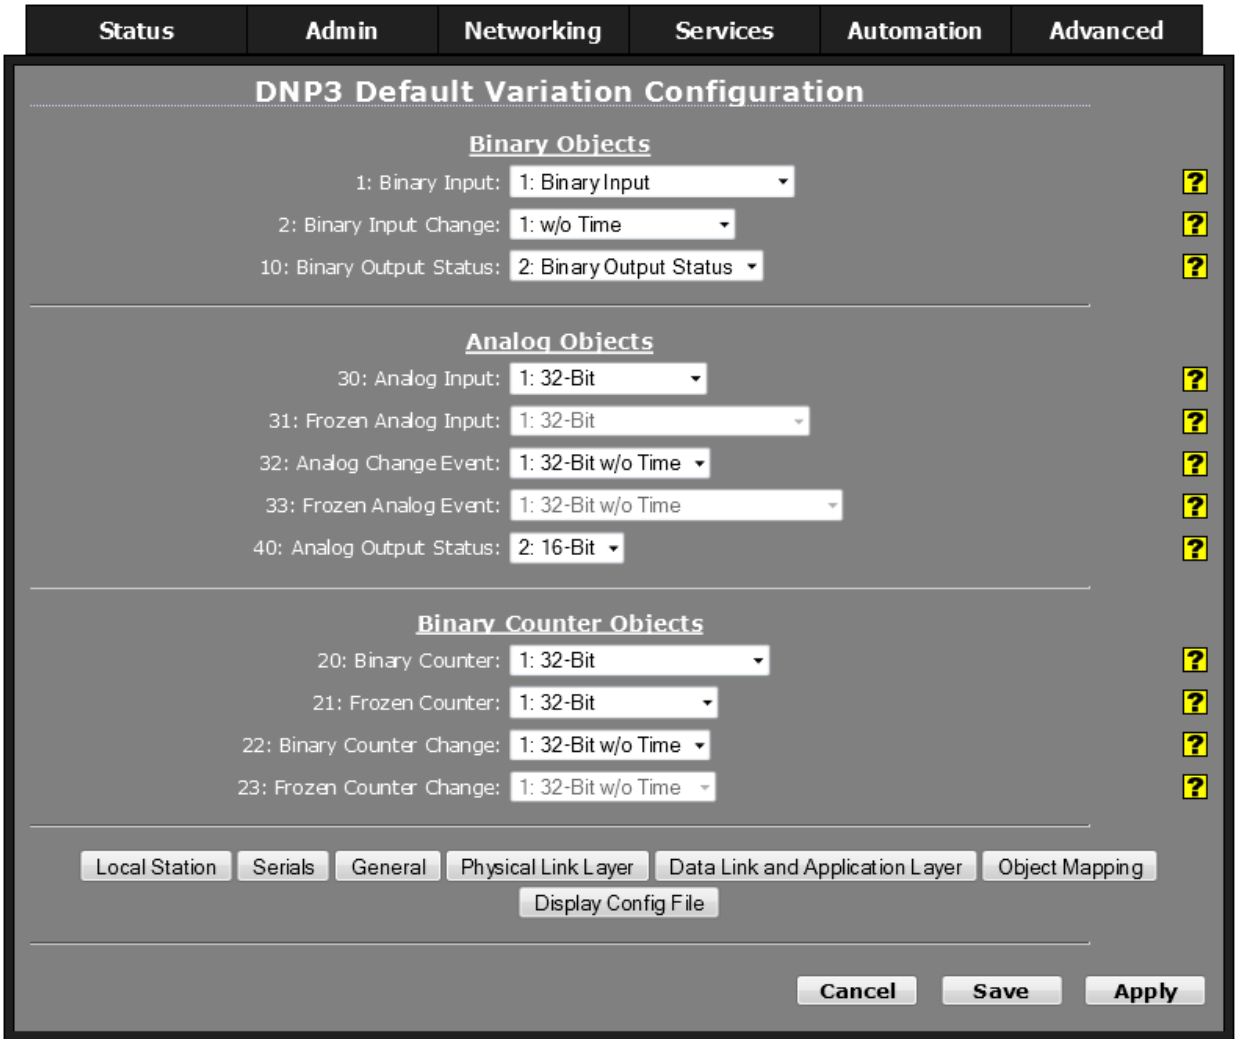

Binary Objects

1: Binary Input: Combo Box that shows the different choices for Object 1 (Binary Input) that the user can select as a default variation.

2: Binary Input Change: Combo Box that shows the different choices for Object 2 (Binary Input Change Events) that the user can select as a default variation.

10: Binary Output Status: Combo Box that shows the different choices for Object 10 (Binary Output) that the user can select as a default variation.

Analog Objects

30: Analog Input: Combo Box that shows the different choices for Object 30 (Analog Input) that the user can select as a default variation.

31: Frozen Analog Input: Combo Box that shows the different choices for Object 31 (Frozen Analog Input) that the user can select as a default variation (only on Level 2+).

32: Analog Change Event: Combo Box that shows the different choices for Object 32 (Analog Input Change Events) that the user can select as a default variation.

33: Frozen Analog Event: Combo Box that shows the different choices for Object 33 (Frozen Analog Input Change Event) that the user can select as a default variation (only on Level 2+).

40: Analog Output Status: Combo Box that shows the different choices for Object 40 (Analog Output) that the user can select as a default variation.

Binary Counter Objects

20: Binary Counter: Combo Box that shows the different choices for Object 20 (Binary Counters) that the user can select as a default variation.

21: Frozen Counter: Combo Box that shows the different choices for Object 21 (Frozen Binary Counters) that the user can select as a default variation.

22: Binary Counter Change: Combo Box that shows the different choices for Object 22 (Binary Counters Change Events) that the user can select as a default variation.

23: Frozen Counter Change: Combo Box that shows the different choices for Object 23 (Frozen Binary Counters Change Event) that the user can select as a default variation (only on Level 2+).

Click on Save to preserve your configuration before moving on to any other pages.

Display Config File: Click on the Display Config File button and you will see the following screen:

On this screen you are able to import, export and manually edit the DNP3 configuration file.

Import DNP3 Configuration File: This option will allow you to import a configuration file to replace your existing DNP3 configuration file. Simply click on **Browse** button to select your DNP3 configuration file on your PC, then click on **Upload** button and once the upload is successful, click on **Import** button to replace your existing DNP3 configuration file.

Download Appropriate File to your PC: You may use this feature to download the DNP3 configuration file (sxdnpdrv.ini) or DNP3 debug file (dnp3debug.log) to your local drive for review analysis.

Configure DNP3 Configuration File: This option will load the DNP3 configuration file into the text box for manual editing.

The following controls (buttons) are available:

Save -	Save the contents of the text box in to the DNP3 configuration file.
Stop -	Stop the DNP3 services, if it is currently running.
Start -	Stop the DNP3 services, if it is currently running and start them back up.
Refresh -	Reload the DNP3 configuration file into the text box.

3.6.6 I/O Settings

Test I/O: Test I/O is used to verify the functionality of I/O states in gateways, RTUs and I/O modules.

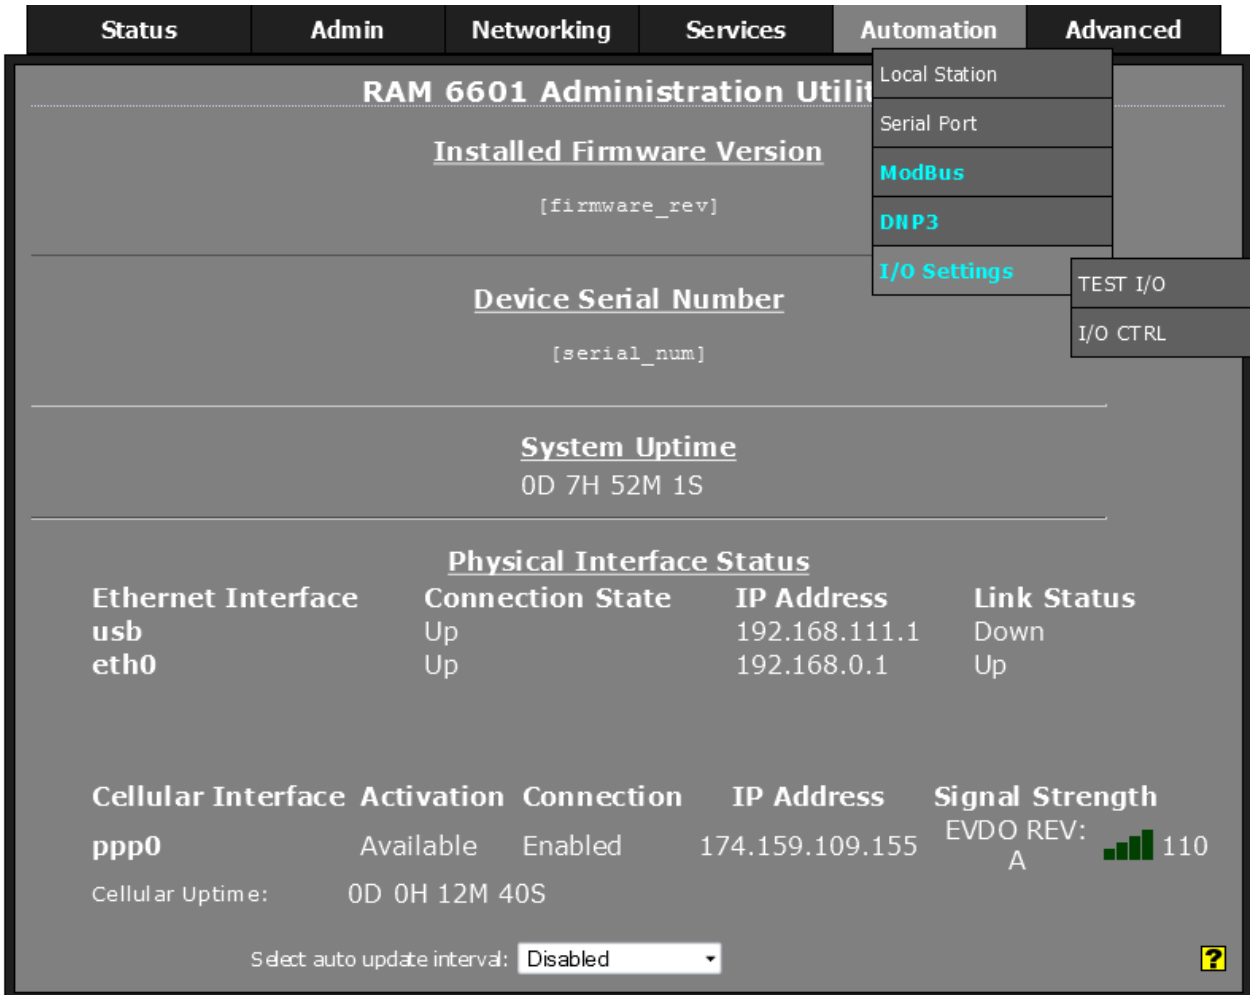

From the navigationmenu select Automation → I/O Settings → Test I/O and you will see this screen:

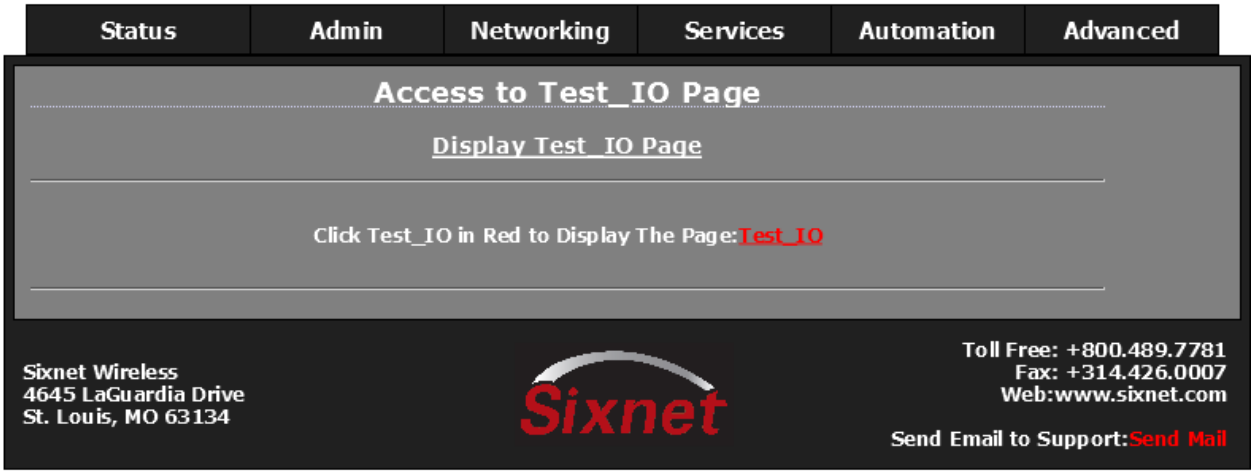

Clicking on the Test I/O Link in RED will take you to the Test I/O interface below:

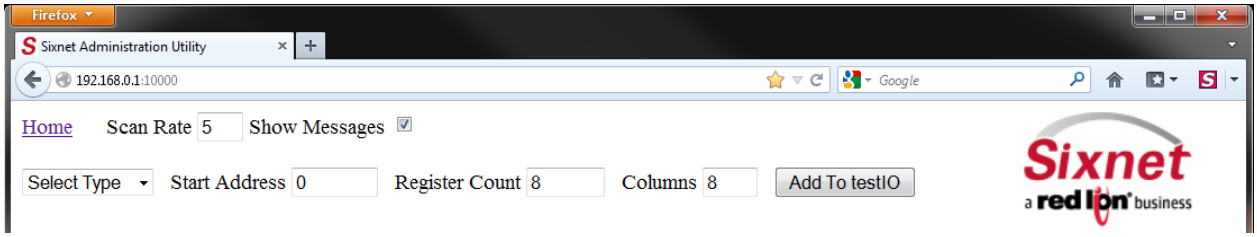

The Test I/O interface has been kept simple to make managing the test I/O process easier and keep the screen less cluttered and easier to look at and quickly locate your test values.

Home: This link will take you back to the main GAU Menu.
Scan Rate: This is the time in which the screen will automatically refresh values from the internal I/ODB.
Show messages: If checked the user will see messages displayed as I/O operations are taking place in the background.

From the Drop Down list select the type of I/O you would like to test.

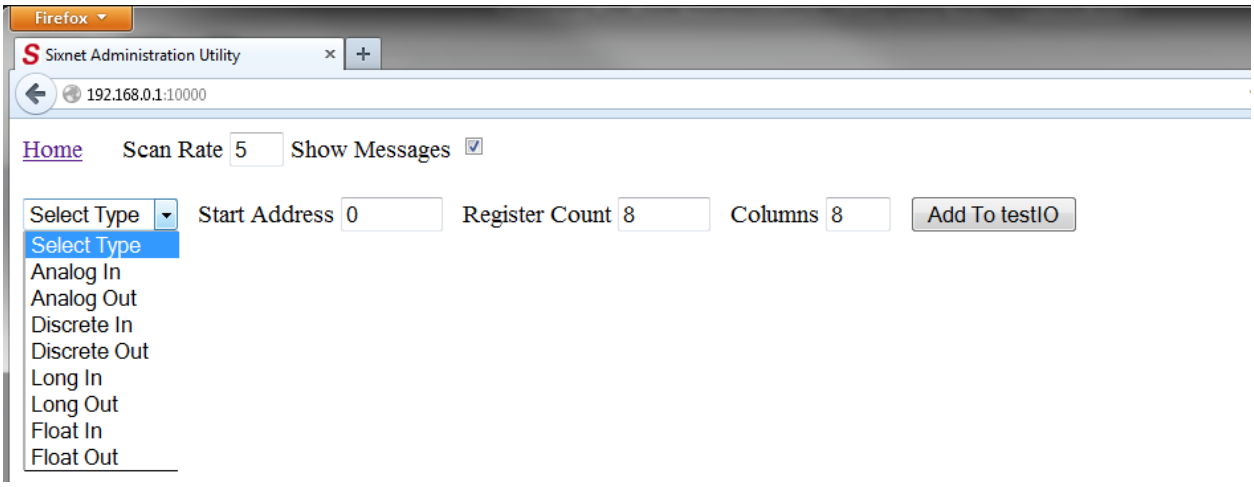

Valid I/O types are:

Analog In	Discrete In	Long In	Float In
Analog Out	Discrete Out	Long Out	Float Out

Once you select the type of I/O you will be testing enter your Start Address, Register Count and Columns then click the "Add to Test I/O" button.
You will see the following screen update:

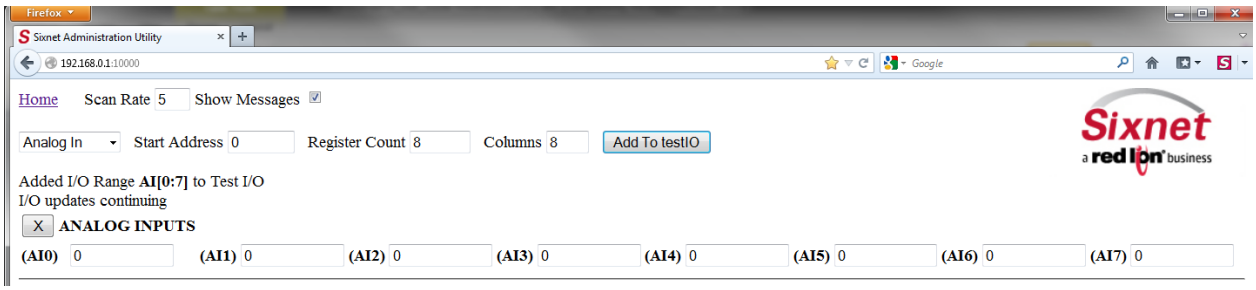

The messages log shows that we have "Added I/O Range AI[0:7] to Test I/O" and now we see each register that can be edited and monitored for the Analog inputs.

You may enter values here and observe your IODB data from another device / location to see those values get updated, or you may initiate a change from another device/input and observe the changes presented here on your Test I/O interface.

Click on the "I/O CTRL" menu item and the following window will appear:

From the drop down menu select Yes to enable this interface and the following window will appear:

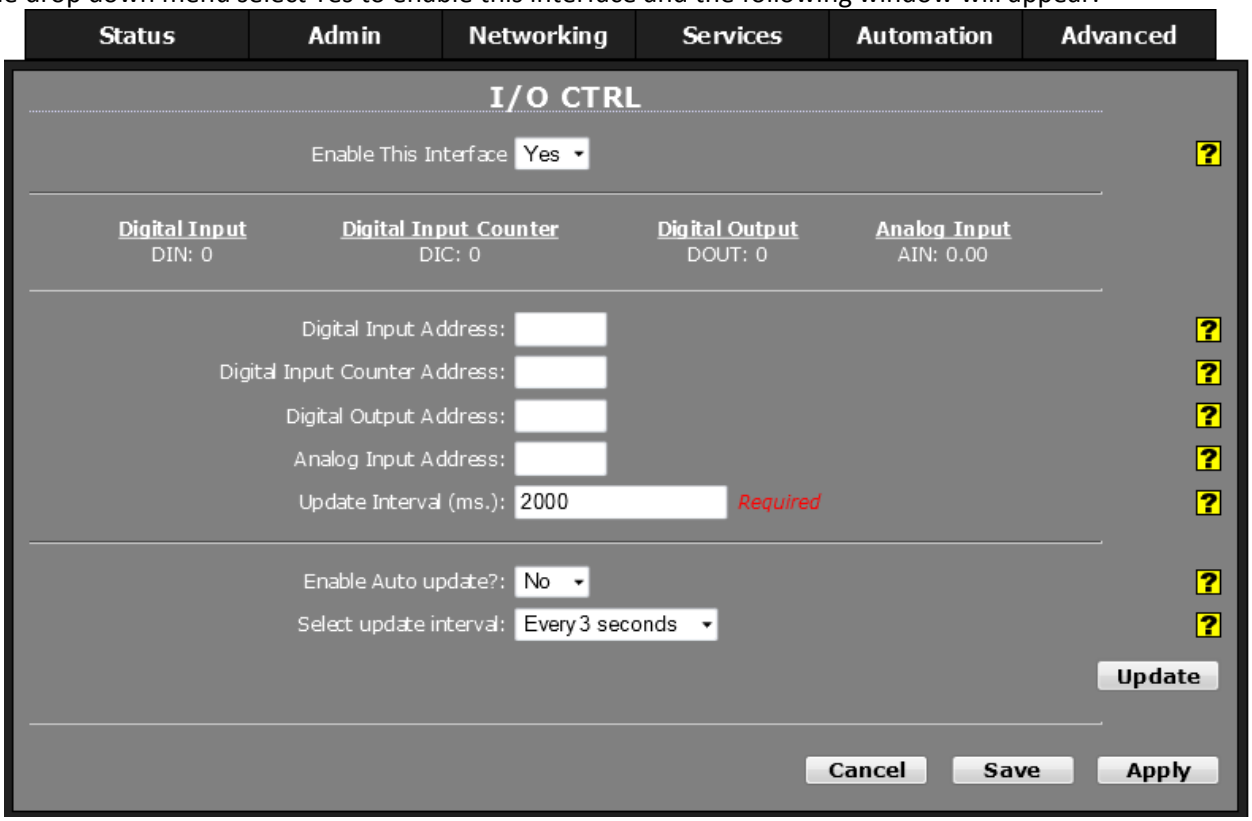

Digital Input Address: Enter the address of internal IODB database for Digital Input I/O control.
Valid Values: 1 through 65535 as defined for specified I/O type.

Digital Input Counter: Counts the transitions (number of changes in digital state) on Digital Input.

Digital Output Address: Enter the address of internal IODB database for Digital Output I/O control.
Valid Values: 1 through 65535 as defined for specified I/O type.

Analog Input Address: Enter the address of internal IODB database for Analog Input I/O control.
Valid Values: 1 through value of defined registers configured for specified I/O type.
The address ranges are displayed on I/O Transfer screen under 'Display Of Modbus Default Slave Addresses' based on configured local register allocation for specified I/O type.

Update Interval (ms.): Enter update interval, in milliseconds, for updating the internal IODB database with value of supported IO/CTRL.
Recommended Value: 500ms or higher.

Enable Auto update?: Select Yes to enable automatic updating of the I/O ports value.
Manual updating is disabled while auto update is in effect.

Recommended Setting: Yes

Select update interval: Select the update interval to be used when auto update is enabled from one of the choices in the drop-down list provided.

Choices (in seconds) include: 3 5 10 15

*Be advised that when connected via a Cellular interface, the data collected will count towards your total data plan usage.

3.7 Advanced Tab

The Advanced Tab is where you can configure the magic of the Sixnet router, which includes IP Fallback, IP Transparency, Out-of-Band Management, VRRP, Expert Mode and Gwlnx (Protocol Translation).

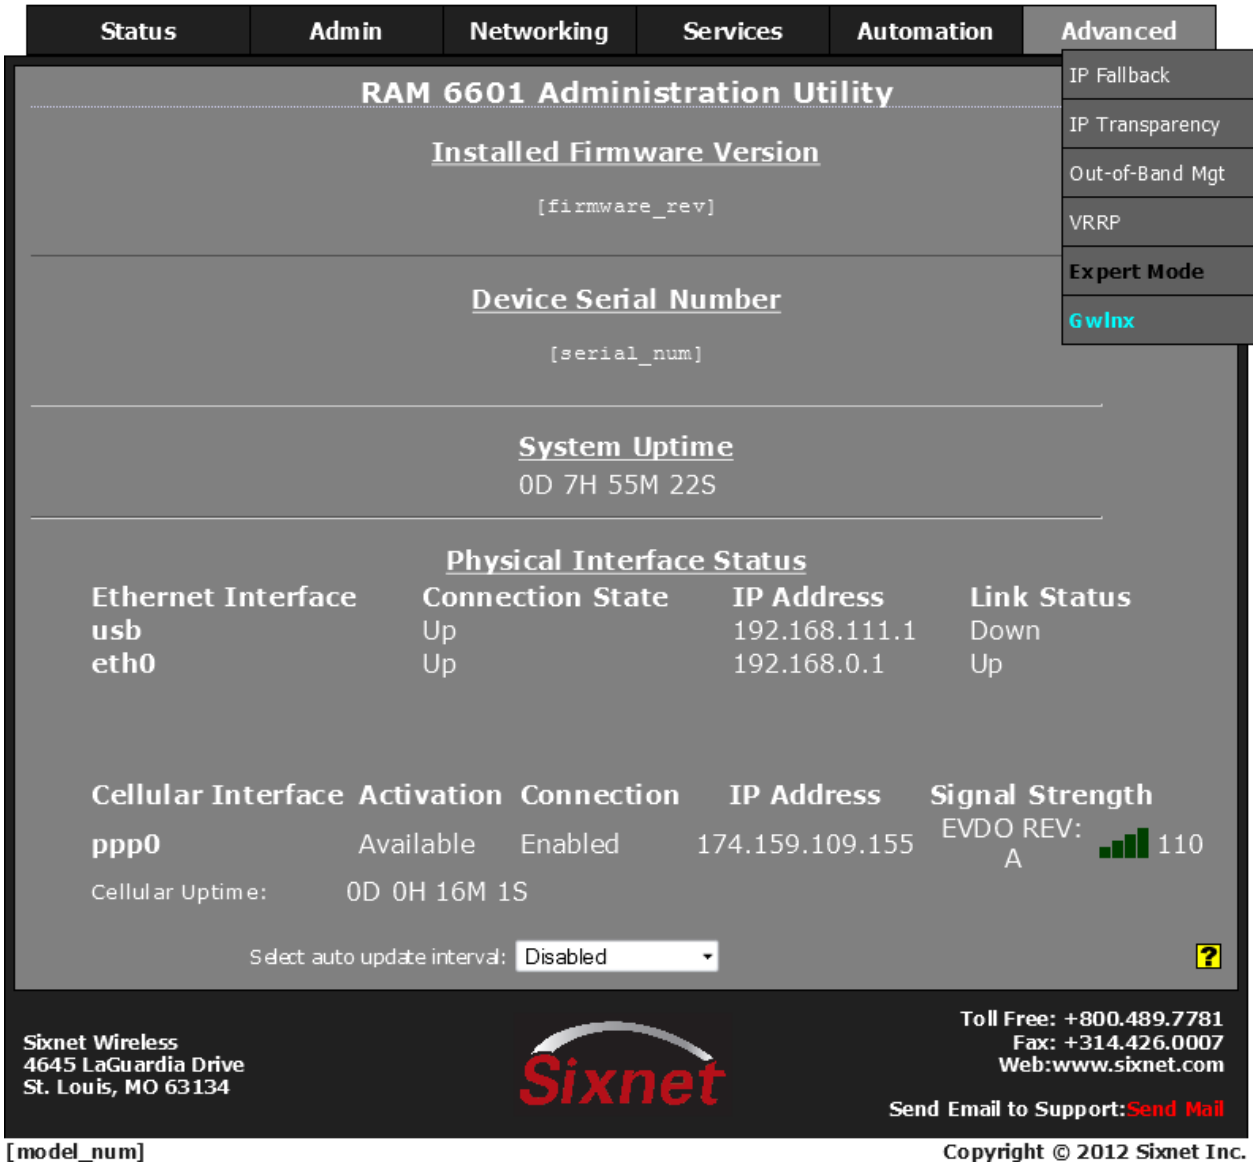

3.7.1 IP Fallback

IP Fallback is supported in Sixnet Routers in the IndustrialPro and EnterprisePro series. To configure IP Fallback, select the option from the **Advanced** menu

The “IP Fallback” menu item allows you to configure the Sixnet router to failover between two interfaces, ex. Primary route on DSL/Cable on eth0, and secondary on Cellular if the primary loses Internet connection.

- Click on the "IP Fallback" menu item and the following window will appear:

- Click on the pull-down at the "Enable IP Fallback?" field
- Click on "Yes" and the display will expand to reveal the IP Fallback configuration fields:

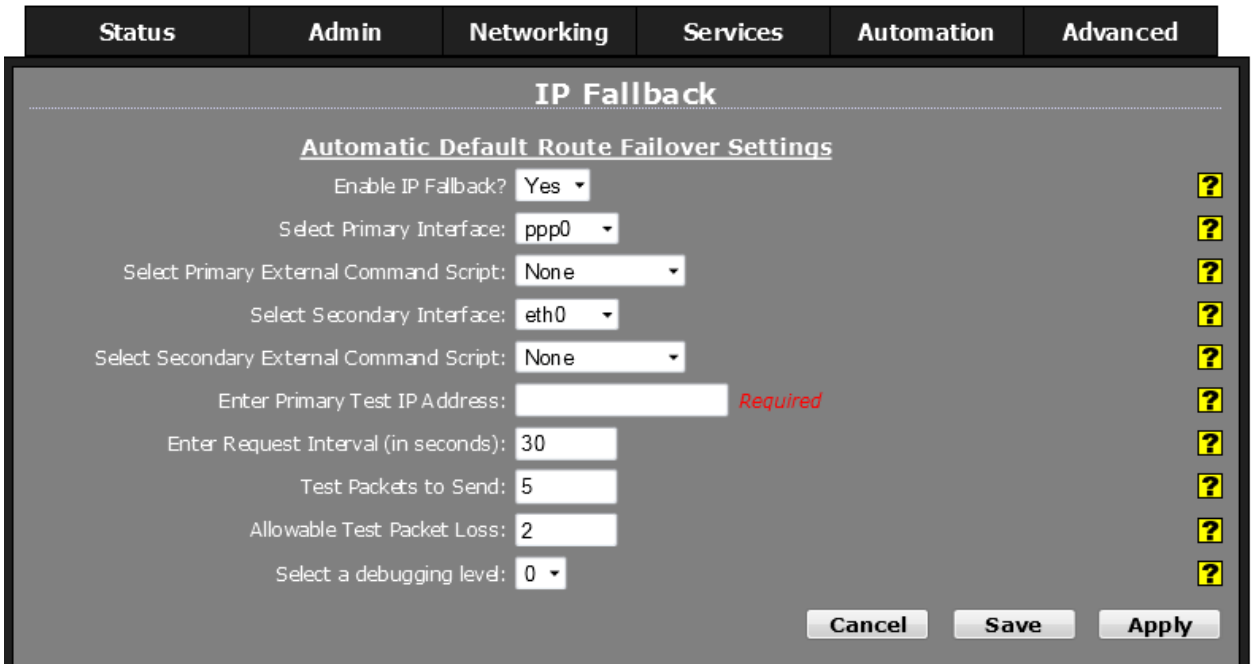

Select Primary Interface: Specify your desired primary interface for IP Fallback behavior.

Select Primary External Command Script: Choose the name of the command script to be executed when the associated interface becomes active. For example, if an ipsec_restart is an option, then when selected, will be run whenever the fallback logic selects and activates this interface. Recommended setting is "None" for standard operation with no special behaviors. "ipsec_restart" is useful when using an IPSEC VPN tunnel.

Select Secondary Interface: Select the secondary interface to be used for IP Fallback. Selecting "vrrp" will coordinate with the VRRP process, so that when the primary interface is determined to be unavailable, VRRP will stop broadcasting availability.

Select Secondary External Command Script: Choose the name of the command script to be executed when the associated interface becomes active. For example, if an "ipsec_restart" is an option, then when selected, will be run whenever the fallback logic selects and activates this interface. Recommended setting is "None" for standard operation with no special behaviors. "ipsec_restart" is useful when using an IPSEC VPN tunnel.

Enter Primary Test IP Address: Specify the IP address of a host with which the IP Fallback service will communicate to test connectivity. Value must be a pingable address, and not a domain name. The best choice would be an address that represents end-to-end connectivity.

Enter Request Interval (in seconds): Specify the time, in seconds, to wait between connectivity tests. The minimum is 10; maximum is 600. **This value should be 30 or higher for PPP connections.**

Test Packets to Send: Specify the number of 0 byte ping packets to send out to test connectivity. The minimum is 2; maximum is 30. Recommended value is 5 – 10.

Allowable Test Packet Loss: Specify the number of lost packets that are acceptable before the IP Fallback service will consider the link unavailable, and switch to its secondary. The value must be less than the number of test packets set via ***Test Packets to Send***.

Select a debugging level: Specify a debug level for logging purposes. This is recommended only when existing configurations do not function as expected, and when directed to change by Technical Support personnel.

- Click on the "Save" button and the following pop-up window will appear:

- Click on the "OK" button to acknowledge the content
- Click on the "Apply" button and the following pop-up window will appear:

- Click on the “OK” button to acknowledge the content

3.7.2 IP Transparency

IP Transparency is supported on Sixnet Routers in the IndustrialPro and EnterprisePro series. To configure IP Transparency, select the option from the **Advanced** menu.

The “IP Transparency” menu item allows you to configure the transparent bridging capability of the SIXNET router.

IP Transparency is a special use capability. IP Transparency will take all inbound traffic to the SIXNET router and pass it transparently through to the interface specified.

This is useful when it is desired to pass traffic to a legacy firewall, or VPN concentrator located behind the SIXNET router and not to use the firewall or VPN capabilities of the SIXNET router itself.

- Click on the “IP Transparency” menu item and the following window will appear:

- Click on the pull-down at the “Enable IP Transparency?” field
- Click on “Yes” and a pop-up window will appear:

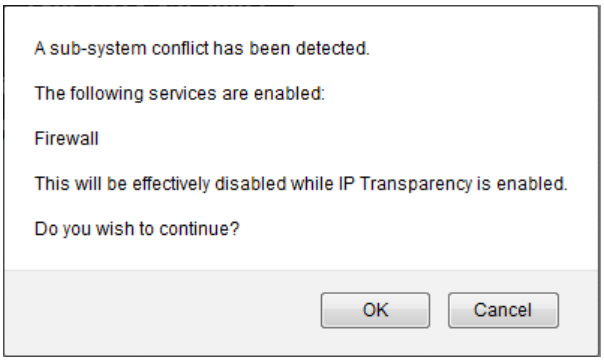
A sub-system conflict has been detected.
The following services are enabled:
Firewall
This will be effectively disabled while IP Transparency is enabled.
Do you wish to continue?
OK
Cancel

- Click on the “OK” button to acknowledge the content

The expanded display will appear, revealing the IP Transparency configuration field:

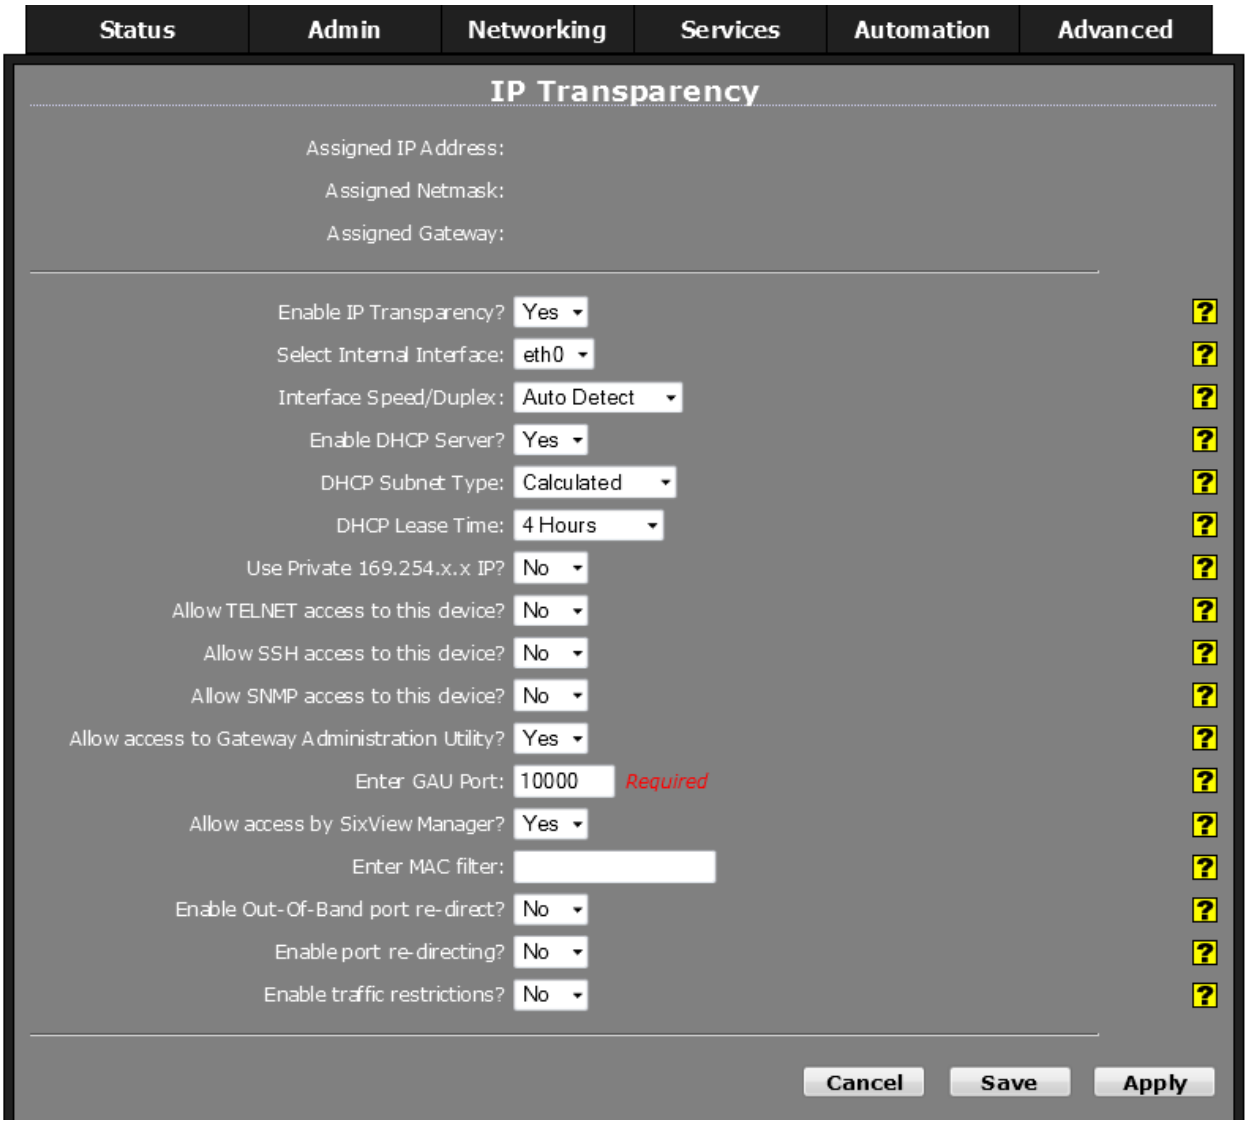

Select Internal Interface: Select the interface to be designated the "internal" interface by making the appropriate choice from the provided list. The wireless IP will be issued out of this interface.

Interface Speed/Duplex: Select the Speed and Duplex to be used for the physical interface.
Recommended setting is “Auto-Detect”.

The following options are available:

- Auto Detect - Use the 'best negotiated' speed and duplex (default)
- 10Mbps/Half - Force the interface to 10 Mbps and half-duplex
- 100Mbps/Hall - Force the interface to 100 Mbps and half-duplex

- 100Mbps/Full - Force the interface to 100 Mbps and full-duplex

Note: An incorrect 'forced' setting will result in communication failure for this interface.

Enable DHCP Server? Select "Yes" to allow the DHCP Server(s) to be enabled while IP Transparency is in effect.

DHCP Subnet Type: A calculated subnet will be based on the actual IP address received from the wireless network. This option is more compatible with a wide variety of routers, but will mask out nearby IP addresses. This may make other IP's within the host network unreachable. Point-to-Point will use a /32 subnet, but is not compatible with some routers. Recommended setting is "Calculated".

DHCP Lease Time: Choose the time for DHCP Leases when issuing the Transparent IP.
Recommended setting is "4 Hours".

Use Private 169.254.x.x IP? Select whether the internal IP Transparency Interface will host a "dummy" gateway IP simular to the IP Transparency IP, or if it will use a calculated 169.254.x.x IP Address.

Note: Some Cisco routers might not arp properly when this option is turned on
Pros: Option turned off may allow some Cisco routers to ARP better.
Cons: With the option turned off the unit will black hole some IPs, and they will not be reachablefrom the device behind. Example: IP from ISP is 1.2.3.3. Calculated Mask is 255.255.255.252. Device uses dummy IP 1.2.3.2/30. Now IPs 1.2.3.0, 1.2.3.1 and 1.2.3.2 become unroutable beyond the device.
Default Setting No

Allow TELNET access to this device? Select "Yes" to allow Telnet access to this device. Incoming connections on the specified port will be directed internally to port 23, instead of to the device behind the specified Internal Interface.

NOTE: For this option to function properly, the Telnet Server must be enabled on port 23 via the Services tab.

Selecting "Yes": Will expand the display to include the port field for this parameter.

Enter TELNET Port: Enter the IP Port number to be used for Telnet access when Telnet access has been enabled. The port chosen will be redirected locally. Connections on this port number will not reach the device behind the specified Internal Interface. Recommended setting is "2023 - All Telnet traffic will be redirected locally to port 23 automatically. This behavior is built-in and not configurable. Incoming connections on port 23 will reach the device behind the specified Internal Interface".

NOTE: The Telnet Server settings need not be altered to support the specification of a port other than 23 here.

Allow SSH access to this device? Select "Yes" to allow SSH access to this device. Incoming connections on the specified port will be directed internally to port 22, instead of to the device behind the specified Internal Interface.

NOTE: For this option to function properly, the SSH Server must be enabled on port 22 via the Services tab.

Selecting "Yes": Will expand the display to include the port field for this parameter.

Enter SSH Port: Enter the IP Port number to be used for SSH access when SSH access has been enabled. The port chosen will be redirected locally. Connections on this port number will not reach the device behind the specified Internal Interface. Recommended setting is "2022 - All SSH traffic will be redirected locally to port 22 automatically. This behavior is built-in and not configurable. Incoming connections on port 22 will reach the device behind the specified Internal Interface".

NOTE: The SSH Server settings need not be altered to support the specification of a port other than 22 here.

Allow SNMP access to this device? Select Yes to allow SNMP access to this device. Incoming connections on UDP port 161 will be directed internally to port 161, instead of to the device behind the specified Internal Interface.
NOTE: For this option to function properly, the SNMP Agent must be enabled via the Services tab.

Allow access to Gateway Administration Utility? Select "Yes" to allow access (for incoming TCP Port 10000 connections) to the GAU on this device. Selecting "No" will allow the connection through to the router behind the selected interface. Recommended setting is "Yes".

Enter GAU Port: Enter the IP Port number to be used for GAU access when GAU access has been enabled. The port chosen will be redirected locally. Connections on this port number will not reach the device behind the specified Internal Interface. Recommended setting is "10000 - All GAU traffic will be redirected locally to port 10000 automatically. This behavior is built-in and not configurable".

Allow access by SixView Manager? Select "Yes" to allow access (for incoming TCP Port 7785 connections) to trigger the SIXNET router for remote check-in by the SixView Manager server. Selecting "No" will allow the connection through to the device behind the selected interface. Recommended setting is "Yes".

Enter MAC Filter: Enter a valid MAC address using the following format: nn:nn:nn:nn:nn:nn, where nn is a number in hexadecimal form (0-9, a-f, A-F) to enable a MAC filter for use with IP Transparency. A MAC filter allows only packets whose MAC address matches the filter value to be passed thru the Gateway device.

NOTE: Leaving this field empty effectively disables MAC filtering.

Enable Out-Of-Band port re-direct? Select "Yes" to allow an Out-of-Band port to be redirected locally to this router. When enabled, the OOB Ports specified in the **Advanced→Out-of-Band Mgt** section will be automatically allowed. Recommended setting is "Yes" When also configuring Out-of-Band Mgt on this unit.

Enable port re-directing? Select "Yes" to allow redirecting of ports to a router beyond the Gateway device (the one being configured).

Example: A device beyond the Gateway device is running a WEB server on Port 80, but an upstream router is blocking Port 80. Redirecting traffic to another port, say 8080, will allow communication with the server. This would be setup as our External port 8080 redirected to an Internal Port 80, Protocol TCP.

When this feature is enabled, a new field will appear containing a table into which multiple entries can be entered. Each entry will include the External and Internal Port numbers and a traffic type (TCP or UDP).

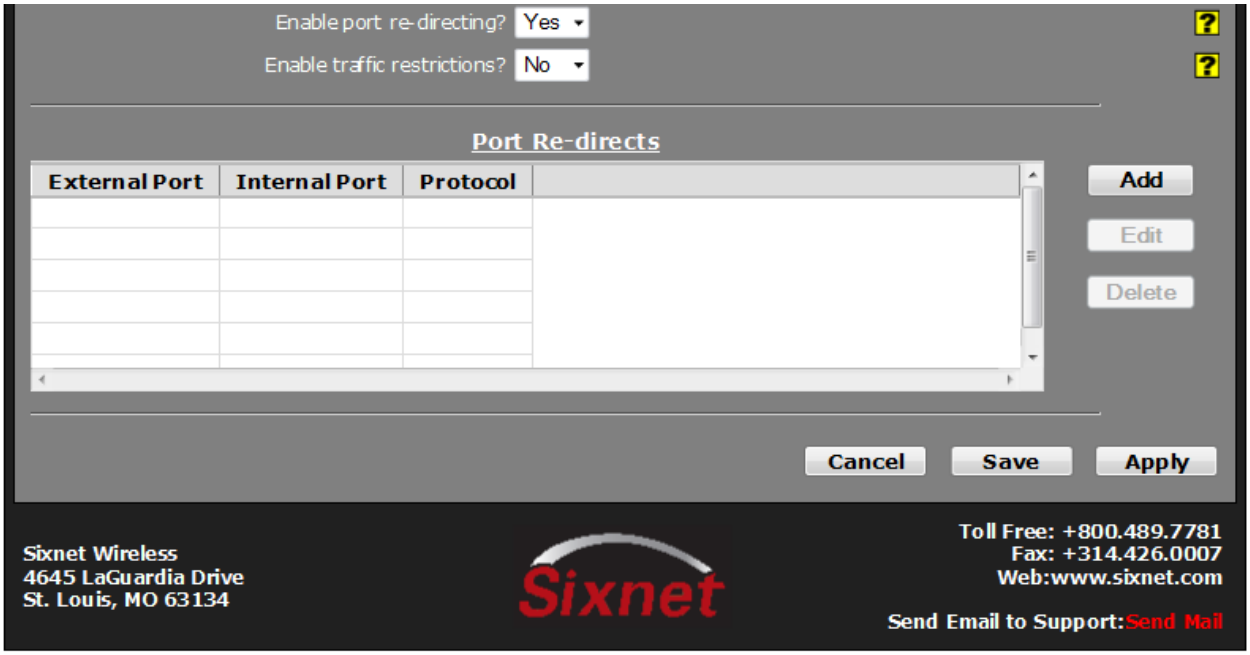

- Click on the "Add" button to add a port re-direction and the following pop-up window will appear:

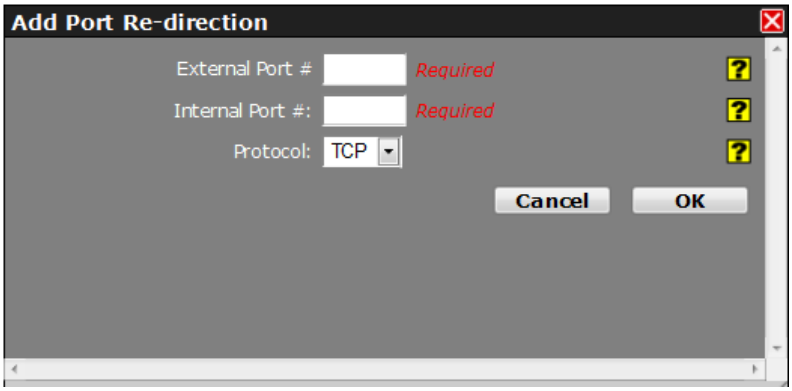

External Port #: Enter the IP Port number to be used as the External Port for redirection. This is the port that incoming connections are **destined** to, on the wireless interface.

Internal Port #: Enter the IP Port number to be used as the Internal Port for redirection. This is the port that incoming connections are **transformed** to, in order to reach a listening process (on this same port) on the device behind the specified Internal Interface.

Protocol: Select either TCP or UDP as the protocol for which to apply the redirection from the drop down list provided.

- Click on the "OK" button to populate the Port Re-directs screen

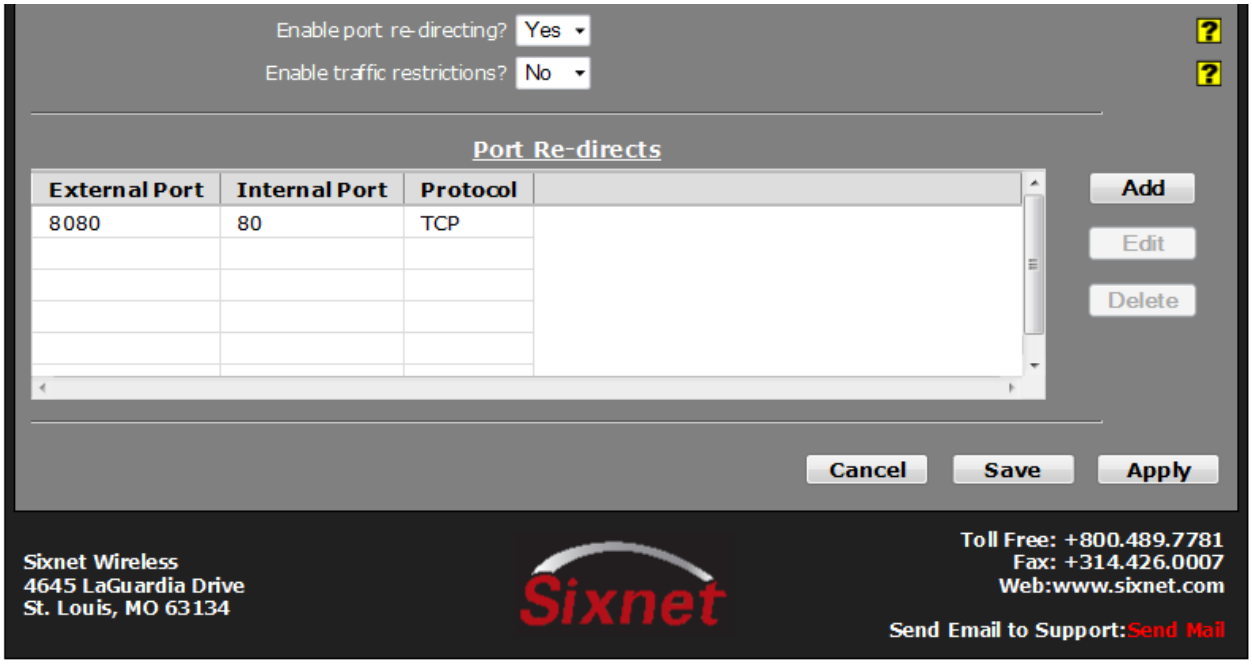

Enable traffic restrictions? Select "Yes" to restrict traffic to a device beyond the Gateway device (the one being configured).

When this feature is enabled, new fields will appear to allow selection of the restriction mode and a table into which multiple entries can be entered. Each entry will specify the network IP address range to which the restrictions will be applied.

Select method of traffic restriction: This field is enabled when Traffic Restrictions have been enabled. Select the restriction mode from the list provided.

None - No filtering is performed.
Only - Allow connections to/from the associated subnet list only. (Inbound and Outbound Restrictions)
In - Allow new incoming connections from the associated subnet list only, but allow any originating outbound connections from the host behind the SIXNET router. (Inbound Restriction)

- Click on the "Add" button to add a subnet restriction and the following pop-up window will appear:

Enter Subnet: Enter subnet range for which to restrict traffic in the CIDR form **nnn.nnn.nnn.nnn/xx**, where **nnn** is the IP Address and **xx** is the subnet in Network Bits format.

- Click on the "OK" button to populate the Traffic Restrictions screen

- Click on the "Save" button and the following pop-up window will appear:

- Click on the "OK" button to acknowledge the content
- Click on the "Apply" button and the following pop-up window will appear:

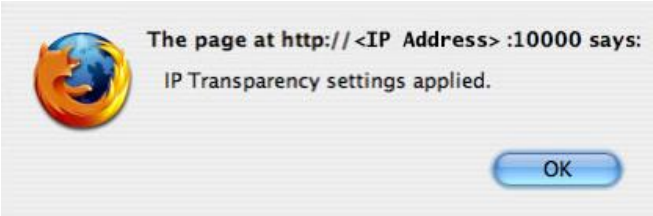

- Click on the "OK" button to acknowledge the content

3.7.3 Out-of-Band Management

Sixnet Cellular Routers in the IndustrialPro and EnterprisePro series support out of band management via the **Advanced** menu.

The "Out-Of-Band Mgt" menu item allows you to configure the capability of remotely administrating a third-party device connected via a serial cable on the Sixnet router.

- **NOTE: Please refer to the third-party device user manual and/or technical support to determine what type of connection is required to connect with the Sixnet router from the RS232 serial port.**

  Click on the "Out-of-Band Mgt" menu item and the following window will appear:

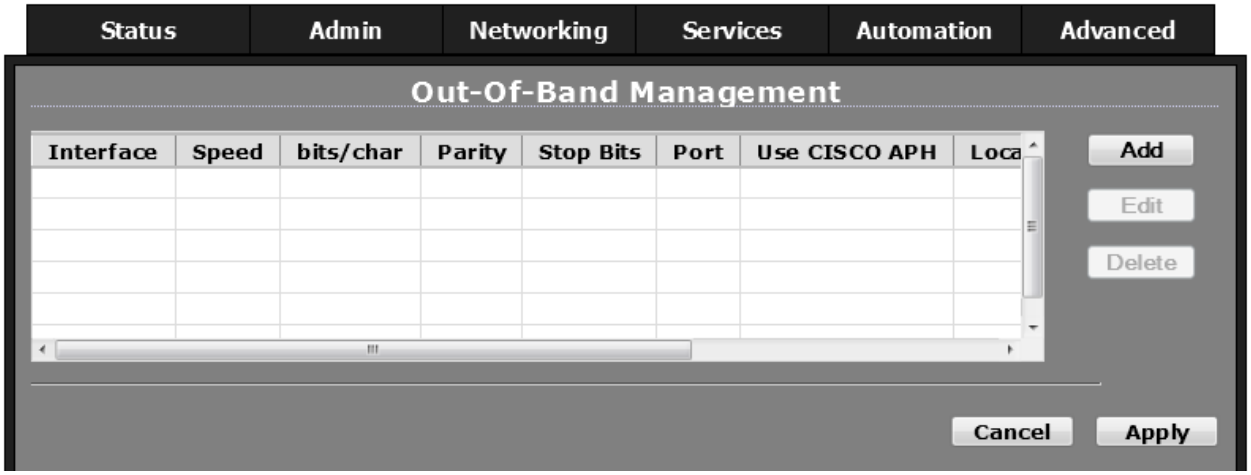

- Click on the "Add" button to add an instance for OOB Management and the following pop-up window will appear:

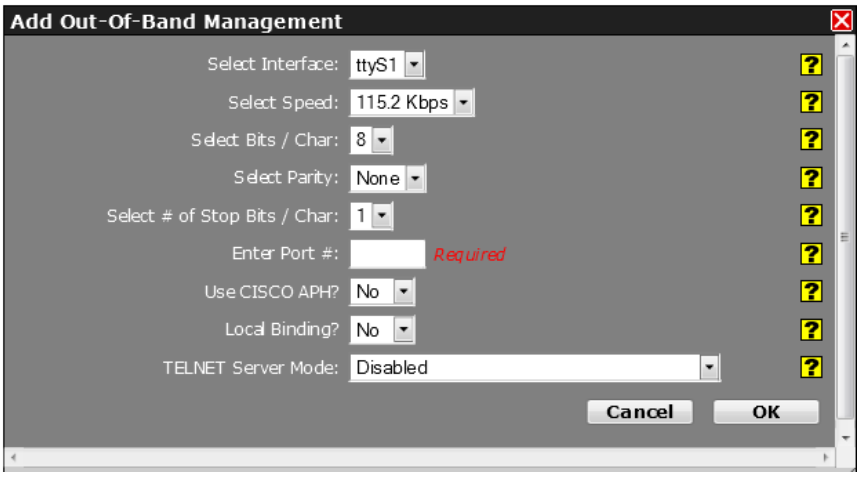

Select Interface: Select the interface to be used via the provided drop-down.
NOTE: For Speed, Bits, Parity, and Stop Bits, consult the configuration of the remote device being attached; this setting must be compatible.

Select Speed: Select the desired interface speed to be used via the provided drop-down.

Select Bits / Char: Select the word length (bits per character) to be used via the provided drop-down.

Select Parity: Select the parity to be used via the provided drop-down.

Select # of Stop Bits / Char: Select the number of stop bits to be used via the provided drop-down.

Enter Port #: Enter a valid port number (1-65535) to be used for the connection. Recommended setting is "Take care to choose a port number not already used by other system services. Consult **Status→Socket Statuses→TCP Only** for a list of ports currently in use. Please note that a Firewall Allow rule will need to be added for remote access (**Networking→Firewall→Service Access Rules**)".

Use CISCO APH? Select "Yes" to enable the CISCO APH, or "No" to prevent its use. Recommended setting is "Yes" When connecting to a Cisco console port.

Local Binding? Select "Yes" to enable Local Binding.

NOTE: Local binding will prevent remote access to this port. You will be required to Telnet/SSH to the unit's command line, and then telnet to the OOB port locally (telnet localhost <OOB_port>).

TELNET Server Mode: This option controls how some options negotiations will be performed with a TELNET client. Recommended setting is "Basic + drop LF & NUL" is a commonly utilized setting.

The following options are available:

- **Disabled -** No TELNET options negotiation is performed.
- **Basic -** Common TELNET options negotiation is performed.
- **Basic + drop LF -** Linefeed characters (x'0A) are dropped.
- **Basic + drop LF & NUL (Cisco Preferred) -** LF and NUL (x'00) characters are dropped.
- **Basic + drop LF & NUL/HIGH -** LF, NUL and any characters > x'7F are dropped.
- **Basic + drop CR -** Carriage return characters (x'0D) are dropped.
- **Basic + drop CR & NUL -** CR and NUL (x'00) characters are dropped.
- **Basic + drop CR & NUL/HIGH -** CR, NUL (x'00) and any characters > x'7F are dropped.

NOTE: Selecting the right value for your particular situation may require some experimentation.

The Basic Telnet Server will enable some telnet negotiation options with common Telnet Clients, which may provide a better user experience. If you are having problems with odd echoed characters, or other interactive problems, please enable this option.

If you are having problems with login not accepting your password, or pressing "Enter" seems to behave as if two Enter keys have been pressed, try one of the "Drop" options.

- Click on the "OK" button to populate the Out-Of-Band Management screen

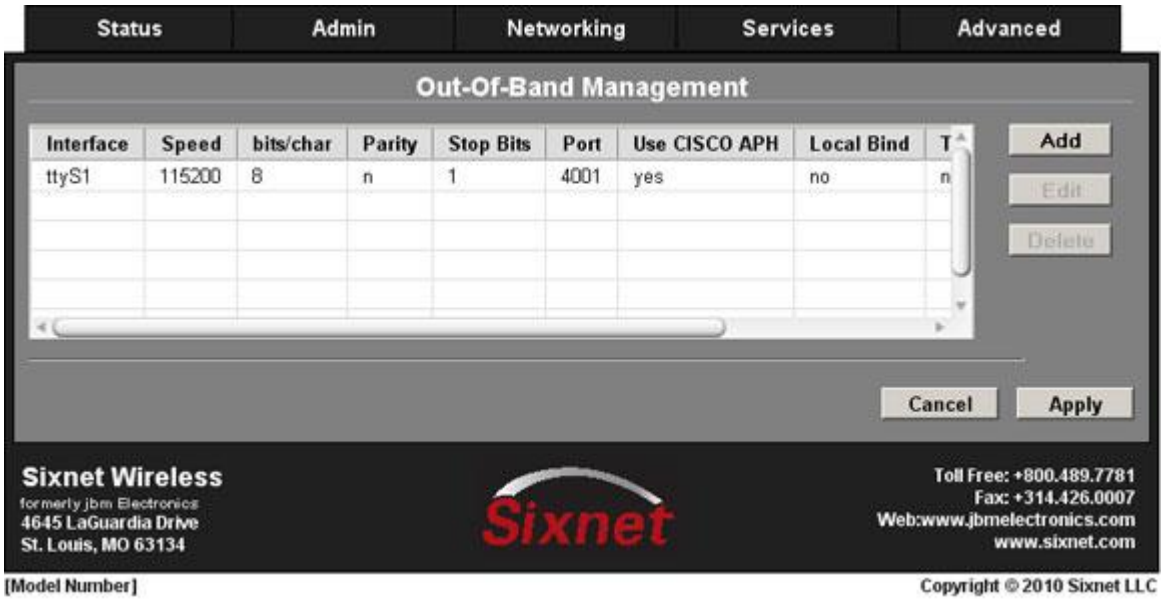

- Click on the “Apply” button and the following pop-up window will appear:

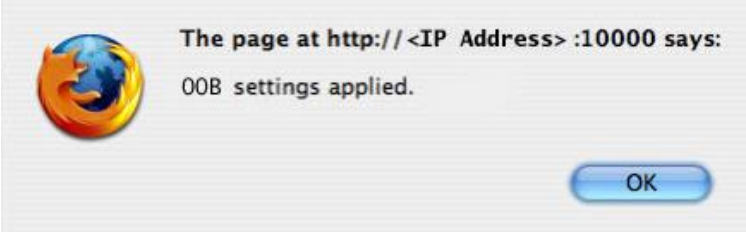

- Click on the “OK” button to acknowledge the content

3.7.4 Virtual Routing Redundancy Protocol (VRRP)

VRRP is supported in Sixnet Routers in the IndustrialPro and EnterprisePro series. To configure VRRP, select the option from the **Advanced** menu.

The "VRRP" menu item allows you to configure the capability of providing redundancy capabilities to each other as well as other third party devices.

- Click on the "VRRP" menu item and the following window will appear:

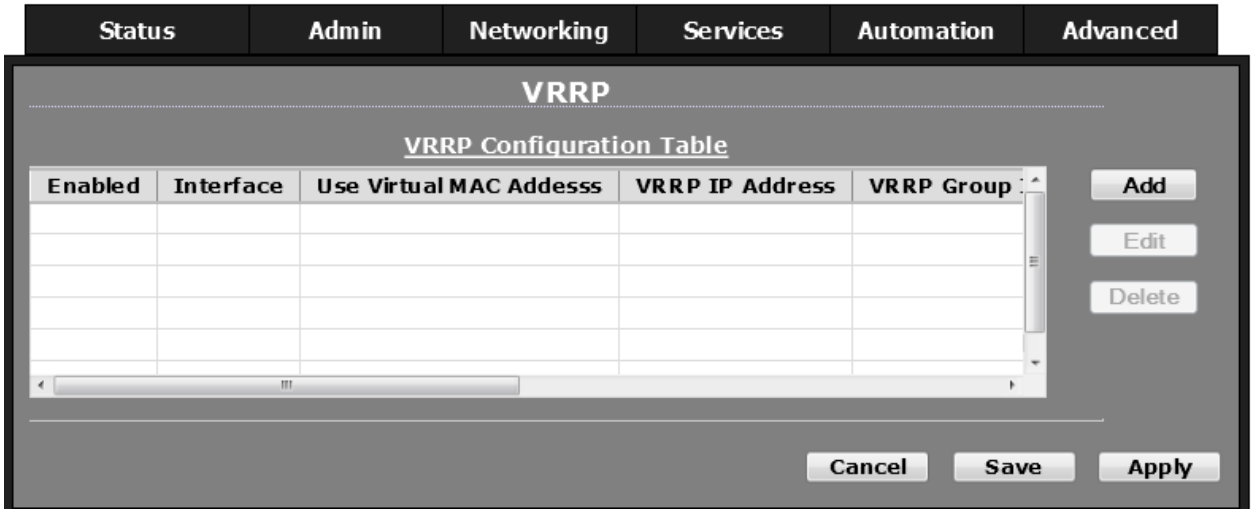

- Click on Add to get the pop up window that allows you to configure the VRRP service.

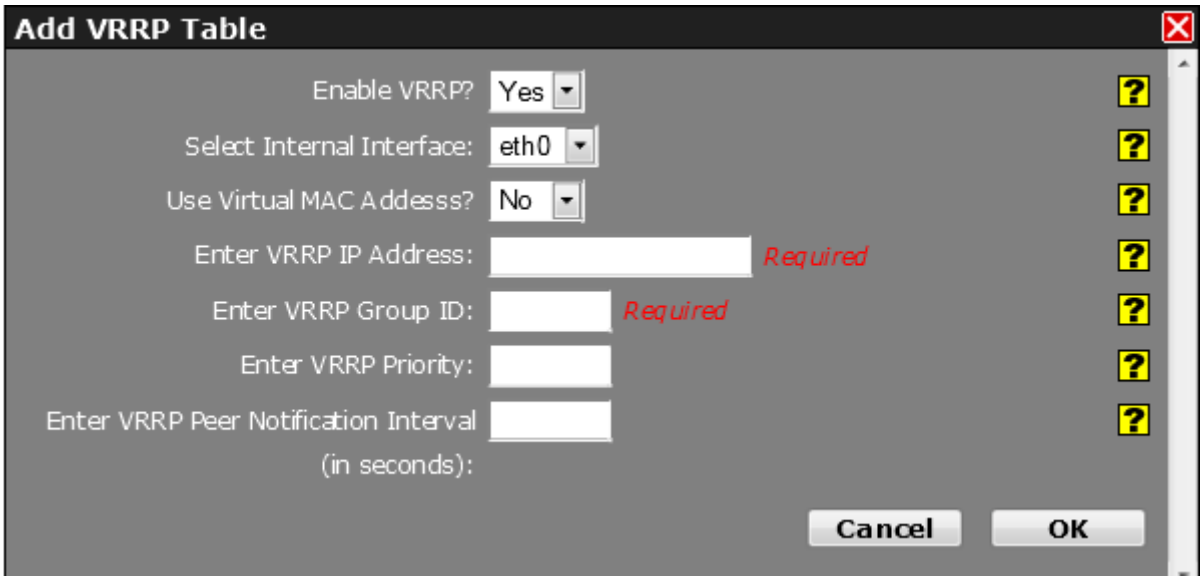

Select Internal Interface: Specify the interface the VRRP service should use for communication.

Use Virtual MAC Address? Specify whether you want to allow the VRRP service to handle virtual MAC addresses. Recommended setting is "Yes".

Enter VRRP IP Address: Specify the IP address of the virtual server.

NOTE: This value must not be currently assigned to any other network interface on the subnet. Furthermore, this value must match in any VRRP partner's configuration for redundancy to operate correctly.

Enter VRRP Group ID: Specify the ID number of the virtual server.

NOTE: This value must match in any VRRP partner's configuration for redundancy to operate correctly. Multiple VRRP Virtual interfaces can operate on the same subnet, so long as each set of redundant partners uses a different ID.

Enter VRRP Priority: Specify the priority to use in VRRP negotiations. Valid values are 1-255. (Required)

NOTE: If the SIXNET router is the "Master" device, the priority should be set higher than the "Backup" device.

Enter VRRP Peer Notification Interval (in seconds): Specify the amount of time, in seconds, between VRRP broadcast packets.

- Click on the "OK" button to populate the VRRP configuration table screen

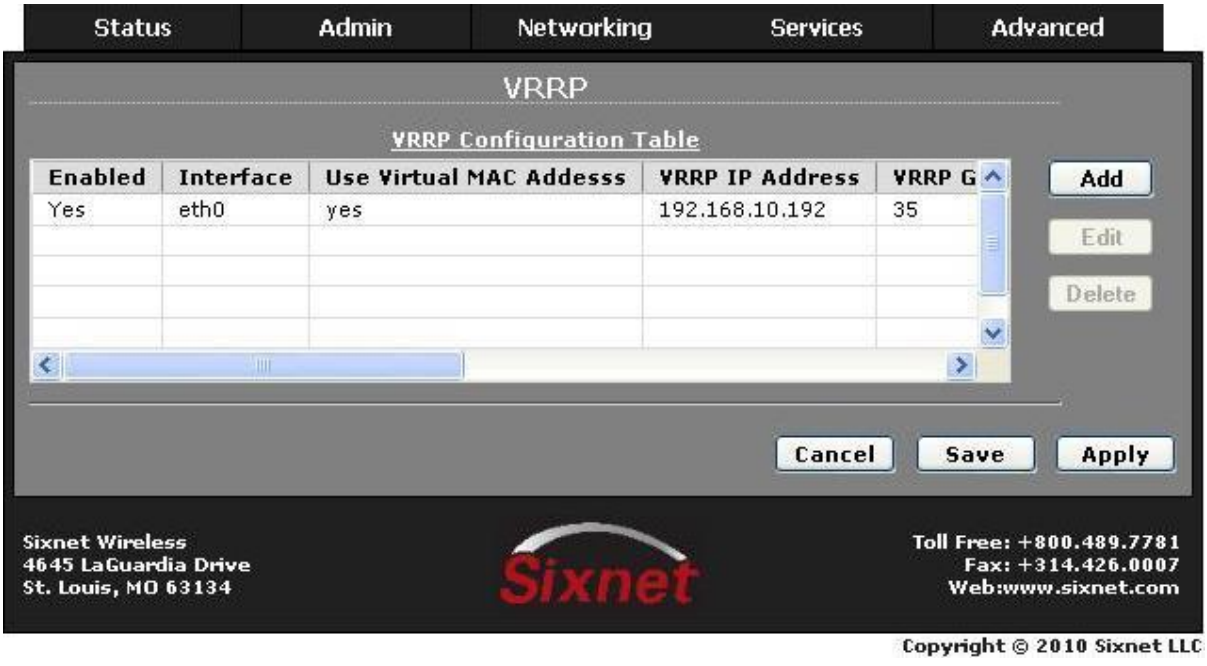

- Click on the "Save" button and the following pop-up window will appear:

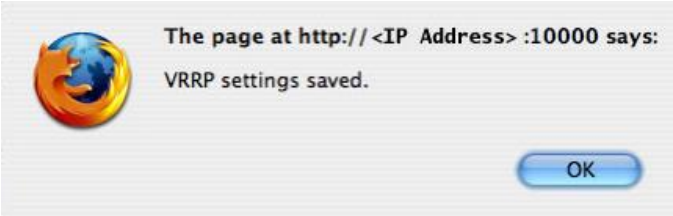

- Click on the "OK" button to acknowledge the content
- Click on the "Apply" button and the following pop-up window will appear:

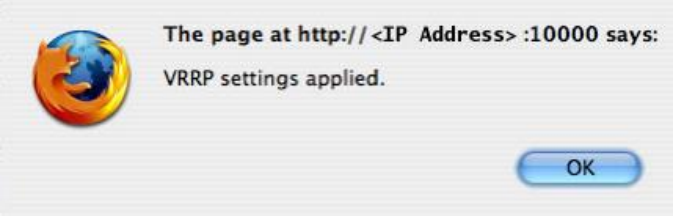

- Click on the "OK" button to acknowledge the content

3.7.5 Expert Mode

The "Expert Mode" menu item allows you to edit the configuration files of a Sixnet IndustrialPro/EnterprisePro router directly. This option provides the ability to perform advanced configuration capabilities for complex configurations.

The Gateway Administration Utility (GAU) is XML-based and writes the configuration to a XML-based configuration file and then generates the necessary system configuration files. Therefore, it is not recommended that you perform configuration activities using this facility unless instructed to do so by Sixnet Technical Support.

WARNING: Should you choose to edit the configuration files directly, we encourage you to contact Sixnet Technical Support. Once you have manually edited a configuration file without the use of the GAU, you should refrain from any further configurations to that subsystem through the GAU, as it will overwrite any changes you may have made.

3.7.5.1 Configure Sub-systems

The "Configure Sub-systems" menu item allows you to edit the main configuration files of the Sixnet router. Again, it is not recommended that you perform configuration activities using this facility unless instructed to do so by Sixnet Technical Support.

- Click on the "Configure Sub-systems" menu item and the following window will appear:

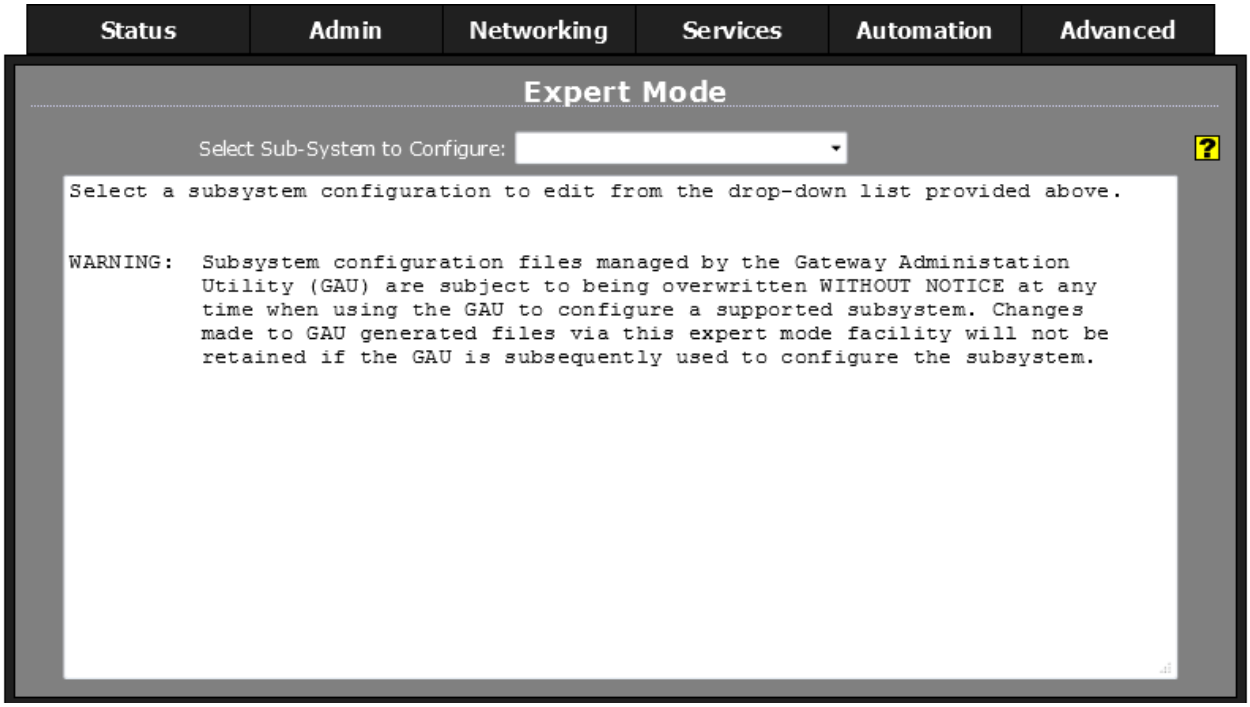
Status
Admin
Networking
Services
Automation
Advanced
Expert Mode
Select Sub-System to Configure:
Select a subsystem configuration to edit from the drop-down list provided above.
WARNING: Subsystem configuration files managed by the Gateway Administation Utility (GAU) are subject to being overwritten WITHOUT NOTICE at any time when using the GAU to configure a supported subsystem. Changes made to GAU generated files via this expert mode facility will not be retained if the GAU is subsequently used to configure the subsystem.

The following is a list of the sub-system files that are available for editing:

BGP Daemon	CHAP Secrets	DHCP Server
DHCP Leases	DHCP Relay(IP Sec)	DHCP Relay
DNS Masquerade	DNP3 Sxdnpdrv Config	Firewall (JBMWall)
Firewall (iptables)	FTP Server	GPS Control
GPS Mode	IP Fallback	IP sysctl
IGMP Proxy Daemon	Interface eth0	Interface eth1
IPRoute2 ematch	IPRoute2 dsfield	IPRoute2 protos
IPRoute2 realms	IPRoute2 scopes	IPRoute2 tables
IPSEC Configuration	IPSEC Secrets	GWLNX Control
Init	Lighttpd Conf	Lighttpd User
Modbus Config	Mrouted (multicast)	Modprobe.conf
NTP Daemon	Out-of-Band	Open VPN (client)
Open VPN (server)	Open VPN Authpass	OSPF Daemon
PAP Secrets	PPP IP-DOWN	PPP IP-UP
PPP Options	PPPoE	PPP-IPSec
PPPDial-IPSec	PPPoE-IPSec	PIM Daemon (Multicast)
Ping Alive Conf 1	Ping Alive Conf 2	RIP Daemon (v2)
SDK	SMCroute Daemon (Multicast)	SNMP Daemon
SN Proxy Daemon	SSH (Client) Configuration	SSH (Server) Configuration
SSL Tunnels (client)	SSL Tunnels (server)	Static Routes
System Logging	System Start-up	VRRP Daemon

VRRP Daemon Instance 2 Wireless Provisioning Zebra
Zyxel Configuration

Your choice will load the given sub-system's configuration file into the text box for editing.

The following controls (buttons) are available:

- **Cancel** - Reload the file in to the text box, removing all unsaved changes.
- **Default** - Load a default file in to the text box for editing. All changes to the default file will be reflected in the "real" (rather than the default) configuration file.
- **Save** - Save the contents of the text box in to the "real" sub-system configuration file.
- **Stop** - Stop the component sub-system service if it is currently running.
- **(Re)Start** - Start the component sub-system service, or re-start it if it is currently running.

3.7.5.2 Predefined Interface Names

The "Predefined Interface Names" menu item allows you to create a named interface for use in applications such as OpenVPN that require a logical interface, i.e. tun0 that the Sixnet router does not know about. Using the Predefined Interface Name will place the name of the interface into the pull-down menus of interface selections to be used by the system.

- Click on the "Predefined Interface Names" menu item and the following window will appear:

- Click on the "Add" button to add a named interface and the following pop-up window will appear:

Enter (logical) Interface Name: Enter the name of the interface to be used for the logical interface. For example: tun0, gre4, ppp100, etc.

- Click on the "OK" button to populate the Predefined (logical) Interface Names screen

- Click on the "Save" button and the following pop-up window will appear:

- Click on the "OK" button to acknowledge the content

3.7.6 GWLNX

3.7.6.1 Serial IP

*See the Serial IP Section under the Services tab (Section 3.5.11 of this user guide covers usage)

3.7.6.2 Connect Table Configuration

The "Connect Table" menu item allows you to configure the communication ports behavior via Serial or Modem using Dialed Number Identification Service (DNIS) method.

- Click on the "**Advanced→Gwlnx→Connect Table Configuration**" menu item and the following window will appear:

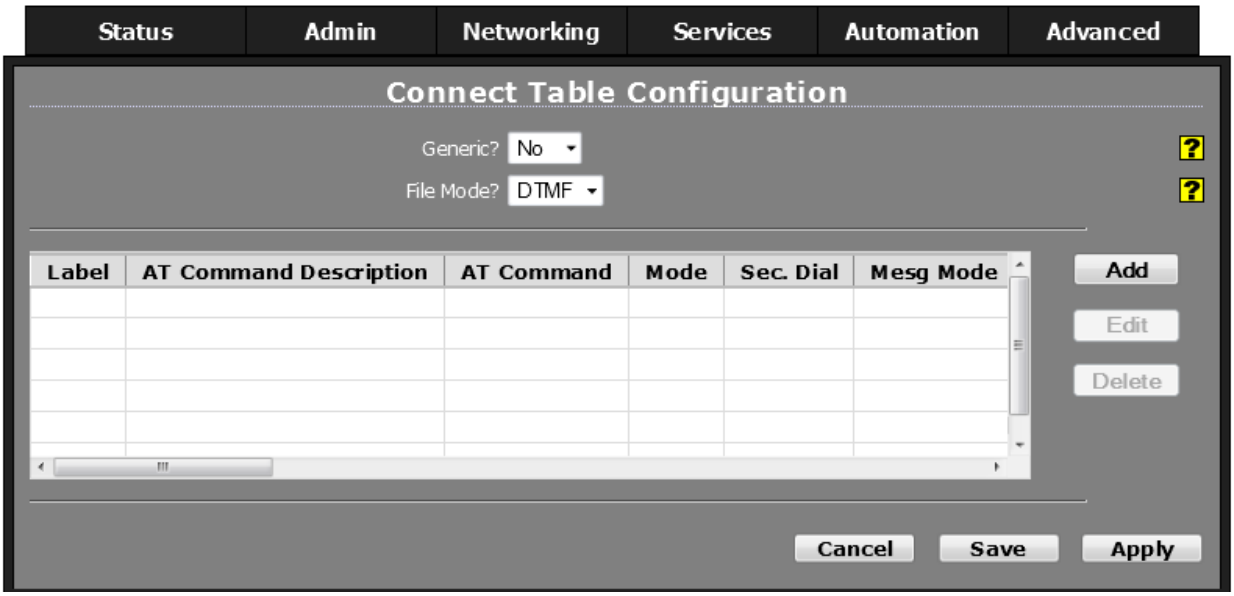

Generic: Please use the recommended setting unless directed to change by Technical Support personnel.

Recommended Setting: No

File Mode: Please use the recommended setting unless directed to change by Technical Support personnel.

Recommended Setting: DTMF

- Click on the "Add" button and the following pop-up window will appear:

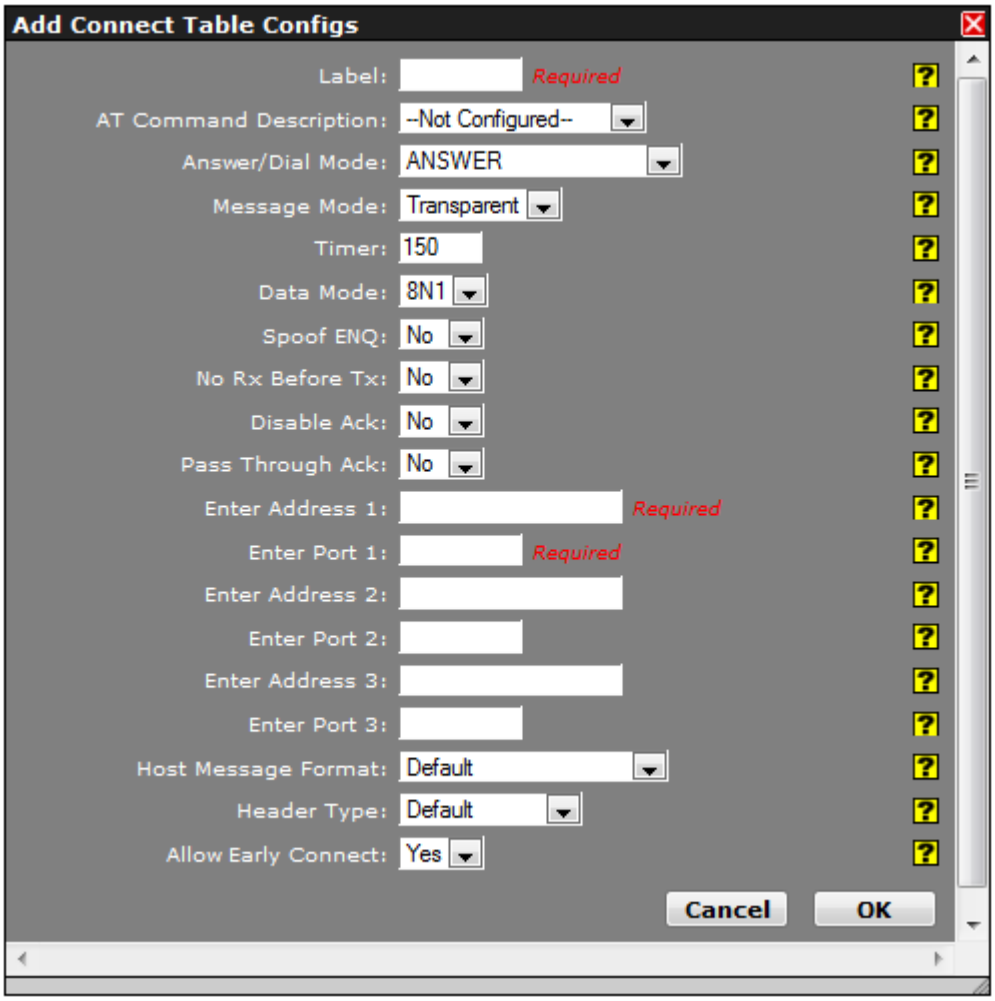

Label: Enter the Lookup Key associated with this entry. This is commonly a phone number, or a portion of a phone number for partial matches of incoming calls. (i.e. "18" will match 1-800-xxx-xxxx, 1-888, 1-866 and similar numbers.)

A value of "**default**" will designate this entry as the option to use if no other entry matches. If no "default" label exists, the first entry in the list will be the default and match any incoming number received.

For a Dial/Ring-Out mode, this field should match the phone number entered in the Com Port Manager configuration for Gwlnx. It should also match the Gwlnx TCP Server port number, if using a dynamic TCP Listening port.

Recommended Setting: 1001 for this mode.

AT Command Description: The best choice is often determined by previous testing with a particular model/brand of connecting device. The first three "Direct" options are the most commonly used. If choosing a User Defined option, enter the full AT command.

AT Command:

Direct 1200 Bell212 = AT&Q6+MS=B212
Direct 1200 V22 = AT&Q6+MS=V22
Direct 2400 V22bis = AT&Q6+MS=V22B
Direct2 1200 Bell212 = AT\N0+MS=B212
Direct2 1200 V22 = AT\N0+MS=V22
Direct2 2400 V22bis = AT\N0+MS=V22B
ErrorC 1200 Bell212 = AT\N3+MS=B212
ErrorC 1200 V22 = AT\N3+MS=V22
ErrorC 2400 V22bis = AT\N3+MS=V22B

Recommended Setting: Direct 1200 Bell212 = AT&Q6+MS=B212

Answer/Dial Mode: For incoming calls, choose "ANSWER_2WAY_RAW". For outbound (Ring Out / Ring Down) mode, choose "DIAL". The other options should only be used if instructed to do so by a support technician.

Recommended Setting: ANSWER_2WAY_RAW

Message Mode: This will choose between enabling the local Visa protocol engine or allowing Passthru/Transparent mode.

Transparent: Allow raw communication between the Dial port and the TCP Connection.

Visa: Enable local Visa I engine. This will process one transaction, and issue an EOT after the transaction response has been sent to the dial device.

Visa2: Enable local Visa II engine. After a transaction is complete, an ENQ will be issued to query the next transaction in sequence. If there is no response to the ENQ, then an EOT is issued.

Recommended Setting: Transparent

Timer: Timer usage in supported Message Mode.

Transparent Mode: This is the inter-character delay (in milliseconds) used on the serial side to determine when a remote device is finished transmitting. A low value may generate a faster response, but can send many TCP packets and 'fragment' the serial data packets. A higher value will collect a larger amount of data into a single TCP packet, and will generally keep packet boundaries more intact.

Visa Mode: Unused

Recommended Setting:

150 - Transactions

10 - Some Streaming Protocols (ATM Management Protocols)

Data Mode: The following data mode is supported.

8N1 - Data will be treated as full 8 bits valid. If the serial device is transmitting 7E1, then 7E1 formatted data will be transmitted to the TCP side.

7E1 - Process Data as if in 7E1 format. If the serial device is transmitting 7E1, then appropriate parity will be stripped/added so that communication on the TCP side will be in 8N1.

Recommended Settings:

Transparent Mode: As needed for various serial devices and TCP hosts.

Visa Mode: Leave this setting at 8N1. Automatic 7E1 detection is used.

Spoof ENQ: ENQ behavior in supported Message Mode.

Transparent Mode: This will enable an ENQ packet to be sent to the serial device to initiate a transaction. Up to 5 ENQ's will be sent while wait

Visa Mode: Unused. The Visa engine will automatically issue ENQ's as needed, according to the Gwlnx config file.

Recommended Setting: No

No Rx Before Tx: Discarding data before transmitting in supported Message Mode.

Transparent Mode: This will discard any data received from the serial side, prior to transmitting some data to the remote serial device. This can be useful to discard initial line noise remnants from modem connections before an ENQ is issued (or other start-data message types from a TCP host).

Visa Mode: Unused. This is automatically enabled in the Visa engine, as it awaits a STX.

Recommended Setting: No

Disable Ack: Acknowledgement behavior in supported Message Mode.

Transparent Mode: Unused.

Visa Mode: Once a message is received from the serial device (ATM/POS) and the LRC is valid, this will disable sending an ACK. Certain ATM/POS devices will fail if sent an ACK, and rather used the response message from the TCP host as an implied ACK. Certain ATM/POS devices require an ACK before receiving the response message from the TCP host.

Recommended Setting: No

Pass Through Ack: Passing Acknowledgement in supported Message Mode.

Transparent Mode: Unused.

Visa Mode: When an ACK is received from an ATM/POS device, pass that up to the host processor.

Recommended Setting: No, unless using a SmartConnect device at the host processing side.

Enter Address 1: For coordination with SSL Connections, use 127.0.0.1.

When using **ANSWER** mode, this is a Client Primary IP address that GWLNX application uses to connect to the Host Processing Server.

When using **DIAL** mode, this field is not used.

Enter Port 1: This is a Client Primary Port address that GWLNX uses to connect to the Host Server Port.

For coordination with SSL Connections, this field should match the "TCP Listening Port" configured in Services→SSL Connections→SSL Client, to reach the specified remote SSL Host Server.

When using **DIAL** mode, and Gwlnx is configured for Dynamic TCP Server Listener Port, this field will specify the TCP Port to listen on.

Recommended Setting: Recommended value for this mode is 1000.

Enter Address 2: This is a Client First Alternative IP address that GWLNX uses to connect to the Host Server. (Not Required)

Enter Port 2: This is a Client First Alternative Port address that GWLNX uses to connect to the Host Server Port. (Not Required)

Enter Address 2: This is a Client Second Alternative IP address that GWLNX uses to connect to the Host Server. (Not Required)

Enter Port 2: This is a Client Second Alternative Port address that GWLNX uses to connect to the Host Server Port. (Not Required)

Host Message Format: Following are the host message format in supported Message Mode.

Transparent Mode: Unused.

Visa Mode: This describes the format expected by the TCP host processor of Visa transactions.

Visa Messages from the ATM/POS device will conform to:

STX - Payload - ETX - LRC

After Visa processing and validation, the format sent to the host will be:

Default: Use the current settings in the Gwlnx configuration.

Payload Only: Strip Visa header/trailers. Send only the Payload.

Payload-ETX: Strip the Visa header and LRC block check.

STX-Payload-ETX: Strip only the LRC block check.

STX-Payload-ETX-LRC: Send the fully formatted Visa message.

Recommended Setting: Default

Header Type: The TCP connection to a host may require length headers. This will optionally be prepended to the data received from the serial side, for either Transparent or Visa Mode.

Default: Use current Gwlnx configuration

None: Use no headers

JBM Standard: Use JBM Standard Headers. This will prepend a Two Byte Length (2BL) Header to the data, indicating the number of bytes in the message, not including the header bytes. Messages from the host must also have the 2BL header to be received properly.

Example: With Host Message Format set to STX-Payload-ETX, and JBMSTD Headers used, the TCP message sent to the Host will be:

XX XX STX Payload ETX

Where XX XX would be the length of the payload data, plus 2 (STX and ETX bytes). If Payload was 296 bytes, then the 2BL would be 01 2A (in Hex).

Recommended Setting: Default

Allow Early Connect: Only adjust this option if directed by a support technician.

Recommended Setting: Yes

- Click on the “Apply” button and the following pop-up window will appear:

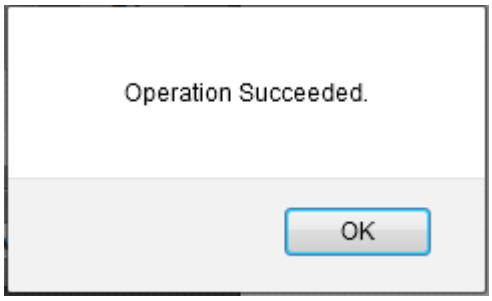

- Click on the "OK" button to acknowledge the content

3.7.6.3 Install Application

The "Install Application" menu item allows you to install the new Gwlnx application on Sixnet IndustrialPro or R-Series router devices.

- Click on the "**Advanced→Gwlnx→Install Application**" menu item and the following window will appear:

Select Gwlnx Application File: Click the **Browse** button to select a 'gwlnx' zip file that is provided by WSBU Development Group Support staff to upload from your local system. (Required)

Recommended Setting

Do not upload new files unless directed by WSBU Development Group Support staff.

- Click on the “Install” button and the following pop-up window will appear:

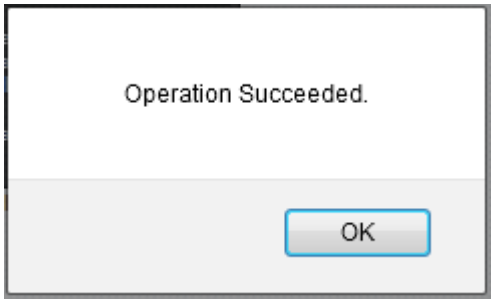

- Click on the “OK” button to acknowledge the content

3.7.6.4 Install Configuration

The “Install Configuration” menu item allows you to install the new Gwlnx configuration on Sixnet IndustrialPro or R-Series router devices.

- Click on the “**Advanced→Gwlnx→Install Configuration**” menu item and the following window will appear:

Select Gwlnx Configuration File: Click the **Browse** button to select a 'gwlnx' configuration file that is provided by WSBU Development Group Support staff to upload from your local system. (Required)

Recommended Setting

Do not upload new configuration files unless directed by WSBU Development Group Support staff.

- Click on the “Install” button and the following pop-up window will appear:

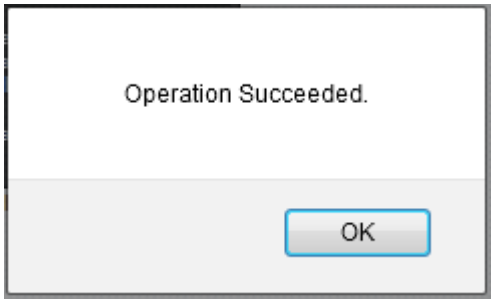

- Click on the “OK” button to acknowledge the content

3.7.6.5 Manage Configuratons

The “Manage Configurations” menu item allows you to install or delete Gwlnx configuration files that already reside on Sixnet IndustrialPro or R-Series router devices.

- Click on the “**Advanced→Gwlnx→Manage Configurations**” menu item and the following window will appear:

Select Gwlnx Configuration File: Select a 'gwlnx' configuration file on the remote unit to install or to delete. (Required)

Warning:
Deleting the “unit.cfg” or “unit.xml” file may result the 'gwlnx' application from not running on the next restart.
Recommended Setting

Do not install or delete files unless directed by WSBU Development Group Support staff.

- Click on the “Install” or “Delete” button and one of the following pop-up window will appear:

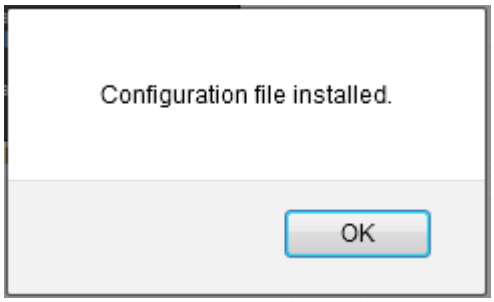

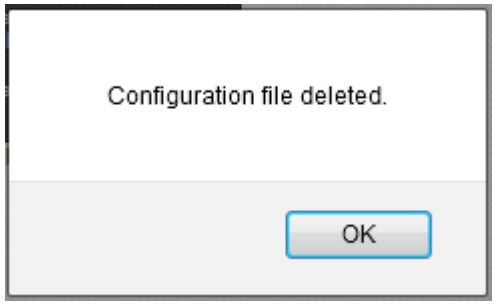

- Click on the “OK” button to acknowledge the content

3.7.6.6 IP Destination

The "IP Destination" menu item allows you to configure the host processor (Server) IP/Port addresses that Gwlnx application uses for TCP/IP communication protocol.

- Click on the "**Advanced→Gwlnx→IP Destination**" menu item and the following window will appear:

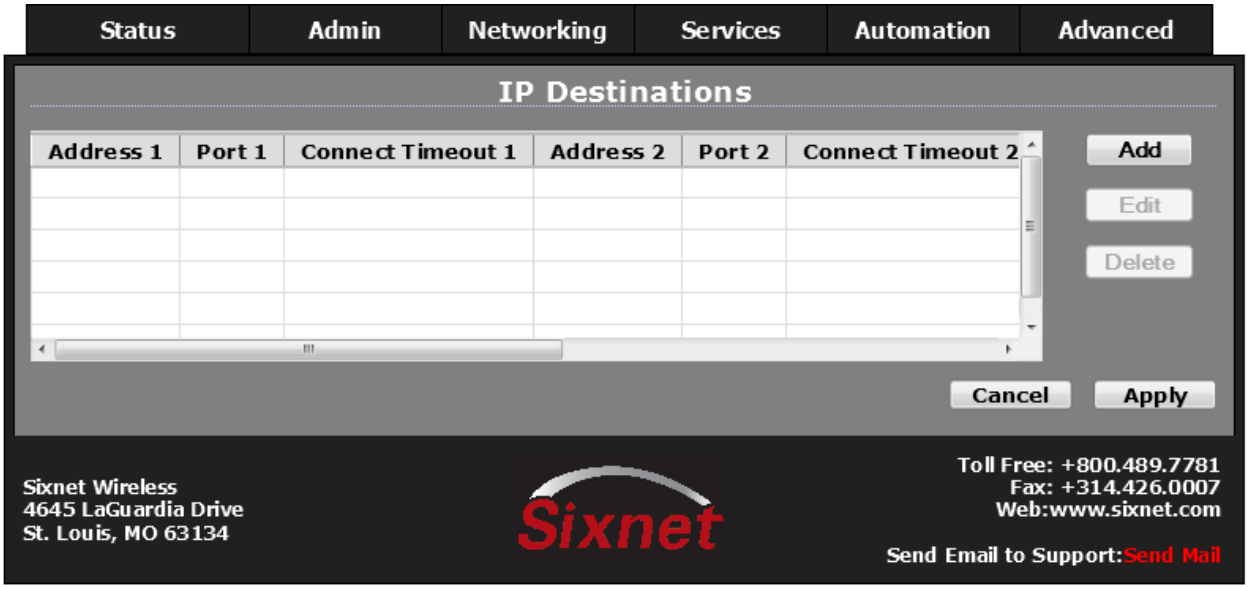

Address 1: Enter the client primary IP address that GWLNX uses to connect to the host server. (Required)

Port 1: Enter the client primary port address that GWLNX uses to connect to the Host server port. (Required)

Connect Timeout 1 - Specify the time in seconds to attempt a connection to this TCP destination, before declaring it unreachable. After the specified time, the next destination will be attempted.

Valid range is 2-250 seconds.

Recommended Setting

10 seconds. A value less than 10 seconds is not recommended for a wireless environment.

Address 2: Enter the client first alternative IP address that GWLNX uses to connect to the host server. (Required)

Port 2: Enter the client first alternative port address that GWLNX uses to connect to the host server port. (Required)

Connect Timeout 2 - Specify the time in seconds to attempt a connection to this TCP destination, before declaring it unreachable. After the specified time, the next destination will be attempted.

Valid range is 2-250 seconds.

Recommended Setting

10 seconds. A value less than 10 seconds is not recommended for a wireless environment.

Address 3: Enter the client first alternative IP address that GWLNX uses to connect to the host server. (Required)

Port 3: Enter the client first alternative port address that GWLNX uses to connect to the host server port. (Required)

Connect Timeout 3 - Specify the time in seconds to attempt a connection to this TCP destination, before declaring it unreachable. After the specified time, the next destination will be attempted.

Valid range is 2-250 seconds.

Recommended Setting

10 seconds. A value less than 10 seconds is not recommended for a wireless environment.

- Click on the “Apply” button and the following pop-up window will appear:

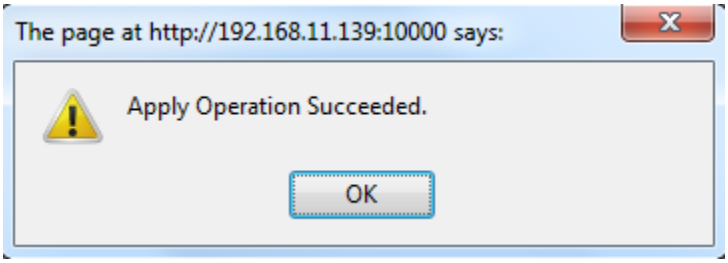

- Click on the “OK” button to acknowledge the content

3.7.6.7 CLI Status

The "CLI Status" menu item allows you to view the status of the ports defined in Gwlnx configuration file if the Gwlnx application is running.

- Click on the "**Advanced→Gwlnx→CLI Status**" menu item and the following window will appear:

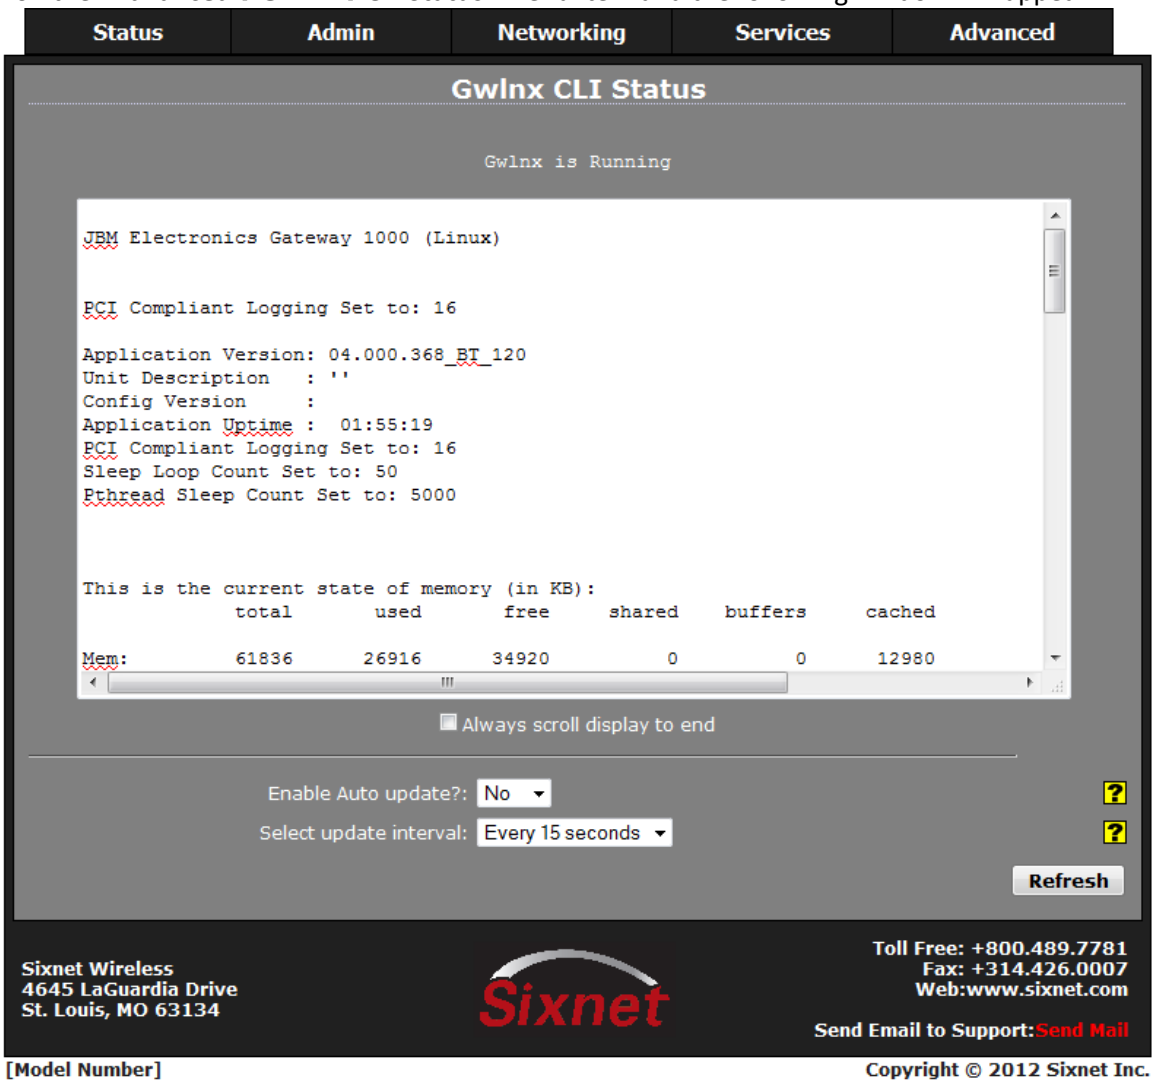

Enable Auto update?: Select **Yes** to enable automatic updating of the CLI status file. The update interval can be selected using the **Select Update Interval** provided immediately below this control. Manual updating (**Refresh**) is disabled while auto update is in effect.

Recommended Setting

Be advised that when connected via a Cellular interface, the log file data collected will count towards your total data plan usage.

Select update interval: Select the update interval to be used when auto update is enabled from provided drop down list.

Choices (in seconds) include:

- 5
- 15
- 30
- 60

Recommended Setting

Be advised that when connected via a cellular interface, the log file data collected will count towards your total data plan usage.

3.7.6.8 GWLNX Status

The "Gwlnx Status" menu item allows you to view the Gwlnx process ID and ability to restart the application by selecting the process ID from the provided drop down list. The **Refresh** button will refresh the process ID, if the Gwlnx application has been restarted.

- Click on the "**Advanced→Gwlnx→Gwlnx Status**" menu item and the following window will appear:

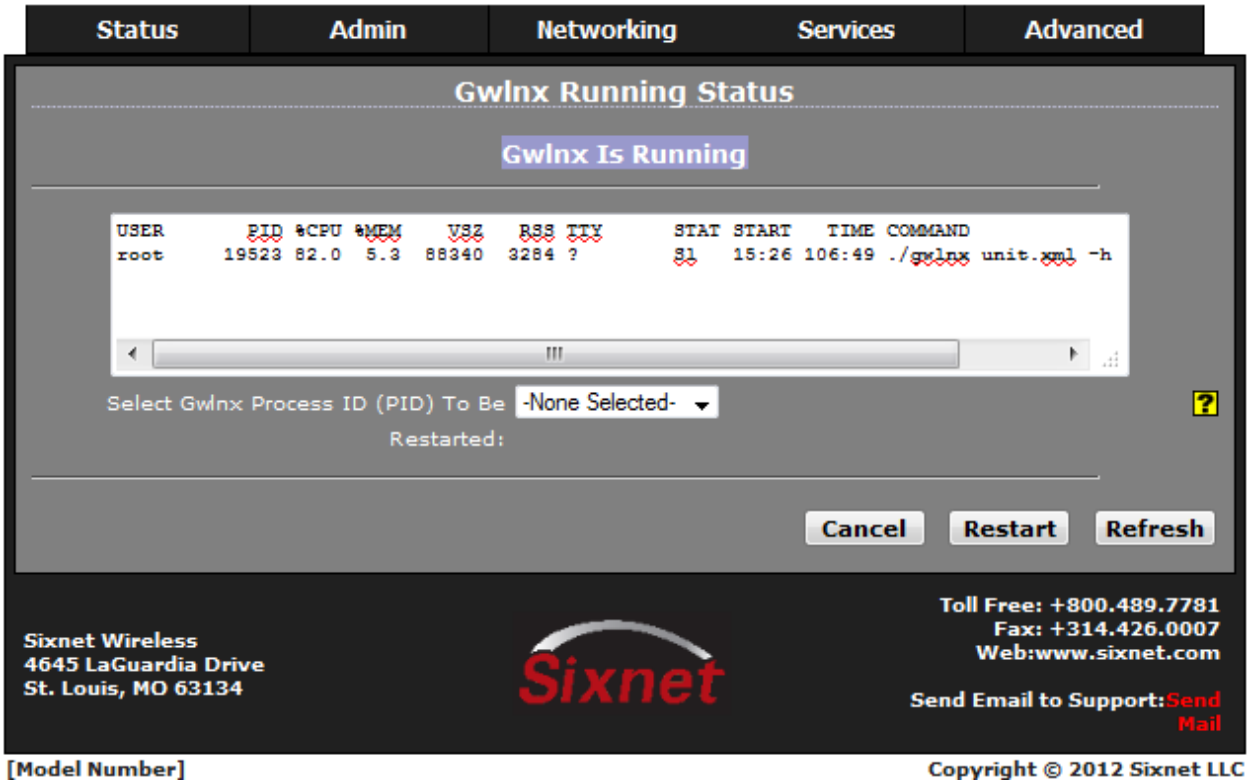

- Click on the "Restart" button and the following pop-up window will appear:

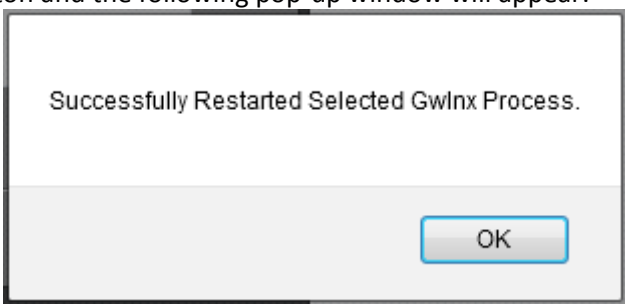

- Click on the "OK" button to acknowledge the content

3.7.6.9 GWLNX Logfile

The "Gwlnx Logfile" menu item allows you to view the logfile generated by Gwlnx at startup which provides the state of each port controller defined in the Gwlnx configuration file and logs the Send/Receive traffics for each configured port controller.

- Click on the "**Advanced→Gwlnx→Gwlnx Logfile**" menu item and the following window will appear:

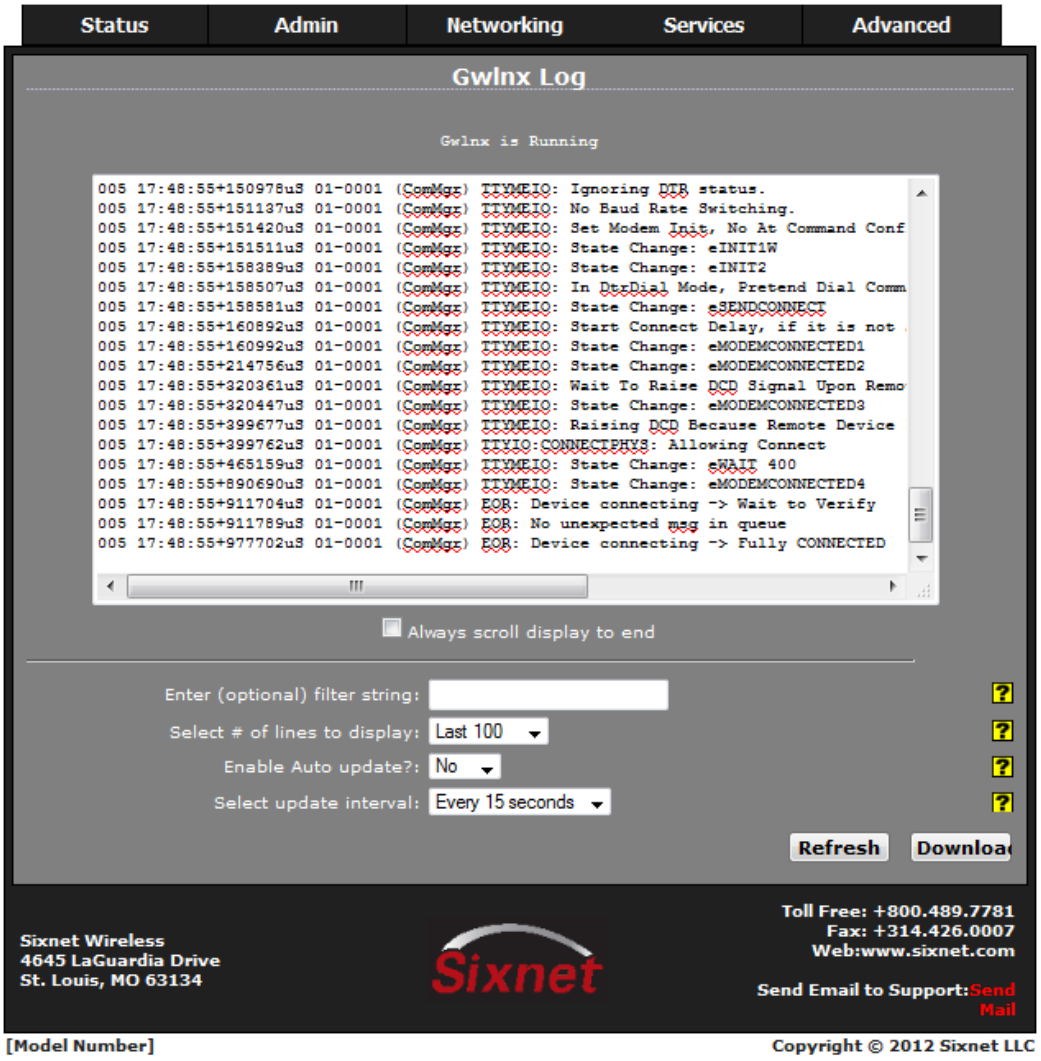
Status
Admin
Networking
Services
Advanced
Gwlnx Log
Gwlnx is Running
005 17:48:55+150978u8 01-0001 (ComMgr) TTYMEIO: Ignoring DTR status.
005 17:48:55+151137u8 01-0001 (ComMgr) TTYMEIO: No Baud Rate Switching.
005 17:48:55+151420u8 01-0001 (ComMgr) TTYMEIO: Set Modem Init, No At Command Conf
005 17:48:55+151511u8 01-0001 (ComMgr) TTYMEIO: State Change: eINIT1W
005 17:48:55+158389u8 01-0001 (ComMgr) TTYMEIO: State Change: eINIT2
005 17:48:55+158507u8 01-0001 (ComMgr) TTYMEIO: In DtrDial Mode, Pretend Dial Comm
005 17:48:55+158581u8 01-0001 (ComMgr) TTYMEIO: State Change: eSENDCONNECT
005 17:48:55+160892u8 01-0001 (ComMgr) TTYMEIO: Start Connect Delay, if it is not
005 17:48:55+160992u8 01-0001 (ComMgr) TTYMEIO: State Change: eMODEMCONNECTED1
005 17:48:55+214756u8 01-0001 (ComMgr) TTYMEIO: State Change: eMODEMCONNECTED2
005 17:48:55+320361u8 01-0001 (ComMgr) TTYMEIO: Wait To Raise DCD Signal Upon Remo
005 17:48:55+320447u8 01-0001 (ComMgr) TTYMEIO: State Change: eMODEMCONNECTED3
005 17:48:55+399677u8 01-0001 (ComMgr) TTYMEIO: Raising DCD Because Remote Device
005 17:48:55+399762u8 01-0001 (ComMgr) TTYIO:CONNECTPHYS: Allowing Connect
005 17:48:55+465159u8 01-0001 (ComMgr) TTYMEIO: State Change: eWAIT 400
005 17:48:55+890690u8 01-0001 (ComMgr) TTYMEIO: State Change: eMODEMCONNECTED4
005 17:48:55+911704u8 01-0001 (ComMgr) EOR: Device connecting -> Wait to Verify
005 17:48:55+911789u8 01-0001 (ComMgr) EOR: No unexpected msg in queue
005 17:48:55+977702u8 01-0001 (ComMgr) EOR: Device connecting -> Fully CONNECTED
Always scroll display to end
Enter (optional) filter string:
Select # of lines to display:
Last 100
Enable Auto update?:
No
Select update interval:
Every 15 seconds
Refresh
Downloa
Sixnet Wireless
4645 LaGuardia Drive
St. Louis, MO 63134
Sixnet
Toll Free: +800.489.7781
Fax: +314.426.0007
Web:www.sixnet.com
Send Email to Support:Send Mail
[Model Number]
Copyright © 2012 Sixnet LLC

Enter (optional) filter string: Enter a filter string in the space provided, only lines containing the filter value(s) will be displayed via a “grep” style filter mechanism.
Note that the filter is case sensitive.

Select # of lines to display: Select the number of lines to be displayed from one of the choices in the drop-down list provided.

Choices include:

- 50
- 100
- 250
- 500
- 1000
- 2000

Recommended Setting

Be advised that when connected via a Cellular interface, the log file data collected will count towards your total data plan usage.

Enable Auto update?: Select **Yes** to enable automatic updating of the log file display, the update interval can be selected using the **Select Update Interval** provided immediately below this control. Manual updating is disabled while auto update is in effect. The current filter and maximum lines to be displayed will be used.

Recommended Setting

Be advised that when connected via a Cellular interface, the log file data collected will count towards your total data plan usage.

Select update interval: Select the update interval to be used when auto update is enabled from provided drop down list.

Choices (in seconds) include:

- 5
- 15
- 30
- 60

Recommended Setting

Be advised that when connected via a cellular interface, the log file data collected will count towards your total data plan usage.

Download: Click on "**Download**" button to send the entire Gwlnx logfile "logfile.txt" to your PC download directory.

Refresh: Click on "Refresh" button to view the latest items being logged.

3.7.6.10 Transniff Filter

The "Transniff Filter" is only available on the ***R-series Enterprise Routers***. This menu item allows you to set the filter values in similar format as the TCPDUMP filter for capturing traffic being seen by configured device on the Ethernet port. Note: This configuration screen is for devices that capture traffic between the ATM and transaction processing server for DVR text insertion. Please contact WSBU Development Group Support staff for configuring this item.

- Click on the "**Advanced→Gwlnx→Transniff Filter**" menu item and the following window will appear:

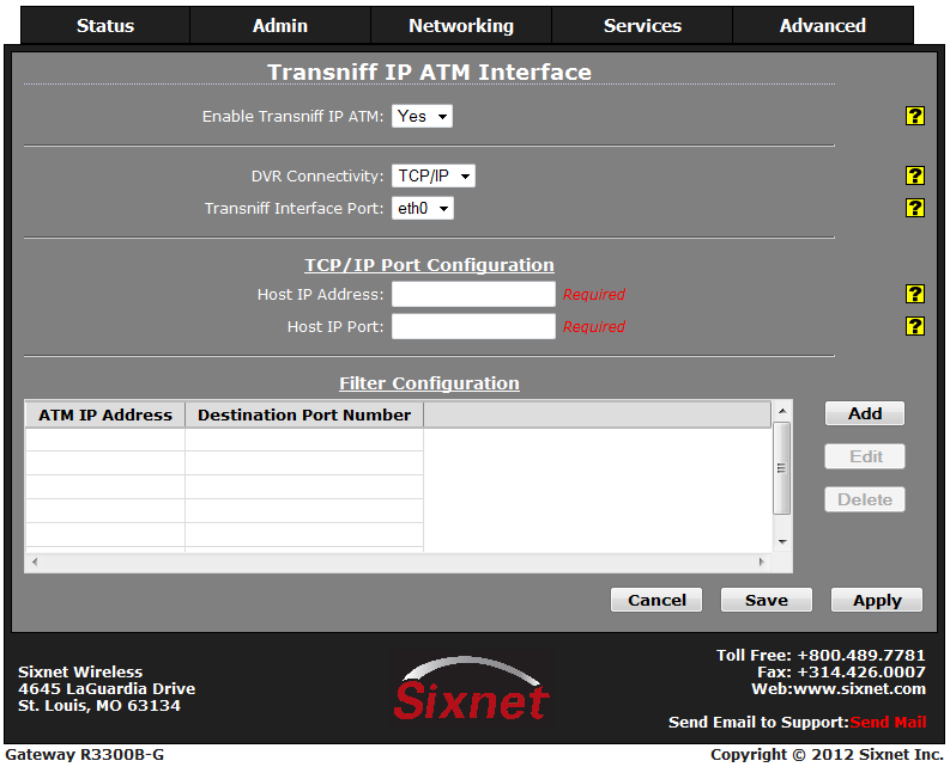

Enable Transniff IP ATM:

Description: Select Yes to enable the Transniff IP ATM Interface.

Recommended Setting: Yes, if you are using this Interface.

DVR Connectivity:

Description: This option allows you to select this device connectivity to your DVR. Select TCP/IP if connecting to DVR via Ethernet port, and select Serial if connecting to DVR via TTYS1 port.

- These settings will need to match the DVR being connected for them to communicate properly.
- If TCP/IP is selected you are required to enter the HOST IP address and HOST port.
- If Serial is selected speed, length, parity and stop bit of the HOST are required.

Transniff Interface Port:

Description: This option allow you to select which Ethernet port to sniff for the ATM Request/Reply transaction packets. Select eth0 if using WAN port and select eth1 if using LAN port.

Recommended Setting: eth0 (Standard port).

Filter Configuration:

This menu item allows you to set the filter values in similar format as the TCPDUMP filter for capturing traffic being seen by configured device on the Ethernet port.

Note: This configuration screen is for devices that capture traffic between the ATM and transaction processing server for DVR text insertion. Please contact WSBU Development Group Support staff for configuring this item.

- Click on the "Add" button and the following pop-up window will appear:

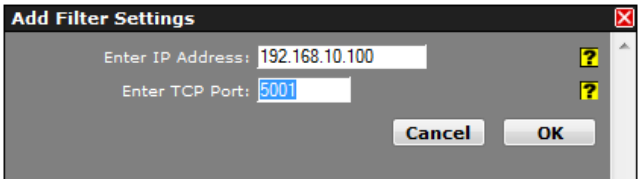

IP Address (ATM): Enter the IP address of the ATM that you would want to sniff from the network traffic. (Not Required)

TCP Port: Enter the destination port address that the ATM connects to for processing transactions which will be used as a filter to sniff network traffic. (Required)

- Click on the "OK" button to populate the Filter Settings screen.
- Click on the "Apply" button and the following pop-up window will appear:

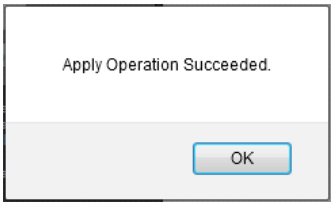

- Click on the "OK" button to acknowledge the content

4 Sixnet Technical Support

If you have followed all of the instructions up to this point and are not having an authentication problem, are convinced that you have sufficient reception, and your router is still not communicating, please contact Sixnet Technical Support at 1-800-432-9908. We will be happy to help you get your Sixnet router up and running.

Power:	**Green - Power Connection Status** *(Power)*	
	ON	Power being received by the JBM router
	OFF	Power not being received by the JBM router
Ethernet Ports:	**Green - Connection Status** *(Link)*	
	ON	JBM router is connected to a network device at 100 Mb
	OFF	JBM router is connected to a network device at 10 Mb
	Yellow - Link & Data Transmit/Receive Activity Status	
	ON - Steady	Ethernet port has a Link established with the network device
	ON-OFF-ON (Flickering)	JBM router is transmitting and receiving data packets
TTYS1 (DTE): *Serial Port*	**Green - Data Receive Activity Status** *(RXD)*	
	ON-OFF-ON (Flickering)	JBM router is receiving data packets
	Green - Data Transmit Activity Status *(TXD)*	
	ON-OFF-ON (Flickering)	JBM router is transmitting data packets

SPECIFICATIONS – R-series Commercial Wireless Router		
Console Port:	Baud Rate:	110-115,200 bps
	Interface:	One Female DB-9, RS-232C DCE
Ethernet Ports:	Mbps:	10/100BaseT
	Interface:	Female RJ-45 connectors
RS-232 Port:	Baud Rate:	110-115,200 bps
(Async)	Interface:	(Optional) One Male DB-9, RS-232C DTE
Operating System:	Linux 2.6 Kernel	
Management:	Console Port:	CLI Access through async connection
	IP Protocol	SNMP, HTTP/S, Telnet, SSH
Power:	12V DC (External) 120 VAC 60Hz or 120-240 VAC 50/60Hz	
Physical:	Size:	7.75” W x 1.5” H x 6.75” L
	Weight:	2 pounds
Processor:	PowerPC RISC	
Memory:	64 MB RAM, 32MB Flash	
Warranty:	1 Year Parts and Labor	

5 Software Licensing Terms and Conditions

Software supplied with each Sixnet product remains the exclusive property of Sixnet. Sixnet grants with each unit a perpetual license to use this software with the express limitation that the software may not be copied or used in any other product for any purpose. It may not be reverse engineered, or used for any other purpose other than in and with the computer hardware sold by Sixnet.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules.
These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.
This equipment generates uses and can radiate radio frequency energy; and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
Operation of this equipment in a residential area is likely to cause harmful interference to radio communications, in which case the user will be required to correct the interference at their own expense.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Information to the User

If this equipment causes interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

In order to meet FCC emissions limits, this equipment must be used only with cables that comply with IEEE 802.3

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions.

The user may find the following booklet prepared by the Federal Communications Commission helpful:
"How to Identify and Resolve Radio-TV Interference Problems".

This booklet is available from:

U.S. Government Printing Office
Washington, DC 20402
Stock No. 004-000-00345-4

Canadian Compliance Statement

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matérial brouilleur du Canada.

6 Warranty

Sixnet provides a limited hardware warranty for the router, which consists of the following:

- This warranty is effective for one year from the delivery date of the router to the purchaser.
- The purchaser is responsible for returning the defective unit to our factory, freight prepaid.
- If the router is under warranty, we will repair it at our cost and return it, freight prepaid, via UPS ground service.
- If the router is not covered by the warranty, we will notify you of the repair charges. We will not repair the router without your permission.
- Repairs are guaranteed for 90 days or the remainder of the warranty, whichever is longer.

Buyer's remedies for breach of warranty shall be limited to repair or replacement subject to adjustment as stated herein, or full or partial adjustment to purchase price.

Sixnet routers are provided with the following warranty:

1. Hardware maintenance and repair is available on a return to factory basis.

2. Configuration assistance is included for the first 60 days after the initial contact to Sixnet Technical support. After this initial period, configuration assistance will continue to be available on a chargeable basis.

3. Software support does not provide for custom code. Custom changes are available as a chargeable option.

4. The warranty only covers items with a serial number. Cables and adapters are not covered.

Extended Warranty Program

Sixnet offers an extended warranty for the router. This program extends the original warranty on a yearly basis. In addition to extending the original warranty, the emergency replacement program is included for the cost of freight only.

The extension must be purchased before the original warranty expires. Please contact Sixnet for further information

Except for the express warranty set forth herein, Sixnet grants no warranties, either express or implied, of merchantability and fitness. The stated express warranty is in lieu of all liabilities or obligations of Sixnet for damages including but not limited to consequential damages occurring out of or in connection with the delivery, use or performance of Sixnet products.

7 Appendices

Appendix A:
Refers to: 3.5.10 SNMP Agent:
JBMELECTRONICS.MIB contents

The following MIBs are cellular specific. It is to be noted that all of the following can be retrieved on the SN firmware version of Sixnet's routers, the A, M, and R Series routers are dependent on the cellular module/aircard installed/inserted into the router. Some manufacturers allow for more information to be retrieved from the module/aircard than others.		
unitDescription	STRING	Router Model Name
unitSerialNumber	STRING	Serial Number of Router
unitFirmwareVersion	STRING	Firmware Version Number of Router
mdn	STRING	Mobile Directory Number, the actual phone number of the device.
minIMEI	STRING	Mobile Indentification Number, the number given to a service plan provided by the carrier. International Mobile Equipment Indentity, number used by the GSM network to indentify valid devices.
nai	STRING	Network Access Indentifier, a standard way of indentifying users who request access to a network.
sipUser	INTEGER	Session Initiation Protocol, used to establish sessions between multiple parties in a location-independent manner. Typically voice sessions.
sid	INTEGER	System ID, a unique 5-digit number assigned to each carrier by the FCC.
nid	INTEGER	Network ID, used to divide SIDs into smaller areas.
prl	INTEGER	Preferred Roaming List, a list of information that resides in the memory of the module/aircard. It lists the radio frequencies the module/aircard can use in various geographic areas. The part of the list for each area is ordered by the bands the module/aircard should try to use first. Therefore it's a kind of priority list for which towers the module/aircard should use. The PRL helps determine which home-network towers to use, and also which towers belonging to other networks to use in roaming situations (areas where the home network has no coverage.) When roaming, the PRL may instruct the module/aircard to use the network with the best roaming rate for the carrier, rather than the one with the strongest signal at the moment. Since a PRL tells the module/aircard "where" to search for a signal, as carrier networks change over time, an updated PRL may be required for a module/aircard to "see" all of the coverage that it should, both with the home network and for roaming.
activated	INTEGER	Determines if the module/aircard is authorized onto the carrier's network. Values are Unknown(-1), No(0), Yes(1).

omaSupported	INTEGER	Open Mobile Alliance for Device Management (OMA DM), designed for management of small mobile devices such as mobile phones, PDAs and palm top computers. The device management is intended to support the following typical uses: Provisioning – Configuration of the device (including first time use), enabling and disabling features Configuration of Device – Allow changes to settings and parameters of the device Software Upgrades – Provide for new software and/or bug fixes to be loaded on the device, including applications and system software. Fault Management – Report errors from the device, query about status of device Values are Unknown(-1), No(0), Yes (1)
currentMipProfile	INTEGER	Mobile IP Profile,
esn	STRING	Electronic Serial Number, is a permanent identification number used to recognize mobile devices accessing particular telecommunications networks. The ESN is assigned and embedded into a wireless communications device by the device's manufacturer.
pesn	STRING	Pseudo ESN, a reserved ESN manufacturer code 128, which allow legacy equipment to recognize MEIDs.
meid	STRING	Mobile Equipment Identifier, 56 bits long, and like ESN's, identify the manufacturer of a mobile device as well as the serial number assigned to the device by that manufacturer.
vendor	STRING	Manufacturer of the module/aircard.
modelName	STRING	The vendor-provided model name of the module/aircard.
fwVersion	STRING	Firmware Version of the module/aircard.
hwVersion	STRING	Hardware Version of the module/aircard.
carrier	STRING	Service provider for cellular network.
lowRssi	INTEGER	Low Speed Received Signal Strength Indication
lowEcio	INTEGER	Ec/Io is a ratio of good to bad energy, representing the cell towers “cleanness” in its signal to you. In other words - signal to noise ratio.
highRssi	INTEGER	High Speed Received Signal Strength Indication
highEcio	INTEGER	Ec/Io is a ratio of good to bad energy, representing the cell towers “cleanness” in its signal to you. In other words - signal to noise ratio.
currentRssi	INTEGER	Current Received Signal Strength Indication
currentEcio	INTEGER	Ec/Io is a ratio of good to bad energy, representing the cell towers “cleanness” in its signal to you. In other words - signal to noise ratio.
svcType	STRING	GSM, which stands for Global System for Mobile communications, reigns as the world’s most widely used cell phone technology. CDMA, or Code Division Multiple Access,uses a “spread-spectrum” technique whereby electromagnetic energy is spread to allow for a signal with a wider bandwidth. This allows multiple people on multiple cell phones to be “multiplexed” over the same channel to share a bandwidth of frequencies.

currentChannel	INTEGER	Channels are used to different frequency range network to operate on the same frequency in the same area that do not interfere with each other.
cdmaType	STRING	None, Analog, Digital - High Data Rate type, normally Digital
hdrType	STRING	Unknown, None, Rev0, RevA - The CDMA/EV-DO sub type
cdmaRoaming	STRING	Home, Roaming, Roaming - unknown. Roaming type indicator insoide or outside the providers home network.
hdrRoaming	STRING	None, Roaming - SIDS Guaranteed, Roaming - SIDS Not Guaranteed. EV-DO Roaming state.
roaming	INTEGER	0, 1. 0 currently not roaming, 1 currently roaming.
currentState	INTEGER	Connecting, Dormant, Connected, Disconnected, Error, CallIncoming. Current Modem State.
speedPref	STRING	Automatic, CDMAonly, EVDOonly. What speed preference the modem is currently set to lock to.
roamPref	STRING	HomeOnly, HomePreferred - AUTO, RoamOnly, Aonly, Bonly, AutoA, AutoB, unknown. The current setting for the modem's network roaming preference.
devName	STRING	The device name as presented by the operating system.
ifName	STRING	The cellular interface name, if known, as presented by the operating system (e.g. ppp0).
txCount	INTEGER	Current Wireless PPP TX byte count since connection has been up, updated every 30 mins
rxCount	INTEGER	Current Wireless PPP RX byte count since connection has been up, updated every 30 mins
gprsState	STRING	The "state" of the GSM connection: idle, ready, standby
rxLevel	STRING	The signal level seen at the receiver measured in -dBm
servingCell	STRING	The Current Cell on which the device is camped.
rrcState	STRING	Radio Resources Control State (also called Packet Data Transfer state): idle, CELL_DCH, CELL_FACH, CELL_PCH, and URA_PCH
gsmChannel	STRING	Indicates which GSM channel or band of frequencies the device is currently connected to.
psState	STRING	Pulls CELLMODEM_PS_STATE from /var/log/wireless.cardstats
mode	STRING	Pulls CELLMODEM_MODE from /var/log/wireless.cardstats
temperature	STRING	Pulls CELLMODEM_TEMPERATURE from /var/log/wireless.cardstats
simContextApn0	STRING	Pulls CELLMODEM_SIM_CONT_APN0 from /var/log/wireless.cardstats
simContextApn1	STRING	Pulls CELLMODEM_SIM_CONT_APN1 from /var/log/wireless.cardstats
simStatus	STRING	Pulls CELLMODEM_SIM_STATUS from /var/log/wireless.cardstats
serviceDomain	STRING	Pulls CELLMODEM_SERVICE_DOMAIN from /var/log/wireless.cardstats
availServiceType	STRING	Pulls CELLMODEM_AVAIL_SERVICE_TYPE from /var/log/wireless.cardstats
wCdmaL1State	STRING	Pulls CELLMODEM_WCDMA_L1_STATE from /var/log/wireless.cardstats
mmccState	STRING	Pulls CELLMODEM_MM_CS_STATE from /var/log/wireless.cardstats
gmmPsState	STRING	Pulls CELLMODEM_GMM_PS_STATE from /var/log/wireless.cardstats
wCdmaChannel	STRING	Pulls CELLMODEM_WCDMA_CHANNEL from /var/log/wireless.cardstats
wCdmaBand	STRING	Pulls CELLMODEM_WCDMA_BAND from /var/log/wireless.cardstats
systemMode	STRING	Pulls CELLMODEM_SYSTEM_MODE from /var/log/wireless.cardstats
powerOnTime	STRING	Pulls CELLMODEM_POWERON_TIME from /var/log/wireless.cardstats
lowSpeedCsq	STRING	Pulls CELLMODEM_LOWSPEED_CSQ from /var/log/wireless.cardstats
highSpeedCsq	STRING	Pulls CELLMODEM_HIGHSPEED_CSQ from /var/log/wireless.cardstats
band	STRING	Pulls CELLMODEM_BAND from /var/log/wireless.cardstats

imei	STRING	Pulls CELLMODEM_IMEI from /var/log/wireless.cardstats
simId	STRING	Pulls CELLMODEM_SIM_ID from /var/log/wireless.cardstats